

SALTER®

SINCE 1760

Crystalstone 5 Piece Pan Set

Instruction Manual

Before First Use

Hand-wash thoroughly.

To precondition the non-stick surface, wipe the inside of the cookware with vegetable oil, heat gently, cool thoroughly and wipe clean with a soft cloth.

Using the Cookware



Suitable for use on gas, electric solid hot plates, halogen, radiant ring and induction hobs.

Not suitable for use in a domestic or microwave oven, for deep fat frying, under a grill, over a naked flame, on an open fire or barbecue.

To avoid scorching the soft-touch coating on the handles, do not place the cookware on hob rings larger than the base size or allow flames to overlap the sides.

If preheating cookware on an induction hob, ensure that the setting is not too high so that potential vibrations do not cause the cookware to move. Any slight movement will stop once the cookware has been filled.

Suitable for use with heat-resistant plastic, silicone, wooden or metal utensils when used under normal conditions. Do not cut food in the cookware, as this will damage the surface. Do not fill the cookware more than two thirds of the capacity. Do not overheat empty cookware. Do not use the cookware over a high heat, as the non-stick coating is only suitable for use with medium heat settings.

Never leave the cookware unattended whilst in use and ensure that the kitchen is well-ventilated.

To increase the longevity of the cookware, it is recommended to use a small amount of oil or fat. Certain foods such as eggs may require a small amount of oil. Ceramic hobs can be scratched when moving the cookware. To minimise damage, lift and place the cookware rather than drag it across the hob surface.

Any screws present on cookware may loosen over time. Using a screwdriver, retighten the screws as necessary. Be cautious with any screws on glass lids as

over-tightening may result in the lid being damaged.

Cleaning the Cookware

Allow to cool thoroughly before moving or cleaning.

Do not pour cold water or liquid into hot cookware.

Although this cookware is dishwasher suitable, it is recommended that it is hand-washed to maintain the finish. Clean the cookware in warm, soapy water with a mild detergent and a soft cloth; do not use harsh or abrasive cleaners or scourers; rinse and dry thoroughly. If using a dishwasher, remove the cookware as soon as the cycle is complete and dry thoroughly.

To remove stubborn stains, use a nonabrasive plastic mesh or pad with warm, soapy water.

Do not leave cookware to soak in water for long periods of time.

Storage

Do not store wet cookware; store in a dry, clean place.

If stacking the cookware, place a layer of paper in-between to avoid scratching or damage.

Caution

Do not allow the handles to overlap adjacent hob rings or the edge of the hob.

Handles of the cookware may become hot during use; always use heat-resistant oven gloves to move it.

Do not allow the cookware to boil dry, as this can cause warping.

Never expose hot cookware to cold water or other liquid.

If the cookware becomes overheated, allow it to cool to room temperature before removing from the hob. Examine the condition and safety of the cookware before using again; if there is any evidence of damage, dispose of it carefully.

Please retain this information for future reference.

If this product proves unsatisfactory, or if you have any further queries about this product, please contact your retailer.



Distributed by:

UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester OL9 0DD. UK.

Made in China.

CD031117/MD000000/V1