

# **SALTER<sup>®</sup>**

SINCE 1760



## **2 in 1 Multi Vac**

Lightweight, flexible and versatile cleaning

**SALTER®**

**2 in 1 Multi Vac**

Lightweight, flexible and versatile cleaning

<b>CONTENTS</b>	<b>PAGE</b>
Safety Instructions	3–4
Thermal Cut-out Device	5
Care and Maintenance	5
Getting Started	6
In the Box	6
Features	6
Description of Parts	7
Before First Use	8
Using the 2 in 1 Multi Vac	8
Using the Telescopic Extension Tube	8
Using the Flexible Extension Hose	9
Using the Floor Brush	9
Using the Crevice and Brush Tools	9
Emptying the Dust Container	10
Cleaning the Dust Container and Washable Filter	10–11
Storage	11
Troubleshooting	11–12
Specifications	12

Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped or if there are visible signs of damage.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories other than those supplied with this appliance, as this may cause damage.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or user maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

## **Thermal Cut-out Device**

If the dust container and filters are not cleaned on a regular basis, the vacuum cleaner may overheat, which will cause the thermal cut-out device to activate due to restricted flow of air around the unit. If the vacuum cleaner cuts out, press the power switch to turn it off and unplug it from the mains power supply. Proceed to empty the dust container, clean the washable filter and allow the vacuum cleaner to cool for approx. 1 hour.

## **Care and Maintenance**

Always unplug the vacuum cleaner from the mains power supply before attempting any cleaning or maintenance. Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any harsh or abrasive detergents or cleaning agents to clean any part of the vacuum cleaner.

Clean the washable filter after every removal of the dust container.

To clean the inside of the dust container it is possible to remove the cyclonic cone.

## Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

2 in 1 Multi Vac

Telescopic extension tube

Flexible extension hose

Floor brush

Crevice tool

Brush tool

Instruction manual

## Features

600 W high-efficiency motor

600 ml dust container capacity

Ergonomic and lightweight

Aluminium extension tube

 
Flexi hose

Crevice tool and brush tool

Washable filter

5 m power cord

**Description of Parts**

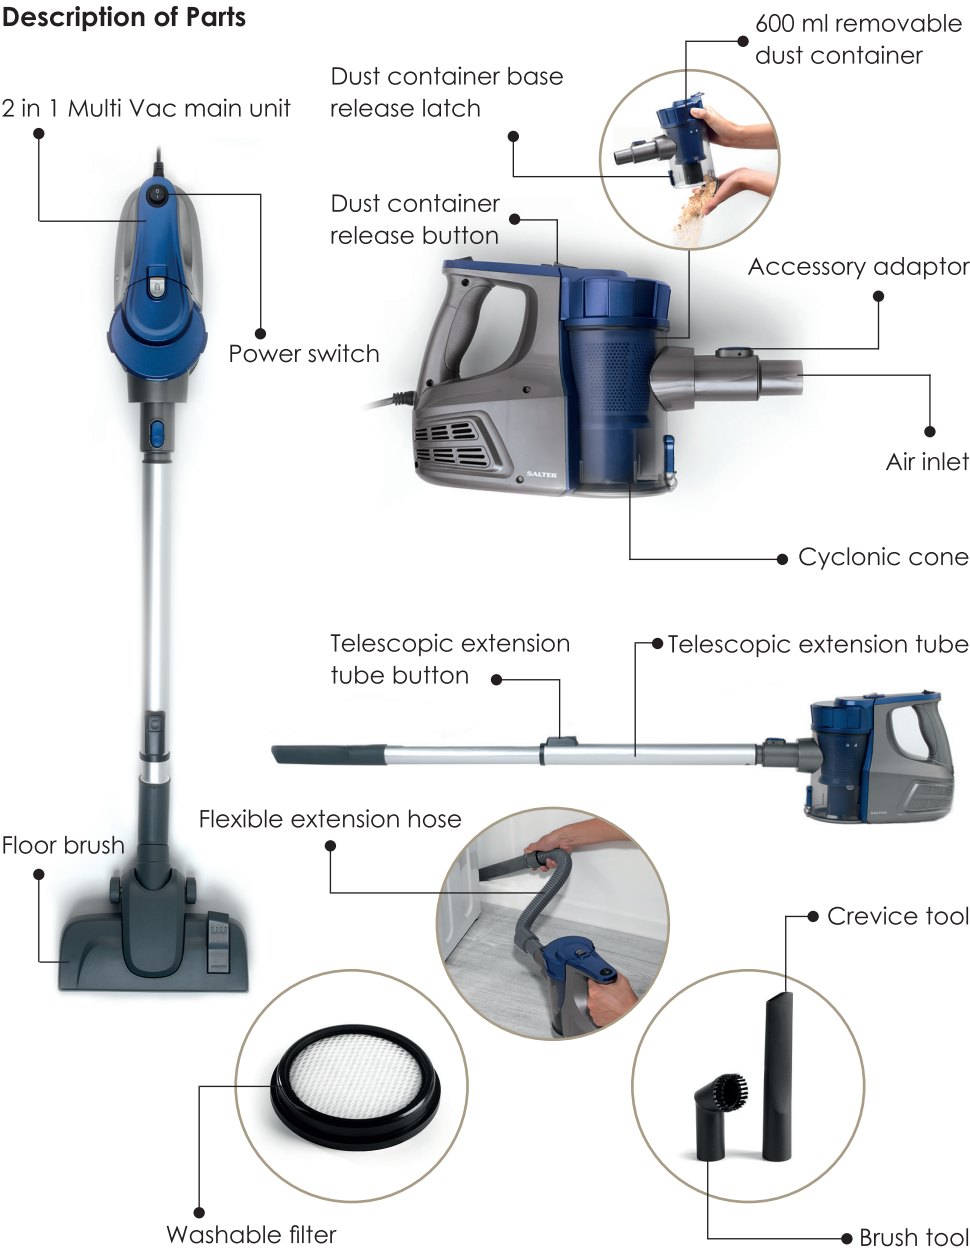

## Instructions for Use

### Before First Use

Before using the vacuum cleaner for the first time, wipe it with a soft, damp cloth and dry thoroughly.

Do not immerse the vacuum cleaner in water or any other liquid.

### Using the 2 in 1 Multi Vac

**STEP 1:** Plug in and switch on the vacuum cleaner at the mains power supply.

**STEP 2:** Turn on the vacuum cleaner by pressing the power switch to the on position. To turn it off, press the power switch to the off position.

**Note:** The vacuum cleaner comes preassembled.

If disassembled due to cleaning, the vacuum cleaner must be switched off and unplugged from the mains power supply before refitting any accessories onto the accessory adaptor. The accessory adaptor is also preassembled, but can be removed by pressing the button and pulling it away from the air inlet. To reattach, push it firmly back onto the air inlet.

**Warning:** Do not use the vacuum cleaner without the washable filter, dust container or cyclonic cone in position. Make sure that the filter and dust container are regularly cleaned to preserve the suction and prolong the life of the vacuum cleaner.

### Using the Telescopic Extension Tube

The floor brush, crevice tool and brush tool fit onto the telescopic extension tube to allow for a more accessible, convenient clean. Before fitting any accessories onto the accessory adaptor, check that the vacuum cleaner is disconnected from the mains power supply.

**STEP 1:** Fit the telescopic extension tube onto the accessory adaptor.

**STEP 2:** Push the chosen attachment onto the end of telescopic extension tube and secure into place.

**STEP 3:** Adjust the telescopic extension tube to the required length by pressing the telescopic extension tube button down and sliding the inner tube in or out.

**STEP 4:** Turn on the vacuum cleaner by pressing the power switch.

## Using the Flexible Extension Hose

The crevice tool and brush tool fit onto the flexible extension hose to allow for a more accessible, convenient clean. Before fitting any accessories onto the accessory adaptor, check that the vacuum cleaner is disconnected from the mains power supply.

**STEP 1:** Fit the flexible extension hose onto the accessory adaptor.

**STEP 2:** Push the chosen attachment onto the end of the flexible extension hose and secure into place.

**STEP 3:** Turn on the vacuum cleaner by pressing the power switch.

## Using the Floor Brush

**STEP 1:** Fit the telescopic extension tube onto the accessory adaptor.

**STEP 2:** Adjust the telescopic extension tube to the required length by pressing the telescopic extension tube button down and sliding the inner tube in or out.

**STEP 3:** Push the floor brush onto the end of the telescopic extension tube and secure into place.

**STEP 4:** Turn on the vacuum cleaner by pressing the power switch.

**STEP 5:** To remove the floor brush, turn off the vacuum cleaner by pressing the power switch and then pull the floor brush firmly away from the end of the chosen attachment.

**Note:** Lower the switch on the floor brush to expose the bristles for use on hard floors. Lift the switch to hide the bristles for use on carpets.

## Using the Crevice and Brush Tools

The crevice and brush tools are ideal for removing dust and dirt from folds in fabrics, radiators, corners, recesses and other places that are hard to reach, as well as for removing dust and dirt from shelves, cupboards and windowsills.

**STEP 1:** Push the chosen attachment onto the end of either the telescopic extension tube, the flexible extension hose or the accessory adaptor.

**STEP 2:** Turn on the vacuum cleaner by pressing the power switch.

**STEP 3:** To remove the chosen attachment, turn off the vacuum cleaner by pressing the power switch and then pull the chosen attachment firmly away from the telescopic extension tube, the flexible extension hose or the accessory adaptor.

## Emptying the Dust Container

Before emptying the dust container, switch off and unplug the vacuum cleaner from the mains power supply. It is recommended to empty the dust container outdoors.

**STEP 1:** Whilst securely holding the vacuum cleaner handheld unit, remove the dust container by pressing the dust container release button and pulling the dust container away from the handheld unit.

**STEP 2:** Holding the dust container over a bin or refuse bag, pull the dust container base release latch to open the base of the dust container. Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere. Shake the dust container gently to dislodge any stubborn dust.

**STEP 3:** To close the dust container, push the base closed until it locks back into position.

**STEP 4:** Replace the dust container by pushing it into the vacuum cleaner handheld unit, aligning the indent on the side of the dust container with the clip on the unit.

**Note:** The cyclonic cone can be removed from the dust container for easier cleaning.

Do not use the vacuum cleaner if the dust container is filled past the max. fill mark, as this could damage the unit or cause injury to the user.

## Cleaning the Dust Container and Washable Filter

The washable filter can only be accessed when the dust container has been removed.

**STEP 1:** Remove and empty the dust container by following the instructions in the section entitled 'Emptying the Dust Container'.

**STEP 2:** Once the dust container is empty, remove the dust container lid by twisting it in an anticlockwise direction, and then lift it away from the dust container.

**STEP 3:** Lift the washable filter from the cyclonic cone.

**STEP 4:** Lift the cyclonic cone out of the dust container and shake.

**STEP 5:** Shake the washable filter until the majority of the dust has been removed, then rinse under clean, warm water and allow to dry naturally.

**STEP 6:** Once the washable filter has fully dried, reinsert it into the cyclonic cone and replace the dust container.

**STEP 7:** Reattach the lid to the dust container by aligning the indent on the side to the 'Unlock' position before twisting it to the 'locked' position.

**Note:** Do not use the vacuum cleaner unless the lid is securely in place.

Do not clean the washable filter using detergents or use external heat sources such as radiators to dry the washable filter.

It is recommended to clean the washable filter every 3 weeks, depending upon use.

**Warning:** Do not reassemble or use the vacuum cleaner until the washable filter is fully dry, as this could cause damage.

### Storage

Check that the vacuum cleaner is cool, clean and dry before storing in a cool, dry place.

### Troubleshooting

Symptom	Possible Cause	Solution
The suction is poor.	The accessory or air inlet is blocked.	Disconnect the accessory and clear the blockage.
	The dust container is almost full.	Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.
	The washable filter is blocked.	Clean the washable filter following the instructions in the section entitled 'Cleaning the Dust Container and Washable Filter'.

The vacuum cleaner has stopped working.	The thermal cut-out device has activated due to restricted air flow, and has cut power to the motor to protect the vacuum cleaner.	Switch off and unplug the vacuum cleaner from the mains power supply. Empty the dust container and clean it following the instructions in the section entitled 'Cleaning the Dust Container and Washable Filter'. Clean the washable filter following the instructions in the section entitled 'Cleaning the Dust Container and Washable Filter'. Allow the vacuum cleaner to cool for approx. 1 hour.
---	--	--

**Specifications**

Product code: SAL0769  
Rated voltage: 220–240 V ~ 50–60Hz  
Rated wattage: 600 W

## Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

**Blue Neutral (N)**

**Brown Live (L)**

**FOR UK USE ONLY** - Plug fitting details  
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

 
The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

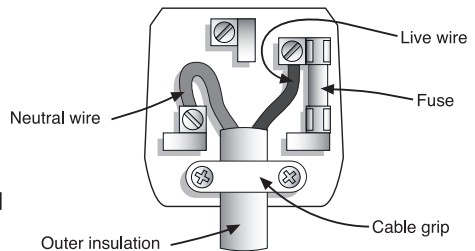

### Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

**Telephone:** 0161 934 2240\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

**Email:** [customercare@upgs.com](mailto:customercare@upgs.com)

**Fax:** 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



3  
YEAR

GUARANTEE\*

\*To be eligible for the extended guarantee,  
go to [www.saltercookshop.com](http://www.saltercookshop.com)  
and register your product within 30 days  
of purchase.



Find us on 

[www.facebook.com/SalterCookshop](http://www.facebook.com/SalterCookshop)



Manufactured by:

UP Global Sourcing UK Ltd.,  
Victoria Street,  
Manchester OL9 0DD. UK.

Made in China.



**SALTER®**

CD180918/MD000000/V1



**GLOBAL SOURCING**  
**THE ULTIMATE WAY**

Manchester  
OL9 0DD  
United Kingdom  
[www.upgs.com](http://www.upgs.com)

 
t: +44 (0) 161 627 1400

f: +44 (0) 161 628 2126

hk: +852 6681 9752

cn: +86 1 3417586804

Artworker:	Ellie Drinkwater
Date:	18/09/2018
Project Name:	EEF184636 CDS SAL0769 IM
Type of Artwork:	Instruction Manual
Size:	A5 12 PP
Software Used:	Indesign CS6
Typefaces:	Century Gothic, PR8 Charade

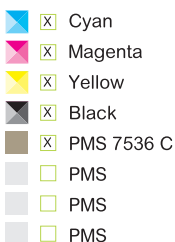

Artwork Version 1

**Artwork Scale 1:1**

©2018 UP Global Sourcing UK Ltd.

All designs, images and artwork are the copyright of Ultimate Products Ltd. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of Ultimate Products Ltd. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE  
ARTWORK REFERENCE ONLY