

SALTER®

SINCE 1760

Hard Floor Cleaner

All-in-one clean
and dry solution



Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Do not remove the adaptor from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the adaptor to recharge non-rechargeable batteries or any other appliance.

Do not use the appliance for anything other than its intended use. Take care when equipping accessories with rotating parts as this could cause entrapment.

Switch off the appliance, disconnect it from the mains power supply and allow to cool fully before changing or fitting accessories and before cleaning or user maintenance.

Use of an extension cord with the appliance is not recommended. Only use the appliance with the power supply unit provided. This appliance should not be operated by means of an external timer or separate remote control system. This appliance is intended for domestic use only. It should not be used for commercial purposes.

Battery Safety

The supply terminals are not to be short-circuited.

In the event of a battery pack leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.

Do not leave a battery pack on prolonged charge when not in use.

Do not use any charger other than that specifically provided for use with the product.

Do not use any cell or battery which is not designed for use with the product.

Keep batteries out of the reach of children.

Do not crush, puncture, dismantle or otherwise the battery pack.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not expose the battery pack to heat or fire as it may explode.

Do not subject the battery pack to mechanical shock.

To dispose of the exhausted battery pack, take it to a local recycling station. Contact the local government offices for further details.

This appliance is fitted with a 22.2 V DC 2200 mAh Li-ion battery (non-removable).

Care and Maintenance


Before attempting any cleaning or maintenance, always switch off and unplug the floor cleaner from the mains power supply. Drain any remaining water from the clean and dirty water tanks. Wipe the floor cleaner main unit with a soft, damp cloth and dry thoroughly.

Do not immerse the floor cleaner main unit in water or any other liquid.

Do not use harsh or abrasive cleaning detergents or scourers.

CAUTION: Take care not to pull the floor cleaner by its handle as this is connected by a cable and could cause damage; only pull the floor cleaner by the main unit.

Description of Parts

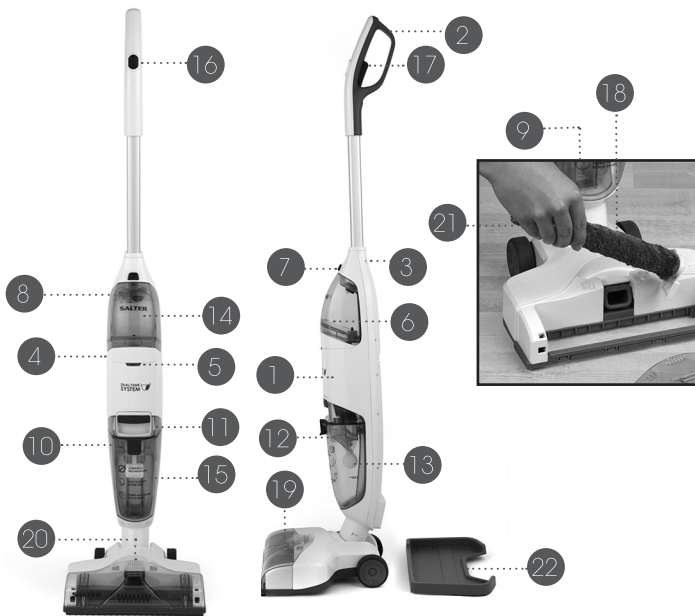

- | | |
|-------------------------------------------------|---------------------------------------------------|
| 1. Hard Floor Cleaner main unit | 12. Dirty water tank lid release clips |
| 2. Handle | 13. Dirty water tank max. fill float |
| 3. Handle locking button/screw | 14. Max. fill mark clean water/
detergent tank |
| 4. Charging port | 15. Max. fill mark dirty water tank |
| 5. Indicator light | 16. Power button |
| 6. Clean water/detergent tank | 17. Water/detergent trigger |
| 7. Clean water/detergent
tank release button | 18. Floor brush bar |
| 8. Clean water/detergent
tank cap | 19. Floor brush cover |
| 9. Dirty water tank | 20. Floor brush cover handle |
| 10. Dirty water tank release catch | 21. Floor brush release tab |
| 11. Dirty water tank lid | 22. Storage tray |

Instructions for Use

Assembling the Hard Floor Cleaner

STEP 1: Stand the floor cleaner upright and push the handle locking button down.

STEP 2: Push the handle into the floor cleaner main unit making sure the power supply cord is not trapped.

STEP 3: Once the handle is pushed into the floor cleaner main unit, use the screw provided to secure the handle into the appliance.

WARNING: When assembling the floor cleaner, make sure that the power supply cord is not trapped in-between the handle and main unit.

Charging the Hard Floor Cleaner

Before first use, the floor cleaner must be charged for approx. 4 hours.

Subsequent charging times will vary dependent upon use. If the battery becomes exhausted during use, it may take up to 3.5 hours to fully recharge it.

STEP 1: Make sure that the floor cleaner is switched off and unplugged from the mains power supply. Empty the clean water/detergent tank and the dirty water tank and check that the floor cleaner is cool, clean, and dry.

STEP 2: Connect the mains power adaptor to the charging port on the main unit and then plug it in to the mains power supply.

STEP 3: The indicator light will flash blue when the floor cleaner is charging and, once fully charged, it will illuminate solid blue.

NOTE: Whilst charging, the floor cleaner may become warm.

Filling the Clean Water/Detergent Tank

STEP 1: Remove the clean water/detergent tank by pressing the clean water/detergent tank release button.

STEP 2: Open the clean water/detergent tank cap and fill with water or dilute detergent using manufacturer's guidelines, checking that the max. fill mark is not exceeded.

STEP 3: Check the clean water/detergent tank cap is secured and then push back into the main unit.

NOTE: Check that the clean water/detergent tank is inserted fully into the floor cleaner.

The clean water/detergent tank can only be inserted into the detergent bottle holder facing in one direction.

CAUTION: Do not attempt to replace the clean water/detergent tank whilst the floor cleaner is turned on. Do not press the spray trigger if the clean water/detergent tank is empty.

WARNING: Do not add disinfectant to the detergent tank as this will damage the appliance.

Using the Hard Floor Cleaner

STEP 1: Vacuum or sweep the area to be cleaned; the floor cleaner is not designed to pick up larger debris.

STEP 2: Make sure the floor cleaner is unplugged from the power adaptor and then fill the clean water/detergent tank following the instructions in the section entitled 'Filling the Clean Water/Detergent Tank'.

STEP 3: Turn on the floor cleaner by pressing the power button once. Press the button again to increase the speed of the floor brush. The light will turn blue on the low setting and flash blue on the higher setting.

STEP 4: Lightly step on the back of the floor cleaner head to disengage the head lock, pull the handle backwards and angle the floor cleaner as desired.

STEP 5: To begin cleaning, move the floor cleaner backwards and forwards over the desired area 3–4 times whilst holding in the water/detergent trigger. This will wet the floor and aid in cleaning.

STEP 6: Release the water/detergent trigger and move the floor cleaner over the desired area to suck up any remaining liquid.

STEP 7: Once finished, turn off the floor cleaner by pressing the power button.

NOTE: Always check with the floor manufacturer or distributor before using the chosen cleaning solution.

The floor cleaner is only suitable for sealed hard floors, not carpets.

CAUTION: The floor may be slippery once the floor cleaner has been used and the floor is wet.

Do not allow the dirty water to exceed the max. fill mark on the dirty water tank, this will cause the suction to stop and leave dirty water on the floor.

Do not press the water/detergent trigger when drying floors or picking up wet spills, as this will release water from the clean water/detergent tank.

Emptying the Dirty Water Tank

STEP 1: Switch off and unplug the floor cleaner from the mains power supply.

STEP 2: Pull the dirty water tank release catch and remove the dirty water tank from the floor cleaner main unit.

STEP 3: Open the dirty water tank lid release clips and empty the dirty water down the drain.

STEP 4: Rinse the dirty water tank under clean running water, replace the lid and close the clips. Push the dirty water tank back into the main unit of the floor cleaner.

NOTE: Make sure that the max. fill mark on the dirty water tank is not exceeded.

The dirty water tank will require more frequent emptying than the clean water tank.

Make sure the floor cleaner is upright before removing the dirty water tank.

Cleaning the Roller Bar

STEP 1: Open the roller bar cover and pull the release tab to remove the roller bar.

STEP 2: Take out the roller bar and wash thoroughly with warm soapy water.

STEP 3: Push the left-hand side of the roller bar into lock hole A, being careful to align the right-hand side with lock hole B. The release tab should slot neatly into place.

STEP 4: Attached the roller bar cover by pressing down until it clicks securely into place.

Max. Fill Safety Float

If the liquid in the dirty water tank exceeds the max. fill mark the safety float in the dirty water tank will stop the suction of the floor cleaner. This will cause the motor to work at a higher speed, which will be audible and cause the floor cleaner to stop vacuuming. At this point, the floor cleaner should be switched off and the dirty water tank emptied following the instructions in the section entitled 'Emptying the Dirty Water Tank.'

Auto Cut-Off

If there is too much friction on the roller bar, or there is an abnormal object caught in the roller bar, the unit will cut off. If this occurs, turn off the unit and remove any blockage and make sure the product is being used on a suitable floor. After 1 minute, the product will be ready to use again.

Storage

Empty the clean water/detergent tank and the dirty water tank.
Check that the floor cleaner is clean and dry before storing in a cool, dry place.

Troubleshooting

Symptom	Possible Cause	Solution
The Hard Floor Cleaner will not turn on.	The battery is not charged.	Charge the floor cleaner following the instructions in the section entitled 'Charging the Hard Floor Cleaner'.
The Hard Floor Cleaner will not charge.	The mains power adaptor is not securely connected.	Connect the mains power adaptor to the charging port on the main unit, following the instructions in the section entitled 'Charging the Hard Floor Cleaner'.
The Hard Floor Cleaner will not suck up water.	The max. fill safety float has activated.	Follow the instructions in the section 'Emptying the Dirty Water Tank'.

Specifications

Product code: SAL0039

Adapter Input: 100–240 V ~ 50/60 Hz 0.8 A Max.

Adapter Output: 26.0 V  0.92 A, 23.92 W

Battery: 22.2 V 2200 mAh Li-ion

Average active efficiency: 86.57 %

Efficiency at low load (10 %): 78.86 %

No load power consumption: 0.1 W

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.salterhousewares.co.uk**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal. For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

*To be eligible for the extended guarantee, go to **guarantee.upgs.com/salter/** and register your product within 30 days of purchase.



Find us on 

www.facebook.com/SalterUK

SALTER®

Manufactured by:

UP Global Sourcing UK Ltd.,

UK. Manchester OL9 0DD.

Germany. 51149 Köln.

Made in China.

UK
CA CE

©Salter trademark. All rights reserved.






ULTIMATE PRODUCTS
HOME OF BRANDS

Manchester
OL9 0DD
United Kingdom
www.upgs.com

Artworker:	Charlotte Pickup
Date:	28/01/2022
Project Name:	EEF220016 EXG SAL0039EGFOB
Type of Artwork:	Instruction Manual ONLINE ONLY
Size:	A5 12 PP ONLINE ONLY
Software Used:	Indesign CC22
Typefaces:	Century Gothic, ITC Avant Garde

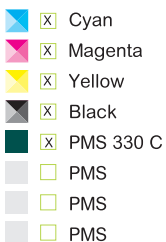

Artwork Version 3

Artwork Scale 1:1

©2022 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE
ARTWORK REFERENCE ONLY