

SALTER®

SINCE 1760

Two in One Cordless Iron

Versatile garment care



Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories other than those supplied with this appliance.

Do not direct steam at people or animals or towards equipment containing electrical components, such as the interior of ovens. Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and allow to cool fully before any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance must only be used and rested on a stable surface.

This appliance must only be used with the stand provided.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: The appliance emits very hot steam; always exercise extreme caution during use.



Hot surface – do not touch the hot section or heating components of the appliance.



WARNING: Danger of scalding. Keep the appliance away from flammable materials.

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the iron from the mains power supply and allow it to cool sufficiently.

STEP 1: Drain the remaining water from the water tank to prevent it from leaking during cleaning.

STEP 2: Wipe the ceramic soleplate with a soft, damp cloth and dry thoroughly.

STEP 3: If polyester has burnt onto the ceramic soleplate, wipe it with a soft cloth dipped in methylated spirits. Clean off the methylated spirits with a soft, damp cloth and dry thoroughly.

STEP 4: To remove any build-up around the steam holes, use a cotton wool tip dampened with methylated spirits. Wipe off the methylated spirits with a soft, damp cloth and dry thoroughly.

WARNING: Do not immerse the iron in water or any other liquid.

Description of Parts



1. Two in One Cordless Iron
2. Temperature control dial
3. Temperature indicator light
4. Steam control trigger
5. Steam setting indicator
6. Steam burst button
7. Water spray button
8. Self-clean button
9. Spray nozzle
10. Water tank

11. Water tank cap
12. Max. fill mark
13. Easy-grip handle
14. Ceramic soleplate
15. Cord guard
16. Heel rest
17. Power unit with cord
18. Iron stand
19. Locking switch
20. Measuring jug

Instructions for Use

Before First Use

Before connecting to the mains power supply, wipe the exterior surface of the iron with a soft, damp cloth and dry thoroughly.

To remove any impurities that may have occurred during the manufacturing process, it is best to use the iron on an old piece of cloth, making sure that it is on the highest temperature setting suitable for the material.

Plug in and switch on the iron at the mains power supply, place the iron onto the cloth and then push the steam burst button 2–3 times, waiting approx. 5 seconds in-between each burst. This will remove impurities from the ceramic soleplate.

NOTE: When using the iron for the first time, a slight odour and a small amount of smoke may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the iron when it is in use.

Filling the Water Tank

STEP 1: Check that the iron is switched off and unplugged from the mains power supply, with the steam setting indicator set to the '0' position (off).

STEP 2: Place the iron onto the iron stand and open the water tank cap.

STEP 3: Fill the measuring jug with water, without exceeding the max. fill mark and then carefully pour the contents into the water tank.

STEP 4: Close the water tank cap.

CAUTION: Do not fill the water tank past the max. fill mark; it is best to check the water level when the iron is positioned upright.

WARNING: Do not fill the water tank with hot water.

Never add descaling, aromatic, alcoholic or detergent products to the water tank, as this could cause damage to the iron or injury to the user.

Using the Two in One Cordless Iron Using as a Cordless Iron

STEP 1: Check that the iron is switched off and unplugged from the mains power supply.

STEP 2: When the iron is on the iron stand, make sure that the heel of the iron is pushed back and secure.

STEP 3: Plug in and switch on the iron at the mains power supply; the temperature indicator light will illuminate to signal the iron is heating up.

STEP 4: When the temperature indicator light switches off after approx. 25 seconds, move the locking switch up to the cordless position. This will lock the power unit to the iron stand and release the iron.

STEP 5: Remove the iron from the iron stand and use as a cordless iron.

STEP 6: Put the iron back onto the iron stand to recharge (reheat) regularly; failure to do so may cause the iron to leak. Recharge time is approx. 5 seconds.

Using as a Corded Iron

STEP 1: Check that the iron is switched off and unplugged from the mains power supply.

STEP 2: When the iron is on the iron stand, make sure that the heel of the iron is pushed back and is secure.

STEP 3: Move the locking switch to the corded position. This will lock the power unit to the iron.

STEP 4: Plug in and switch on the iron at the mains power supply.

STEP 5: Remove the iron from the iron stand and use as a corded iron.

NOTE: When the iron is not in use, keep the locking switch in the 'locked' position in the centre. This is ideal for storage.

Ironing with Steam

The steam settings are ideal for removing creases from fabrics such as cotton and linen with ease.

STEP 1: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 2: Plug in and switch on the iron at the mains power supply.

STEP 3: To increase the temperature of the iron, rotate the temperature control dial in a clockwise direction until the desired heat setting is reached. Reduce the temperature by rotating the temperature control dial in an anticlockwise direction. The temperature indicator light will illuminate to signal that the iron is heating up; this will switch off once the iron is ready to use. The iron will only produce steam when the temperature control dial is set to the 3-dot heat setting.

STEP 4: Select the desired steam setting by pressing the steam control trigger until either '1' or '2' is visible on the steam setting indicator. The steam setting can be switched off at any time by pressing the steam control trigger until it reaches '0'.

STEP 5: After use, rotate the temperature control dial to the 'OFF' position. Switch off and unplug the iron from the mains power supply and allow to cool thoroughly.

NOTE: Allow the iron to reach the desired heat setting before use; not doing so may cause water to drip from the ceramic soleplate. The temperature indicator light will illuminate whilst the iron is heating up but not when it is cooling down; it should not be misinterpreted as a ready-to-use indicator light. The temperature indicator light will cycle on and off during use to regulate the temperature.

WARNING: Never leave the iron's ceramic soleplate resting on fabric for any longer than 15 seconds.

If ironing with steam for prolonged periods of time, it is advisable to use the iron as a corded unit.

Ironing without Steam

For removing creases from more sensitive fabrics, try ironing without steam.

STEP 1: Press the steam control trigger until the steam setting indicator is set to '0'.

STEP 2: Plug in and switch on the iron at the mains power supply.

STEP 3: To increase the temperature of the iron, rotate the temperature control dial in a clockwise direction until the desired heat setting is selected. Reduce the temperature by rotating the temperature control dial in an anticlockwise direction. The temperature indicator light will illuminate to signal that the iron is heating up; this will switch off once the iron is ready to use.

STEP 4: Test the iron on a small area of the fabric to check that the selected temperature is suitable; adjust if necessary.

STEP 5: After use, rotate the temperature control dial to the 'OFF' position. Switch off and unplug the iron from the mains power supply and allow to cool thoroughly.

NOTE: If ironing for prolonged periods of time, it is advisable to use the iron as a corded unit.

Steam Burst Function

For creases that are stubborn and difficult to remove, use the steam control trigger to select the desired steam setting; if necessary, press the steam burst button for extra steam. Wait approx. 5 seconds in-between each burst to prevent any water leaking out from the steam holes.

NOTE: The iron will only produce steam when the temperature control dial is set to the 3-dot heat setting.

Vertical Steam Ironing

The steam burst button can also be used to vertically steam curtains and other hanging garments.

STEP 1: Hang up the item to be vertically steamed.

STEP 2: Press the steam control trigger until the steam setting indicator is set to '0'.

STEP 3: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 4: Plug in and switch on the iron at the mains power supply.

STEP 5: Rotate the temperature control dial until the 3-dot heat setting is selected; the higher the temperature, the more powerful the steam.

STEP 6: Hold the iron approx. 15 cm away from the item and press the steam burst button to remove any creases, waiting approx. 5 seconds in-between each burst.

Water Spray Function

The water spray function can be used to help to remove stubborn creases on heavier fabrics. It can also be used when dry-ironing delicate fabrics that cannot be steam ironed.

To use the water spray function, hold the iron over the area to be ironed and then press the water spray button.

NOTE: The water spray function will not work if the water tank is empty. When using the water spray function for the first time, it may be necessary to press the water spray button several times.

Self-clean Function

The self-clean function removes limescale and impurities from within the ceramic soleplate.

It is recommended to use this function on a fortnightly basis or more often if the iron is used in a hard water area.

STEP 1: Switch off and unplug the iron from the mains power supply.

STEP 2: Press the steam control trigger until the steam control indicator is set to '0'.

STEP 3: Place the iron onto the iron stand.

STEP 4: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 5: Plug in and switch on the iron at the mains power supply.

STEP 6: Set the temperature control dial to the highest heat setting and allow the iron to heat up until the temperature indicator light switches off.

STEP 7: Switch off and unplug the iron from the mains power supply.

STEP 8: Remove the iron from the iron stand and carefully hold it over a sink, making sure that the power supply cord and plug are kept away from the ceramic soleplate.

STEP 9: Press and hold the self-clean button. Hot water and steam will expel from the steam holes along with any impurities.

STEP 10: After approx. 1 minute, or when the water tank is completely empty, release the self-clean button.

STEP 11: Place the iron onto the iron stand and allow to cool thoroughly.

STEP 12: When the iron has sufficiently cooled, wipe it with a soft, damp cloth.

STEP 13: Plug in and switch on the iron at the mains power supply.

STEP 14: Set the temperature control dial to the highest heat setting.

STEP 15: Once the temperature indicator light has switched off, use the iron on an old piece of fabric to remove any excess water and impurity build-up from in the steam holes.

NOTE: Water may be ejected from the steam holes whilst the iron is heating up.

For best results, carry out the self-clean process immediately after unplugging the iron from the mains power supply.

CAUTION: Never press the self-clean button when using the iron; only press it when the iron is switched off and unplugged from the mains power supply and is safely held over a sink.

Hints and Tips

1. Always start ironing on a low heat setting and work up to a higher one, if necessary; it takes less time for the iron to heat up than it does to cool down.
2. The temperature of the iron is the hottest when it has initially heated up and will therefore need time to stabilise. Once the iron has heated up, allow the temperature indicator light to cycle off and on again before using the iron.
3. Before each use, check the care labels on the fabrics to be ironed so that the correct temperature is selected.

Storage

Check that the iron is cool and dry and that the water tank is empty before storing in a cool, dry place.

Wrap the cord loosely around the iron; never wrap it tightly as this could cause damage.

Troubleshooting

WARNING: To reduce the risk of fire, electric shock or injury, switch off and unplug the iron from the mains power supply before troubleshooting.

Problem	Possible Cause	Possible Solution
Reduced constant steam or no constant steam.	The steam holes are blocked.	Clear the steam holes of any blockages.
	The steam control indicator is set to '0'.	Select a steam setting using the steam control trigger.

The fabric shows signs of melting.	The temperature selected is too high.	Reduce the temperature using the temperature control dial.
The iron will not turn on.	The iron is not connected to the mains power supply. The fuse in the mains plug has blown.	Plug in and switch on the iron at the mains power supply. Replace the fuse in the plug with one of the same rating.
Water does not spray out of the spray nozzle.	There is no water in the water tank. The iron is being used for the first time.	Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'. Press the water spray button several times until water is released from the spray nozzle.
The iron is not removing the creases from the fabric.	The temperature is set too low. The steam control indicator is set to the '0' position.	Increase the temperature using the temperature control dial, making sure that the fabric's care instructions are followed. Select a steam setting using the steam control trigger.
Water is leaking from the ceramic soleplate.	The temperature is set too low. The iron has not been recharged.	Increase the temperature using the temperature control dial, taking care that the fabric's care instructions are followed. Put the iron back onto the iron stand to recharge at any point. Recharge time is approx. 5 seconds. If ironing with steam for prolonged periods of time, it is advisable to use the iron as a corded unit.

Specifications

Product code: SAL01744CDSFOB

Input: 220–240 V ~ 50–60 Hz

Output: 2600 W

Water tank capacity: 300 ml

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\equiv)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.


The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked \equiv .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\equiv). Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

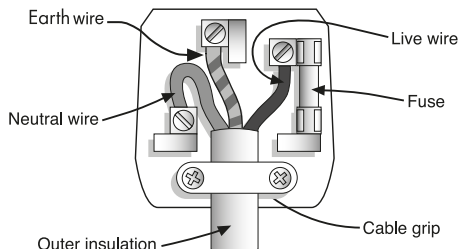

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Edmund-Rumpler Straße 5, 51149 Köln. Germany.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.salter.com

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

To be eligible for the extended guarantee,
go to **www.salter.com** and register your
product within 30 days of purchase.

Find us on 

www.facebook.com/Salter

SALTER[®]

Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**

Made in China.

