

**SALTER®**  
SINCE 1760

Reusable  
coffee  
filter



## Coffee Maker to Go

Enjoy freshly brewed coffee on the go

**SALTER®**

**Coffee Maker to Go**

Enjoy freshly brewed coffee on the go

*"I love the aroma from my Salter  
coffee maker in the mornings!"*

CONTENTS	PAGE
Safety Instructions	3–4
Cleaning and Maintenance	5
Getting Started	5
In the Box	5
Features	5
Description of Parts	6
Instructions for Use	6
Before First Use	6–7
Using the Coffee Maker to Go	7–8
Hints and Tips	8
Storage	8
Specifications	8
Wiring Page	9
Guarantee	10

Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the supply cord, plug or any part of the appliance is malfunctioning, or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from heat emitting appliances.

Do not leave the appliance within reach of children.

Do not allow the mains plug to hang over worktops, touch hot surfaces or become twisted.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to

the mains power supply.

Do not overload the appliance; only fill up to the maximum level marked on the appliance.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Do not place boiling water or very hot liquid in the appliance.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface of the appliance may get hot during operation.

**Caution:** Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance.



Hot surface – do not touch the hot section or heating components of the appliance.

**Warning:** Keep the appliance away from flammable materials.

## **Cleaning and Maintenance**

Always check that the Coffee Maker to Go is unplugged from the mains power supply and has fully cooled before performing any cleaning or user maintenance.

Never immerse the Coffee Maker to Go main body in water or any other liquid.

Wipe the Coffee Maker to Go main body with a soft, damp cloth and allow to dry thoroughly.

Do not use harsh or abrasive scourers to clean the Coffee Maker to Go, as this could cause damage.

Wash the reusable coffee filter and filter basket in warm, soapy water, then rinse and dry thoroughly before refitting them in place on the Coffee Maker to Go.

Clean the travel mug in warm, soapy water; rinse and dry thoroughly before storing.

## **Getting Started**

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

## **In the Box**

Coffee Maker to Go

Reusable coffee filter

Filter basket

420 ml stainless steel travel mug

Easy-drink lid

Instruction manual

## **Features**

700 W power

Uses ground coffee or coffee pads

Reusable coffee filter

3 water level markings

Prepares a cup of coffee in approx. 3–4 minutes

Indicator light

Includes 420 ml stainless steel travel mug

## Description of Parts



## Instructions for Use

### Before First Use

**STEP 1:** Before using the Coffee Maker to Go for the first time, remove the travel mug, reusable coffee filter and filter basket and wash them in warm, soapy water, then rinse and dry thoroughly.

**STEP 2:** Wipe the Coffee Maker to Go main body with a soft, damp cloth and allow to dry thoroughly. Do not immerse the Coffee Maker to Go main body in water or any other liquid.

**Note:** When using the Coffee Maker to Go for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the Coffee Maker to Go.

### Using the Coffee Maker to Go

**STEP 1:** Check that the Coffee Maker to Go is switched off and unplugged from the mains power supply and that all of the accessories are in place.

**STEP 2:** Lift the water reservoir lid and remove the reusable coffee filter from the brewing chamber. Add 15–20 g of finely ground or regular ground coffee, or 1–2 coffee pads, into the reusable coffee filter to create one full travel mug of fresh coffee.

**STEP 3:** Gently shake the reusable coffee filter to evenly distribute the coffee.

**STEP 4:** Position the reusable coffee filter into the filter basket and then place into the brewing chamber.

**STEP 5:** Pour 430 ml fresh cold water into the water reservoir and close the water reservoir lid.

**STEP 6:** Remove the lid from the travel mug and place the travel mug onto the base of the Coffee Maker to Go, aligning it with the brewing chamber.

**STEP 7:** Plug in and switch on the Coffee Maker to Go at the mains power supply. Press the power button; the indicator light will illuminate red to signal that the Coffee Maker to Go is in operation.

**STEP 8:** Once all of the coffee has dripped from the brewing chamber into the travel mug and the brewing cycle is complete (approx. 4 minutes), the indicator light will switch off.

**STEP 9:** Remove the travel mug from the base; it is recommended to wait 1–2 minutes before doing this to allow the unit to cool and let any excess water to drip into the travel mug. Take care when handling as the travel mug likely to have become hot during operation. Check that the lid is fully secured to avoid any leaking.

**Note:** Once the power button has been pressed, the Coffee Maker to Go will start the brewing cycle and will remain on until the brewing cycle is complete.

To interrupt or stop the brewing cycle, switch off the Coffee Maker to Go at the mains power supply and unplug it.

**Caution:** Do not switch on the Coffee Maker to Go without any water in the water reservoir.



**Caution:** Do not open the water reservoir lid during the brewing cycle, as this will allow steam to escape and could cause scalding or burns.

**Warning:** Allow the Coffee Maker to Go to cool for 3 minutes before making a second cup of coffee. If the Coffee Maker to Go does not cool completely before reuse, water placed in the water reservoir may overheat. This will allow hot steam to escape, which could injure the user.

## Hints and Tips

1. Always use fresh, cold water to fill the water reservoir.
2. The quantity of ground coffee can be adapted to suit taste. For stronger coffee, increase the amount of coffee, or use less for weaker coffee.
3. If using regular ground coffee, more is needed per cup to achieve the same strength as finer ground coffee.
4. After using packaged ground coffee, tightly reseal it and store the unused ground coffee in a cool, dry place.
5. To achieve optimum coffee taste, use whole coffee beans and finely grind them before brewing.
6. Do not reuse ground coffee that has already been used in the Coffee Maker to Go as this will greatly reduce the flavour of the coffee.
7. Reheating coffee is not recommended as it interferes with the taste.

## Storage

Make sure that the Coffee Maker to Go is cool, clean and dry before storing. Do not wrap the power cord tightly around the Coffee Maker to Go, as this could cause damage.

## Specifications

Product code: EK2408

Operating voltage: 220–240 V ~ 50/60 Hz

Power: 650–750 W



## Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

**Blue Neutral (N)**

**Brown Live (L)**

**Green/Yellow Earth ( $\perp$ )**

**FOR UK USE ONLY** - Plug fitting details  
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.


The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked  $\perp$ .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

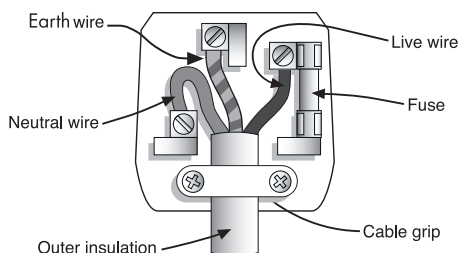

### Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

**Telephone:** 0161 934 2240\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

**Email:** [customercare@upgs.com](mailto:customercare@upgs.com)

**Fax:** 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



**3**  
**YEAR**

**GUARANTEE\***

\*To be eligible for the extended guarantee, go to [www.saltercookshop.com](http://www.saltercookshop.com) and register your product within 30 days of purchase.



Find us on 

[www.facebook.com/SalterCookshop](https://www.facebook.com/SalterCookshop)



Manufactured by:

UP Global Sourcing UK Ltd.,  
Victoria Street,  
Manchester OL9 0DD. UK.

Made in China.



**SALTER®**

CD100417/MD080818/V2