

SALTER®
SINCE 1760



28 Litre Compact Oven with Hobs

Versatile all-in-one cooker for everyday use

SALTER®

28 Litre Compact Oven with Hobs

Versatile all-in-one cooker for everyday use

*"Creating different meals is easy,
with my Salter compact oven"*

CONTENTS	PAGE
Safety Instructions	3–5
Care and Maintenance	5–6
Getting Started	6
In the Box	6
Features	6
Description of Parts	7
Instructions for Use	8
Before First Use	8
Using the 28 L Compact Oven with Hobs	8–9
Using the Oven	10
Using the Grill	11
Using the Hobs	11–12
Storage	12
Specifications	12
Wiring Page	13
Guarantee	14

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface or door of the appliance may get hot during operation.



Caution: Hot surface – do not touch the hot section or heating components of the appliance.

Take care not to pour water on the heating element.

Steam may be emitted from the appliance during cooking.

Always take care and use heat-resistant gloves.

Warning: Keep the appliance away from flammable materials.

Care and Maintenance

Before attempting any cleaning or maintenance, unplug the compact oven from the mains power supply and allow to cool fully.

STEP 1: Wipe the compact oven housing with a soft, damp cloth and dry thoroughly.

STEP 2: Clean the baking tray, baking tray handle and wire rack in warm, soapy water, then rinse and dry thoroughly.

STEP 3: Remove baked-on food and stubborn stains using a small amount of warm water mixed with a mild detergent, then wipe them clean with a paper towel. Use a nonabrasive scourer if the food is difficult to remove.

Do not immerse the compact oven in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the compact oven or its accessories, as this could damage the surface.

Note: The compact oven should be cleaned after each use.

Warning: The compact oven and its accessories are not suitable for dishwasher use.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging in the box and either store or dispose of carefully.

In the Box

28 L Compact Oven with Hobs

Wire Rack

Baking Tray

Baking Tray Handle

Instruction Manual

Features

3100 W power – 1500 W oven, 1000 W and 600 W hobs

28 L capacity

Variable temperature up to 230 °C

60-minute timer

Auto shut-off function

Space-saving design

Ideal for smaller kitchens

Includes wire rack, baking tray and tray handle

Description of Parts



Instructions for Use

Before First Use

STEP 1: Before connecting to the mains power supply, wipe the compact oven inside and out with a soft, damp cloth and dry thoroughly.

STEP 2: Clean the accessories in warm, soapy water, then rinse and dry thoroughly.

Do not immerse the compact oven in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the compact oven or its accessories, as this could cause damage.

STEP 3: Place the compact oven onto a stable, heat-resistant surface, at a height that is comfortable for the user.

STEP 4: Plug in and switch on the compact oven at the mains power supply. Allow it to run for approx. 15 minutes by turning the heating element selection dial to both the upper and lower heating elements, and turn the temperature dial to the highest temperature. This will eliminate any odour and burn away any protective substances used during the manufacturing process.

Note: When using the compact oven for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the compact oven.

Using the 28 Litre Compact Oven with Hobs







The temperatures shown on the temperature control are comparable with those of a standard electric oven. However, due to the size of the compact oven, cooking times may be slightly shorter than those of a conventional oven. This may vary depending upon the type of food cooked and where the baking tray or wire rack is placed. Always check that food is thoroughly cooked through before serving.

Note: The indicator lights for the hob and oven functions are located next to their respective selection dials. These indicator lights will remain illuminated whilst the hob or oven is plugged on and the timer dial is in use.

Do not force the timer dial to '0'; allow it to run down naturally.

Caution: Always wear heat-resistant oven gloves when removing hot food from the compact oven. Use the baking tray handle to assist with removing the wire rack or baking tray, checking that it is securely hooked into position.

Warning: Never allow food to come into direct contact with the heating elements; always maintain a 3 cm gap.

Heating Element Selection Dial	Symbol Meaning	Suggested use
	No heat	
	Lower heating element activated	Baking cakes, pizzas
	Upper heating element activated	Toasting, grilling and cooking thin foods
	Upper and lower heating elements activated	Roasting meats, general oven cooking
Hob Selection Dial	Symbol Meaning	Suggested use
	Large hob activated	Large saucepans, pasta, rice
	Small hob activated	Smaller saucepans, sauces
	Both hobs activated	Cooking with both large and smaller saucepans

Using the Oven

STEP 1: Remove any accessories before plugging in and switching on the compact oven at the mains power supply. Check that the hob selection dial is set to the off position.

STEP 2: Prepare the ingredients that are to be cooked.

STEP 3: Select either the upper or lower heating element (or both) using the heating element selection dial.

STEP 4: Turn the temperature dial to the required heat setting for the food to be cooked.

STEP 5: Preheat the oven by turning the timer dial to 5 minutes. It is recommended to preheat the oven for at least 5 minutes to avoid temperature fluctuation during use. The heating indicator light will illuminate to signal that the oven is heating up. This will remain illuminated whilst the heating element(s) is in use.

STEP 6: Using heat-resistant oven gloves, open the oven door and place the food to be cooked onto the baking tray or wire rack and cook for the desired time; the food should not exceed 3 kg in weight.

STEP 7: Turn the timer dial to the required cooking time. Check the food periodically; it may be necessary to turn or flip the food during cooking to achieve an even bake.

STEP 8: Once cooking is complete, turn the heating element selection dial to the off position. If the timer is still running, do not force it to '0'; allow it to run down naturally.

STEP 9: Using heat-resistant oven gloves, carefully open the door and remove the wire rack or baking tray using the baking tray handle.

STEP 10: Switch off and unplug the compact oven from the mains power supply.

Note: The baking tray handle has two sets of hooks; the larger hooks fit the baking tray whilst the smaller hooks lock onto the wire rack.

During use, the oven door can be left slightly or fully open in order to ventilate during cooking.

Using the Grill

STEP 1: Plug in and switch on the compact oven at the mains power supply.

STEP 2: Prepare the ingredients that are to be cooked.

STEP 3: Select the upper heating element using the heating element selection dial.

STEP 4: Turn the temperature dial to maximum (230 °C).

STEP 5: Turn the timer dial to the required cooking time. The heating indicator light will illuminate to signal that the grill is heating up. This will remain illuminated whilst the heating element(s) is in use.

STEP 6: Using heat-resistant oven gloves, open the oven door and place the food to be cooked onto the wire rack and cook for the desired time; the food should not exceed 3 kg in weight.

STEP 7: Once cooking is complete, turn the heating element selection dial to the off position. If the timer is still running, do not force it to 0; allow it to run down naturally.

STEP 8: Using heat-resistant oven gloves, carefully open the door and remove the wire rack using the baking tray handle.

STEP 9: Switch off and unplug the compact oven from the mains power supply.

Note: The oven door must be kept open when using the grill.

Using the Hobs

STEP 1: Check that the hob selection dial is set to the off position before plugging in and switching on the compact oven at the mains power supply.

STEP 2: Prepare the ingredients that are to be cooked.

STEP 3: Select either or both of the hobs using the hob selection dial.

STEP 4: Turn the timer dial to the required cooking time. The hob indicator light will illuminate to signal that the hob(s) is heating up. This will remain illuminated whilst the hob(s) is in use.

STEP 5: Once cooking is complete, turn the hob element selection dial(s) to the off position. If the timer is still running, do not force it to 0; allow it to run down naturally.

STEP 6: Switch off and unplug the compact oven from the mains power supply.

Note: For efficient and effective heating, any pans used on the hobs should have a flat base that should be no larger than the chosen hob ring.

The indicator lights will not cycle on and off during use of the hobs. Never cook foods on the hobs directly; always use a pan.

Caution: The hobs will remain hot for a long time after cooking.

Storage

Check that the compact oven is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the compact oven; wrap it loosely to avoid causing damage.

Specifications:

Product Code: EK2821

Input: 220–240 V ~ 50/60 Hz

Output: Oven 1500 W

Large Hob 1000 W

Small Hob 600 W

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.


The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked \perp .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

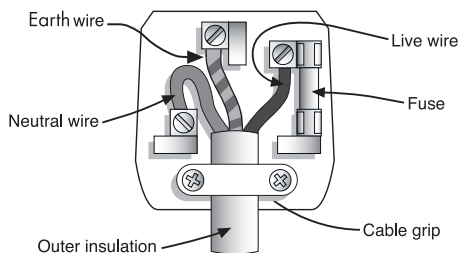

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2240*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



3
YEAR

GUARANTEE*

*To be eligible for the extended guarantee,
go to www.saltercookshop.com
and register your product.



Find us on 

www.facebook.com/SalterCookshop



Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.

Made in China.



SALTER®

CD260218/MD000000/V1



GLOBAL SOURCING
THE ULTIMATE WAY

Manchester
OL9 0DD
United Kingdom
www.upgs.com


t: +44 (0) 161 627 1400

f: +44 (0) 161 628 2126

hk: +852 6681 9752

cn: +86 1 3417586804

Artworker:	Jennifer Dodd
Date:	28/2/18
Project Name:	EEK180839 UPG EK2821 IM
Type of Artwork:	Instruction Manual
Size:	A5 16 PP
Software Used:	Indesign CS6
Typefaces:	PR8 Charade, Century Gothic

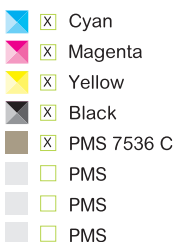

Artwork Version **3**

Artwork Scale 1:1

©2018 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE
ARTWORK REFERENCE ONLY