

# **SALTER<sup>®</sup>**

SINCE 1760

## Milk Frother

Quick and easy way to enjoy  
creamy, frothy drinks at home



# SALTER®

## Milk Frother

Quick and easy way to enjoy creamy,  
frothy drinks at home

| CONTENTS                  | PAGE  |
|---------------------------|-------|
| Safety Instructions       | 3–5   |
| Important                 | 5     |
| Care and Maintenance      | 5–6   |
| Getting Started           | 6     |
| In the Box                | 6     |
| Features                  | 6     |
| Description of Parts      | 7     |
| Instructions for Use      | 8     |
| Before First Use          | 8     |
| Using the Milk Frother    | 8     |
| Frothing and Heating Milk | 8–9   |
| Heating Milk              | 9     |
| Frothing Cold Milk        | 10    |
| Boil-dry Protection       | 10    |
| Storage                   | 10    |
| Specifications            | 10    |
| Notes                     | 11–12 |
| Wiring Page               | 13    |
| Guarantee                 | 14–15 |

Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Keep hands, fingers, hair and loose clothing away from the rotating tools of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface or door may get hot during operation.



**Caution:** Hot surface – do not touch the hot section or heating components of the appliance.

**Warning:** Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance.

The appliance will become very hot during use; do not touch the appliance and always take care when handling.

### **Important**

1. Check that the base of the Milk Frother is clean before each cycle.
2. Always fill the Milk Frother above the min. fill mark, whilst making sure not to exceed the max. fill mark for the warming function.
3. Never connect the Milk Frother to the mains power supply before the milk has been added.
4. Do not operate the Milk Frother whilst empty.
5. Never allow any liquid to come into contact with the power base.
6. Take care that the correct max. fill mark is followed for the relevant function; do not use the frothing function when milk is over the max. fill mark for frothing.

**Note:** The Milk Frother has a boil-dry feature. If the Milk Frother is switched on when empty, it will switch off.

**Warning:** Do not remove the lid until the whisk has stopped rotating.

### **Care and Maintenance**

Switch off and unplug the Milk Frother from the mains power supply and allow it to cool fully before attempting any cleaning or maintenance.

**STEP 1:** Wipe the Milk Frother with a soft, damp cloth and dry thoroughly.

Do not immerse the Milk Frother in water or any other liquid.

**STEP 2:** Clean the interior of the Milk Frother with warm, soapy water, then rinse and dry thoroughly.

Never immerse the electrical components in water or any other liquid.

Do not use harsh or abrasive cleaning detergents or scourers to clean the Milk Frother, as this could cause damage.

Wipe away any remaining milk with a soft cloth and a mild detergent before rinsing again.

**Note:** The Milk Frother should be cleaned after each use.

**Warning:** The Milk Frother is not safe for dishwasher use.

Hand-wash in warm, soapy water and allow to dry thoroughly.

## Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

Milk Frother main body

Lid

Whisk

Milk Frother base

Instruction manual

## Features

500 W power

Cool-touch housing

Simple one-touch operation

Soft-touch silicone grip

Can be used to warm or  
froth milk

LED indicator light

Non-stick coating for  
easy cleaning

 
Strix controller

Transparent lid

Milk frother capacity 115 ml

Milk warmer capacity 240 ml

## Description of Parts

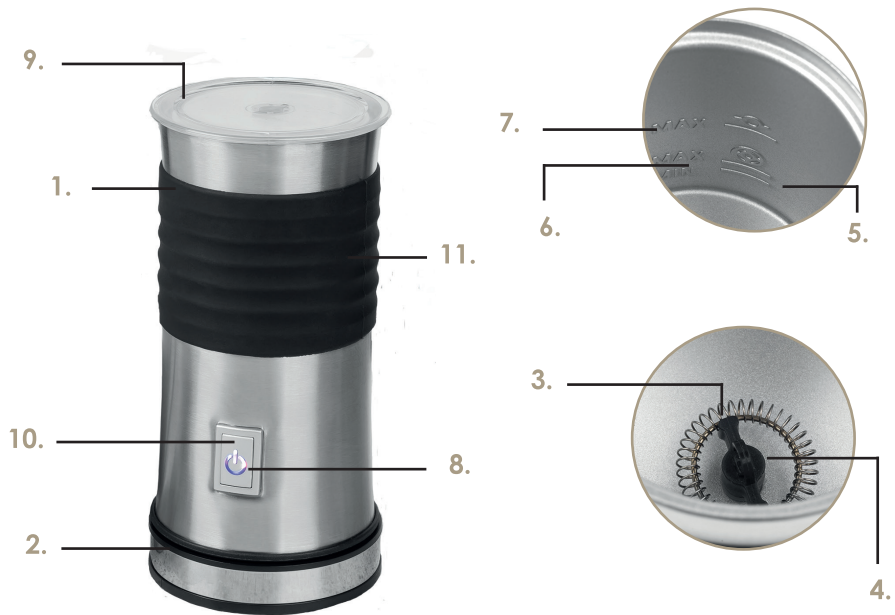

- 1. Milk Frother main body
- 2. Milk Frother base
- 3. Removable whisk
- 4. Whisk spindle
- 5. 80 ml min. fill mark
- 6. 110 ml max. (☉) fill mark for frothing function

- 7. 240 ml max. (—○—) fill mark for heating function
- 8. Indicator light
- 9. Lid
- 10. On/off switch
- 11. Soft silicone grip



## Instructions for Use

### Before First Use

**STEP 1:** Before connecting to the mains power supply, wipe the exterior housing with a soft, damp cloth and dry thoroughly.

**STEP 2:** Clean the interior with warm, soapy water and rinse thoroughly.

Do not immerse the Milk Frother in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the Milk Frother, as this could cause damage.

**Note:** When using the Milk Frother for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the Milk Frother.

### Using the Milk Frother

#### Frothing and Heating Milk

**STEP 1:** Switch off and unplug the Milk Frother from the mains power supply.

**STEP 2:** Position the Milk Frother base onto a flat, stable, heat-resistant surface at a height that is comfortable for the user.

**STEP 3:** Place the Milk Frother onto the base.

**STEP 4:** Attach the removable whisk to the whisk spindle, checking that it is secure.

**STEP 5:** Fill the Milk Frother with milk, making sure that it is over the min. fill mark and under the max. (☉) fill mark for frothing.

**STEP 6:** Secure the lid onto the Milk Frother. Plug in and switch on the Milk Frother at the mains power supply and turn the Milk Frother on using the 'On/Off' switch. The indicator light will illuminate purple during operation for approx. 1 minute and 40 seconds as the milk is heated and whisked.

**STEP 7:** Once the cycle is complete, a red light will flash for a further 30 seconds where the milk will continue to be whisked with no heat; the Milk Frother should turn off automatically.

Make sure that the Milk Frother is switched off at the mains power supply. Wearing heat-resistant gloves, remove the lid and pour out the milk.

**Note:** The Milk Frother heats up to approx.  $60 \pm 5^{\circ}\text{C}$ . This is the ideal temperature, as it retains the flavour of coffee. Restarting the operation will not increase the temperature of the milk.

**Caution:** The Milk Frother is not designed to reheat milk once it has been frothed. Reheating can damage the heating element.



**Warning:** The Milk Frother and lid will get hot during use; take care when touching these components. When moving the Milk Frother or pouring milk, allow the Milk Frother to cool sufficiently or wear heat-resistant gloves.

**Note:** Hold the Milk Frother with the silicone grip whilst pouring.

## Heating Milk

**STEP 1:** Switch off and unplug the Milk Frother from the mains power supply.

**STEP 2:** Position the Milk Frother base onto a flat, stable, heat-resistant surface at a height that is comfortable for the user.

**STEP 3:** Place the Milk Frother onto the base.

**STEP 4:** Remove the whisk from the whisk spindle by pulling up and away from the Milk Frother main body.

**STEP 5:** Fill the Milk Frother with milk, checking that it is over the min. fill mark and under the max. (—○—) fill mark for heating.

**STEP 6:** Secure the lid onto the Milk Frother. Plug in and switch on the Milk Frother at the mains power supply and turn the Milk Frother on by the 'On/Off' switch. The indicator light will illuminate purple during operation for approx. 1 minute and 40 seconds as the milk is heated.

**STEP 7:** Once the cycle is complete, a red light will flash for a further 30 seconds; the Milk Frother should turn off automatically.

Make sure that the Milk Frother is switched off at the mains power supply. Wearing heat-resistant gloves, remove the lid and pour out the milk.

**Note:** The Milk Frother heats up to approx. 60 +/- 5 °C. This is the ideal temperature, as it retains the flavour of coffee. Restarting the operation will not increase the temperature of the milk.

**Caution:** The Milk Frother is not designed to reheat milk once it has been frothed. Reheating can damage the heating element.

**Warning:** The Milk Frother and lid will get hot during use; take care when touching these components. When moving the appliance or pouring milk, allow the Milk Frother to cool sufficiently or wear heat-resistant gloves.

**Note:** Hold the Milk Frother with the silicone grip whilst pouring.

## Frothing Cold Milk

**STEP 1:** Switch off and unplug the Milk Frother from the mains power supply.

**STEP 2:** Position the Milk Frother base onto a flat, stable, heat-resistant surface at a height that is comfortable for the user.

**STEP 3:** Place the Milk Frother onto the base.

**STEP 4:** Attach the removable whisk to the whisk spindle, checking that it is secure.

**STEP 5:** Fill the Milk Frother with milk, making sure that it is over the min. fill mark and under the max. (☉) fill mark for frothing.

**STEP 6:** Secure the lid onto the Milk Frother. Plug in and switch on the Milk Frother at the mains power supply. Press and hold the 'On/Off' switch for 2–3 seconds to switch cycles. The indicator light will illuminate blue during operation for approx. 1 minute and 40 seconds as the milk is frothing.

**STEP 7:** Once the cycle is complete, a blue light will flash for a further 30 seconds; the Milk Frother should turn off automatically.

Make sure that the Milk Frother is switched off at the mains power supply. Wearing heat-resistant gloves, remove the lid and pour out the milk.

## Boil-dry Protection

If there is not sufficient milk in the Milk Frother, it will shut off automatically. If this happens, switch off the Milk Frother and unplug it from the mains power supply. Allow to cool fully for at least 10 minutes before using again.

## Storage

Check that the Milk Frother is cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the Milk Frother; wrap it loosely to avoid causing damage.

Do not store the cord inside the Milk Frother.

## Specifications

Product code: EK3459

Input: 220–240 V ~ 50/60 Hz

Output: 500 W

**Notes**

**Notes**

## Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

**Blue Neutral (N)**

**Brown Live (L)**

**Green/Yellow Earth ( $\perp$ )**

**FOR UK USE ONLY** - Plug fitting details  
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

 
The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked  $\perp$ .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

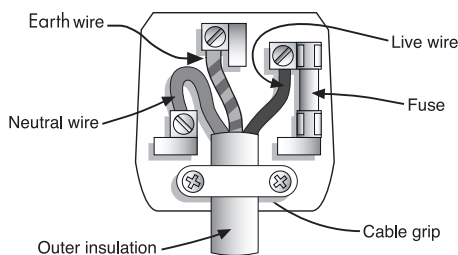

### Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

**Telephone:** 0161 934 2240\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

**Email:** [customercare@upgs.com](mailto:customercare@upgs.com)

**Fax:** 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



**3**  
**YEAR**

**GUARANTEE\***

\*To be eligible for the extended guarantee,  
go to [www.saltercookshop.com](http://www.saltercookshop.com)  
and register your product within 30 days  
of purchase.



Find us on 

[www.facebook.com/SalterCookshop](http://www.facebook.com/SalterCookshop)





Manufactured by:  
UP Global Sourcing UK  
Ltd.,  
Victoria Street,  
Manchester OL9 0DD. UK.  
Made in China.



**SALTER®**

CD13122018/MD000000/V1



**GLOBAL SOURCING**  
**THE ULTIMATE WAY**

Manchester  
OL9 0DD  
United Kingdom  
[www.upgs.com](http://www.upgs.com)

 
t: +44 (0) 161 627 1400

f: +44 (0) 161 628 2126

hk: +852 6681 9752

cn: +86 1 3417586804

|                  |                             |
|------------------|-----------------------------|
| Artworker:       | Laura Springer              |
| Date:            | 13/12/2018                  |
| Project Name:    | EEK186915 UPG EK3459 IM     |
| Type of Artwork: | Instruction Manual          |
| Size:            | A5 16PP                     |
| Software Used:   | Indesign CC                 |
| Typefaces:       | Century Gothic, PR8 Charade |

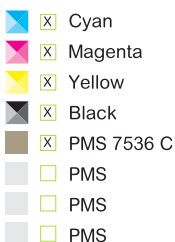

**Artwork Version 1**

**Artwork Scale 1:1**

©2018 UP Global Sourcing UK Ltd.

All designs, images and artwork are the copyright of Ultimate Products Ltd. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of Ultimate Products Ltd. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE  
ARTWORK REFERENCE ONLY