

# **SALTER®**

SINCE 1760

## 3 in 1 Blender Set

Practical and stylish design  
perfect for any kitchen

**SOFT-TOUCH  
HANDLE FOR  
EXTRA GRIP  
AND  
COMFORT**



**SALTER®**

# 3 in 1 Blender Set

Practical and stylish design  
perfect for any kitchen

CONTENTS	PAGE
Safety Instructions	3–5
Care and Maintenance	5
Getting Started	6
In the Box	6
Features	6
Description of Parts	6
Instructions for Use	7
Before First Use	7
Using the 3 in 1 Blender Set	7
With the Chopping Attachments	7–8
With the Whisk Attachment	8
With the Blender Attachment	8–9
Troubleshooting	9
Storage	9
Specifications	9
Recipes	10–13
Wiring Page	14
Guarantee	15

Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not immerse the electrical components of this appliance in

water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not place boiling water or very hot liquid in the appliance.

Do not dry blend ingredients; always add a small amount of liquid.

Do not overload the appliance as the mixture level may rise during blending.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not use broken or loose cutting or rotating blades.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

**Warning:** Do not touch sharp blades.

## **Care and Maintenance**

**STEP 1:** Switch off and unplug the blender from the mains power supply before performing any cleaning or user maintenance.

**STEP 2:** Wipe the blender unit with a soft, damp cloth and allow to dry thoroughly.

**STEP 3:** Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Never touch the chopping blades; using extreme caution, clean the blades with a brush and dry carefully.

Do not immerse the blender base unit in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the blender, as this could cause damage.

The blender is not suitable for use in a dishwasher.

**Note:** The blender should be cleaned after every use.

**Warning:** Handle the attachments with care as the blades are sharp. Exercise caution when attaching, removing, cleaning or storing the attachments.

## Getting Started

Remove the blender from the box.

Remove any packaging from the blender.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

Blender Unit

Blender Attachment

Whisk Attachment

Attachment Holder

500 ml Chopping Bowl

Chopping Bowl Lid

Instruction Manual With Recipes

## Features

350 W power

Whisking, blending and chopping functions

500 ml chopping bowl

Soft-touch handle with metallic silver accents

2-speed settings

Stainless steel blades

## Description of Parts



1. Blender Unit
2. 2 Soft-touch Speed Buttons
3. Attachment Release Buttons
4. Whisk Attachment
5. Blender Attachment

6. Attachment Holder
7. Chopping Bowl
8. Chopping Blade
9. Chopping Bowl Lid

## Instructions for Use

### Before First Use

Wash all of the attachments in warm, soapy water, then rinse and dry thoroughly. Wipe the blender unit with a soft, damp cloth and allow to dry thoroughly. Never touch the blades; the attachments should be washed using a brush and dried carefully. Do not immerse the blender unit in water or any other liquid.

**Note:** When using the blender for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the blender.

### Using the 3 in 1 Blender Set

All attachments must be securely fitted before use; do not attempt to remove them until the attachment has stopped moving.

**Warning:** Maximum operation time is 1½ minutes. Allow to cool for 1 minute before using the appliance again.

### With the Chopping Attachments

The chopping attachments are ideal for slicing or dicing fruit and vegetables to help to prepare delicious meals and salads.

**STEP 1:** Before connecting the blender to the mains power supply, carefully attach the chopping blade onto the spindle on the inside of the chopping bowl and push down until it clicks into place.

**STEP 2:** Place the food to be chopped into the chopping bowl. Secure the chopping bowl lid by placing it on top, aligning the guides and then twisting it in a clockwise direction until it locks.

**STEP 3:** To attach the blender unit, place it on top of the chopping bowl lid and secure by pushing down until it clicks into place.

**STEP 4:** Plug in and switch on the blender at the mains power supply.

**STEP 5:** Holding the chopping bowl steady, press and hold the desired soft-touch speed button on the blender unit.

**STEP 6:** Once the food has been chopped to the required size, release the soft-touch speed button and wait for the chopping blade to stop rotating before removing the chopping bowl lid.

**STEP 7:** Any extra food may be added to the chopped ingredients at this point by removing the chopping bowl lid, adding the ingredient(s), replacing the chopping bowl lid and repeating the chopping process.

**STEP 8:** To remove the blender unit from the chopping bowl lid, pull them apart whilst holding down the attachment release buttons.

**Caution:** Switch off and unplug the blender from the mains power supply before attempting to remove any food from

the chopping bowl and before cleaning.

**Warning:** Do not use the chopping bowl if it is cracked or broken.

Do not operate the blender when the chopping bowl is empty, as this will cause damage to the appliance.

## With the Whisk Attachment

The whisk attachment is ideal for mixing light ingredients such as egg whites, cream and instant desserts. It is not suitable for mixing heavier ingredients such as margarine and sugar, as this may cause damage to the appliance.

**STEP 1:** Before connecting the blender to the mains power supply, carefully attach the whisk attachment onto the blender by pushing down until it clicks into place.

**STEP 2:** Place the food to be whisked into a mixing jug, then plug in and switch on the blender at the mains power supply.

**STEP 3:** Insert the whisk attachment into the mixing jug and then press and hold the desired soft-touch speed button.

**STEP 4:** Slowly rotate the whisk attachment in a clockwise direction to avoid splashing.

Take care to avoid any liquid rising above the top of the whisk attachment wires. Release the soft-touch speed button once whisking is complete.

**STEP 5:** After use, remove the whisk attachment from the blender unit by pulling them apart whilst holding down the attachment release buttons.

**Note:** Whilst mixing liquid, especially hot liquid, use a tall container or whisk small quantities at a time to reduce spillage, splattering and the possibility of injury from scalding.

**Warning:** Do not use the whisk attachment to blend very hot or boiling liquid, as this may cause injury.

When placing food into the mixing jug, take care not to overfill it in order to avoid spillages.

Switch off and unplug from the mains power supply before attempting to remove the whisk attachment and before cleaning.

## With the Blender Attachment

The blender attachment is ideal for blending or mashing cooked vegetables such as potatoes or carrots. It is not suitable for blending hard or uncooked foods, as this will damage the blender attachment.

**STEP 1:** Before connecting the blender to the mains power supply, carefully attach the blender attachment onto the blender unit by pushing down until it clicks into place.

**STEP 2:** Place the food to be blended into a mixing jug, and plug in and switch on the blender at the mains power supply.

**STEP 3:** Insert the blender attachment into the mixing jug and then press and hold the desired soft-touch speed button.

**STEP 4:** Slowly move the blender attachment up and down in the mixture to blend the food evenly. Release the soft-touch speed button once blending is complete.

**STEP 5:** After use, remove the blender attachment from the blender unit by pulling them apart whilst holding down the attachment release buttons.

**Note:** Whilst mixing liquid, especially hot liquid, use a tall container or blend small quantities at a time to reduce spillage, splattering and the possibility of injury from scalding.

**Warning:** Do not use the blender attachment to blend very hot or boiling liquid, as this may cause injury.

When placing food into a mixing jug, take care not to overfill it in order to avoid spillages.

Switch off and unplug the blender from the mains power supply before attempting to remove the blender attachment and before cleaning.

## Troubleshooting

Problem	Possible Cause	Solution
The blender will not operate.	The blender is not connected to the mains power supply.	Plug in and switch on the blender at the mains power supply.
The blades will not move when in contact with ingredients.	The ingredients are hard vegetables such as potato, carrot and turnip, making it difficult for the blender to blend.	Only blend ingredients such as cooked vegetables or soft fruit.

## Storage

Reassemble the blender.

Check that the blender is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the blender; wrap it loosely to avoid causing damage.

## Specifications

Product code: EK2827RV2  
Input: 220–240 V ~ 50/60 Hz

Output: 250 W/350 W



## Recipes

\*Any recipe images used in this instruction manual are intended for illustrative purposes only.

## Raspberry Sparkle

### Ingredients

Handful of raspberries

Glass of sparkling wine or champagne

Frozen yoghurt or vanilla ice cream, to taste

### Method

Place all of the ingredients into a mixing jug and blend until smooth.

## Strawberry Smoothie

### Ingredients

Handful of strawberries, chopped

1 small pot of vanilla yoghurt

1 small, ripe banana

100 ml skimmed milk

### Method

Place all of the ingredients into a mixing jug and blend until smooth; garnish with a strawberry.

## Fresh Pineapple Juice

### Ingredients

Approx. ½ a pineapple, cut into chunks

### Method

Place all of the ingredients into a mixing jug and blend until smooth. If the smoothie is too thick, add water until the desired consistency is achieved.

## Cold Tomato Soup

### Ingredients

225 g sweet cherry tomatoes

1 garlic clove

100 ml hot water

2 tbsp soured cream

Herbs, to season (e.g. basil or parsley)

Tabasco or any other chilli sauce (optional)

Salt and pepper, to taste

### Method

Fill a mixing jug with the cherry tomatoes, add the hot water and blend until smooth.

Add the garlic, herbs and soured cream and blend for a further 10 seconds.

Season to taste with salt, pepper and Tabasco sauce, if desired.

## Omelette

### Ingredients

50 g grated cheese (optional)

2 medium eggs

½ green pepper, finely chopped

2 tsp milk

Salt and pepper, to taste

### Method

Blend the eggs with the milk in a mixing jug and then pour the mixture into a greased frying pan on a low heat, stirring frequently.

Add the green pepper to the frying pan after approx. 2 minutes and cook until the omelette is firming.

Fold the omelette in half using a non-stick, heat-resistant spatula.

Season to taste with salt, pepper and cheese, if desired.

## Salad Dressing

### Ingredients

2–3 tbsp olive oil

(or ½ olive oil and ½ sunflower oil)

2 tsp French Dijon mustard

1 tsp white wine vinegar

Salt and pepper, to taste

### Method

Place all of the ingredients into a mixing jug and blend until smooth.



## Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

#### Blue Neutral (N)

#### Brown Live (L)

**FOR UK USE ONLY** - Plug fitting details (where applicable).


The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ( $\perp$ ). Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

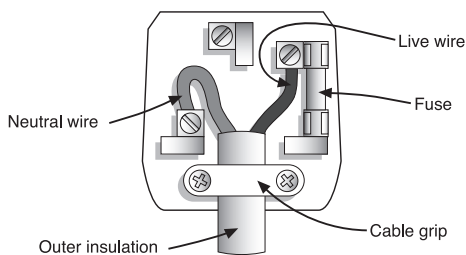

## Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

**Telephone:** 0161 934 2240\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

**Email:** [customercare@upgs.com](mailto:customercare@upgs.com)

**Fax:** 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



\*To be eligible for the extended guarantee, go to **www.saltercookshop.com** and register your product within 30 days of purchase.



Find us on 

[www.facebook.com/SalterCookshop](http://www.facebook.com/SalterCookshop)

# SALTER<sup>®</sup>

Manufactured by:

UP Global Sourcing UK Ltd.,  
Victoria Street,  
Manchester OL9 0DD. UK.

Made in China.



CD060919/MD000000/V1