

SALTER®

SINCE 1760

Coffee Maker and Hot Water Dispenser

Brew coffee and dispense
hot water at the same time



SALTER®

Coffee Maker and Hot Water Dispenser

**Brew coffee and dispense
hot water at the same time**

CONTENTS	PAGE
Safety Instructions	3–5
Care and Maintenance	5
Removing Limescale	5–6
Getting Started	6
In the Box	6
Features	6
Description of Parts	7
Instructions for Use	8
Before First Use	8
Preparing Coffee	8
Preparing Hot Water	8
Using the Coffee Maker and Hot Water Dispenser	9–10
Using the Set Time Function	10
Using the Programme Time Function	10
Hints and Tips	10–11
Storage	11
Troubleshooting	11–12
Specifications	12
Wiring Page	13
Guarantee	14–15

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the supply cord, plug or any part of the appliance is malfunctioning, or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from heat emitting appliances.

Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped, if there are visible signs of damage or of it is leaking.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance when it is in use.

Do not place boiling water or very hot liquid in the appliance.

Do not fill the appliance above its max. fill mark. Overfilling the appliance may cause boiling water to be ejected.

Do not touch any sections of the appliance that may become hot during use, as this may cause injury.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface of the appliance may get hot during operation.

The heating element will remain hot after use.

Misuse of the appliance can lead to potential injury. Prior to connecting or disconnecting the appliance from the mains power supply, ensure that all controls are switched off. Scalding may occur if the filter basket is opened during the brewing cycle.



Caution: Hot surface – do not touch the hot section or heating components of the appliance.

Warning: Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance.

Keep the appliance away from flammable materials.

The appliance will become very hot during use; do not touch the appliance and always take care when handling.

Care and Maintenance

Before attempting any cleaning or maintenance, unplug the coffee maker from the mains power supply and allow it to cool fully.

STEP 1: Wipe the coffee maker main body with a soft, damp cloth and allow to dry thoroughly.

Do not immerse the coffee maker main body in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the coffee maker as this could cause damage.

STEP 2: Wash the reusable coffee filter, filter basket and filter support in warm, soapy water, then rinse and dry thoroughly before replacing inside the coffee maker.

STEP 3: Clean the glass coffee jug in warm, soapy water. Rinse and dry thoroughly before storing.

Removing Limescale

Limescale can develop over time and may affect the performance and lifespan of the coffee maker.

It is recommended to descale the coffee maker regularly, at least once every three months, especially if the coffee maker is used in a hard water area. Frequent descaling will improve the performance and lifespan of the coffee maker.

STEP 1: Fill the coffee maker reservoir to the max. fill mark with cold water.

STEP 2: Add a commercial descaling agent to the coffee maker side water reservoir, adhering to the manufacturer's instructions. It is not recommended to use vinegar to descale the coffee maker.

STEP 3: Run the coffee maker until it has cycled around 2 cups' worth of water. Switch off, leave to soak for approx. 15 minutes, and then switch on again. Repeat until all the water has been cycled.

STEP 4: Empty the glass coffee jug. Refill the coffee maker side reservoir to the max. fill mark with clean water. Run the coffee maker at least twice more and pour the water away once it has cooled. The coffee maker should now be descaled, clean, and ready for use. If any traces of descaling product residue remains, run more clean water through the coffee maker until it is completely clean.

If the coffee maker switches off before it has boiled or a white deposit is noticed on the inside of the coffee maker, it needs to be descaled.

Getting Started

Remove the coffee maker from the box.

Remove any packaging from the coffee maker.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Coffee Maker and Hot Water Dispenser
Reusable coffee filter
Filter basket

Filter support
1.5 litre tempered glass coffee jug
Instruction manual

Features

1900 W power
2 in 1 – make coffee and dispense hot water at the same time
Digital control panel with 24-hour programmable timer
Brew strength selector – coffee tailored

to taste
Glass carafe
Large 900 ml water reservoir
Removable drip tray
2-hour auto shut-off

Description of Parts



- | | |
|---|-----------------------------------|
| 1. Coffee Maker and Hot Water Dispenser main body | 10. Hot water side reservoir |
| 2. Coffee side water reservoir | 11. Hot water side reservoir lid |
| 3. Coffee side water reservoir lid | 12. Hot water dispenser lever |
| 4. Coffee water fill indicator | 13. Hot water control panel |
| 5. Power button with indicator light (blue) | 14. Ready indicator light (green) |
| 6. Coffee maker control panel | 15. Keep warm plate |
| 7. Reusable coffee filter | 16. Glass coffee jug |
| 8. Filter basket | 17. Drip tray cover |
| 9. Filter support | 18. Hot water plug |

Note: The hot water plug is located on the bottom of the Coffee Maker and Hot Water Dispenser main body.

Instructions for Use

Before First Use

STEP 1: Before using the coffee maker for the first time, remove the glass coffee jug and accessories and wash them in warm, soapy water, then rinse and dry thoroughly.

STEP 2: Wipe the coffee maker main body with a soft, damp cloth and allow to dry thoroughly. Do not immerse the coffee maker main body in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the coffee maker, as this could cause damage.

STEP 3: Fill the coffee side water reservoir and run a brewing cycle without coffee several times using clean water, following the instructions in the section entitled 'Using the Coffee Maker and Hot Water Dispenser'. This will remove any residue from the internal components.

STEP 4: Fill the hot water reservoir and run a heating cycle several times using clean water, following the instructions in the section entitled 'Using the Coffee Maker and Hot Water Dispenser'. This will remove any residue from the internal components.

Note: When using the coffee maker for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the coffee maker.

Preparing Coffee

STEP 1: Remove the reusable coffee filter from the filter basket by gently pulling it upwards.

STEP 2: Pour cold water into the coffee side water reservoir until the desired level is reached. The volume fill line can be used as reference to the amount of cups of coffee that can be produced.

STEP 3: Add the desired amount of finely ground or regular ground coffee to the reusable coffee filter. One level spoonful should make one cup of coffee. More or less coffee can be used, to taste. Close the filter basket lid.

STEP 4: Secure the reusable coffee filter onto the filter basket by aligning the tabs and clicking into position. Place the glass coffee jug onto the keep warm plate, then rotate in an anticlockwise direction to secure. The hole in the glass coffee jug lid and the hole in the bottom of the filter basket need to be level with each other before use.

Preparing Hot Water

STEP 1: Attach the drip tray cover onto the drip tray.

STEP 2: Pour cold water into the hot water side reservoir until the desired level is reached. Close the hot water side reservoir lid.

Using the Coffee Maker and Hot Water Dispenser

STEP 1: Plug in and switch on the coffee maker at the mains power supply.

Set the brewing option to the preferred setting and then press the power button; the indicator light will illuminate blue to signal that the coffee maker is in operation. Press the power button on the hot water control panel and allow the water to heat up; hot water will be ready for use when the ready indicator light illuminates green. The brewing and heating process can take several minutes and will depend upon the volume of water added to each respective water reservoir.

STEP 2: Once all of the coffee has dripped from the filter basket into the glass coffee jug and the brewing cycle is complete, remove the glass coffee jug from the keep warm plate. It is recommended to wait 1–2 minutes before doing this to allow the coffee maker to cool and let any excess water drip into the glass coffee jug. Take care when handling, as the glass coffee jug is likely to have become hot during operation.

STEP 3: Carefully serve the coffee, as desired; grip the glass coffee jug by the handle only. For hot water, secure the glass coffee jug or an appropriate container onto the drip tray and press down the hot water release lever until the desired amount has been dispensed.

Tip: Both the coffee and hot water functions can be used simultaneously.

Note: The anti-drip feature will prevent water from dripping onto the keep warm plate when the glass coffee jug is removed. Make sure that the glass coffee jug is replaced within 30 seconds to avoid water dripping onto the keep warm plate.

The amount of coffee produced will be slightly less than the amount of cold water poured into the coffee side water reservoir, as the coffee grounds will retain some water. Gently shake the reusable coffee filter to evenly distribute the coffee. Do not overfill the coffee filter.

Caution: Before connecting to the mains power supply, position the coffee maker onto a flat, stable, heat-resistant surface at a height that is comfortable for the user.

Check that all of the accessories are in place.

Do not switch on the coffee maker without any water in the water reservoirs.

Do not open either of the water reservoir lids during the brewing cycle, as this will allow steam to escape and could cause scalding or burns.

Warning: Allow the coffee maker to cool for approx. 3 minutes before using again. If the coffee maker does not cool completely before reuse, water placed in the water reservoir may overheat. This will allow hot steam to escape, which could injure the user.

Keep hands well away of hot water when using hot water dispenser.

Using the Set Time Function

To set the current time: Press the '**H**' (hour) button until the current hour (AM/PM) is displayed. Press '**M**' (Minute) button until the current minute is displayed.

Using the Programme Time Function

STEP 1: Whilst holding the '**PROG**' (PROGRAMME) button, press down '**H**' and '**M**' until the desired brewing time is reached.

STEP 2: Once the desired brewing time has been set, release the '**PROG**' button. The set time will then be displayed.

STEP 3: Press down the '**PROG**' button for coffee or hot water to come on automatically at the set time. The '**PROG**' button will illuminate green when the programme time has been set. If required, press down '**PROG**' to cancel the set time.

Note: Both coffee and hot water program times can be set either independently or at the same time, if preferred.

Hints and Tips

1. Always use fresh, cold water to fill the water reservoirs.
2. The quantity of ground coffee can be adapted to suit taste. For stronger coffee, increase the amount of coffee and set to the BOLD strength option. Alternatively, use less coffee grounds for weaker coffee.
3. If using regular ground coffee, more is needed per cup to achieve the same strength as finer ground coffee.
4. After using packaged ground coffee, tightly reseal it and store the unused ground coffee in a cool, dry place.
5. To achieve optimum coffee taste, use whole coffee beans and finely grind them before brewing.

6. Do not reuse ground coffee or loose tea that has already been used in the coffee maker, as this will greatly reduce the flavour of the coffee.
7. Reheating coffee is not recommended, as it interferes with the taste.

Storage

The coffee maker must be cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the coffee maker; wrap it loosely to avoid causing damage.

Troubleshooting

Problem	Possible Cause	Solution
The brew basket overflows or coffee brews slowly.	Excessive amounts of ground coffee have been used.	Remove some of the coffee from the reusable coffee filter and clean the filter appropriately.
	Decaffeinated and/or coffee has been ground too finely and may cause overflow.	Use slightly less ground coffee when brewing decaffeinated, flavoured, or finely ground coffee.
If using a paper filter: Coffee grounds have gotten between the paper filter and brew basket.	The paper filter is not open or in the proper position.	Rinse the brew basket and reinsert the paper filter so that the edges remain pressed against the side of the basket.
	Poor quality filter paper.	Use a different brand of filter paper.

Coffee tastes poor.	<p>The Coffee Maker and Hot Water Dispenser is dirty.</p> <p>The coffee used is ground too finely or too coarsely.</p> <p>Coffee-to-water ratio unbalanced.</p> <p>Poor coffee quality and freshness.</p> <p>Poor water quality.</p>	<p>Clean the Coffee Maker and Hot Water Dispenser.</p> <p>Use medium ground coffee.</p> <p>Adjust for personal preference.</p> <p>Use a new batch of or fresher coffee.</p> <p>Use medium ground coffee. Fill the Coffee Maker and Hot Water Dispenser from a different source.</p>
Coffee will not brew and the Coffee Maker and Hot Water Dispenser will not turn on.	<p>The water reservoir is empty.</p> <p>The Coffee Maker and Hot Water Dispenser is unplugged.</p> <p>There is a power outage.</p> <p>There has been a power surge.</p>	<p>Fill the water reservoir.</p> <p>Plug in the Coffee Maker and Hot Water Dispenser.</p> <p>Unplug the Coffee Maker and Hot Water Dispenser and plug back in.</p>
The attachments will not move when in contact with ingredients.	The mixture is too dry.	Add liquid to the mixture.

Specifications

Product code: EK3599EGFOB

Operating voltage: 220–240 V ~ 50/60 Hz

Power: 1600 – 1900 W

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.


The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked \perp .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

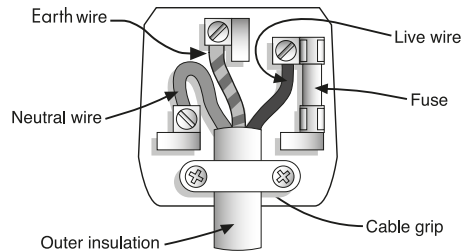

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2240*

*Telephone dots are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



3
YEAR

GUARANTEE*

*To be eligible for the extended guarantee, go to www.saltercookshop.com and register your product within 30 days of purchase.



Find us on 

www.facebook.com/SalterCookshop



Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester OL9 0DD. UK.

Made in China.



SALTER®

CD190919/MD000000/V1



**ULTIMATE PRODUCTS
HOME OF BRANDS**


Manchester
OL9 0DD
United Kingdom
www.upgs.com

t: +44 (0) 161 627 1400
f: +44 (0) 161 628 2126

hk: +852 6681 9752

cn: +86 1 3417586804

Artworker:	Rachel Hart
Date:	22/10/2019
Project Name:	EEK193705 EXG EK3599EGFOB IM
Type of Artwork:	Instruction Manual
Size:	A5 16 PP
Software Used:	Indesign CC
Typefaces:	Century Gothic, PR8 Charade

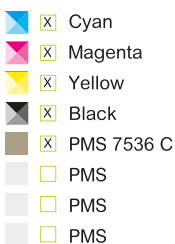

Artwork Version 4

Artwork Scale 1:1

©2019 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE
ARTWORK REFERENCE ONLY