


SALTER®

SINCE 1760

Mini Processor Pro

Making light work of mealtimes

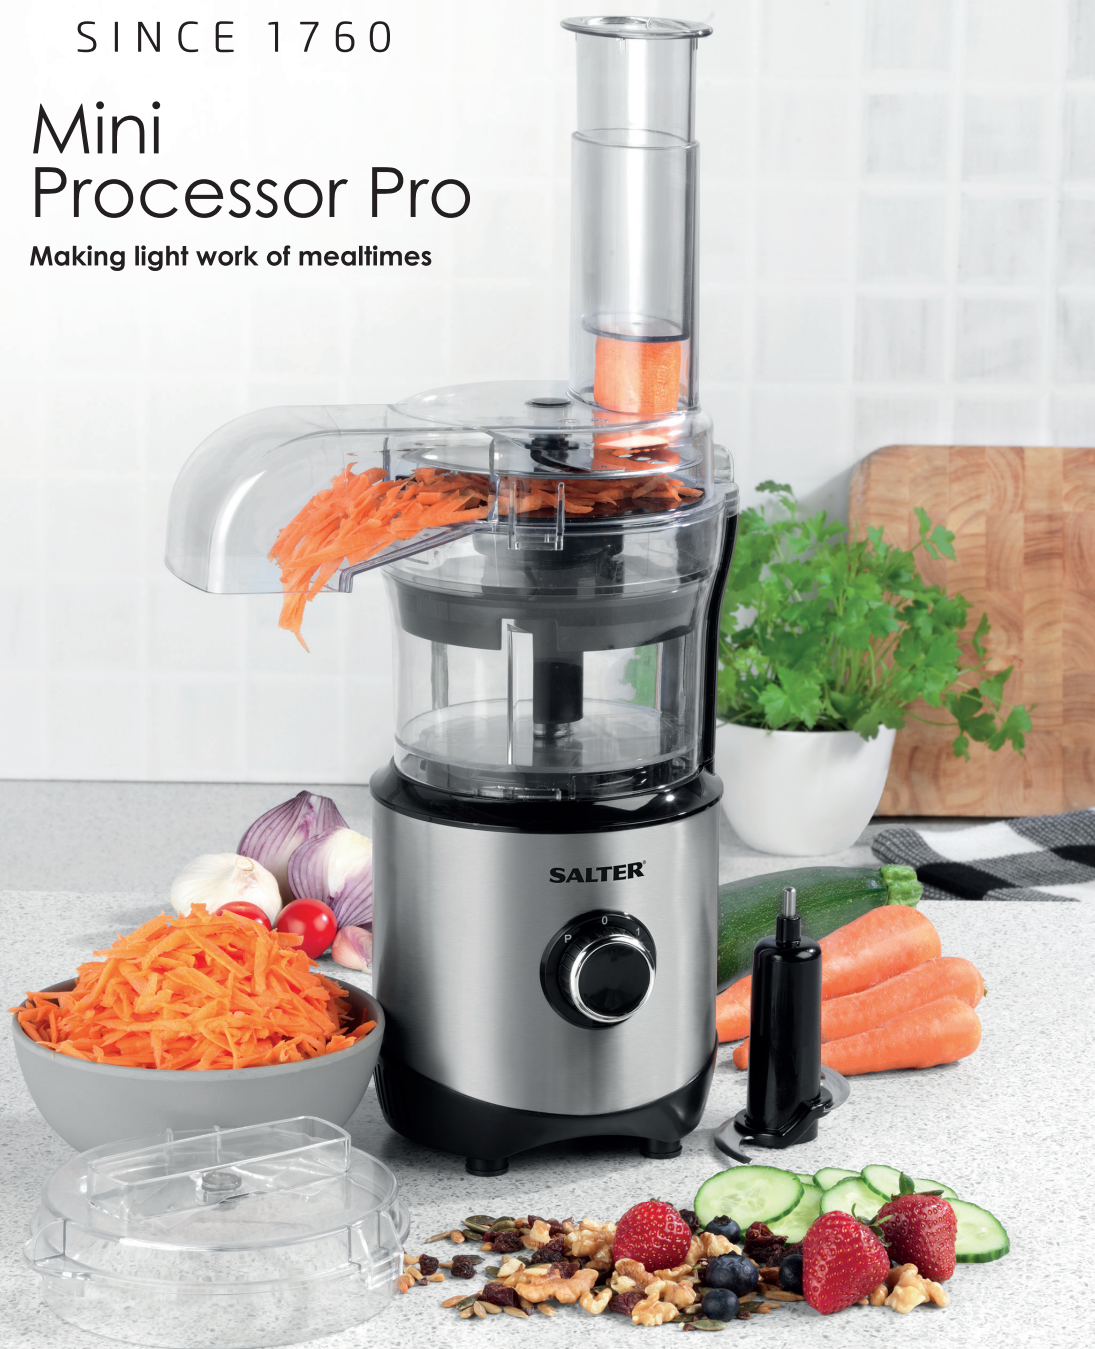

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not immerse the appliance in water or any other liquid.
Do not operate the appliance with wet hands.
Do not use broken or loose cutting or rotating blades.
Do not overload the appliance as the mixture level may rise during blending.
Do not leave the appliance unattended whilst connected to the mains power supply.
Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
Do not use the appliance for anything other than its intended use.
Do not use any accessories other than those supplied.
Do not use this appliance outdoors.
Do not store the appliance in direct sunlight or in high humidity conditions.
Do not move the appliance whilst it is in use.
Do not place boiling water or very hot liquid in the appliance.
Always unplug the appliance after use and before any cleaning or user maintenance.
Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
Use of an extension cord with the appliance is not recommended.
This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.
This appliance is intended for domestic use only. It should not be used for commercial purposes.
Warning: The chopping blades and reversible slicing/shredding disc are very sharp; handle with care.

Care and Maintenance

Before attempting any cleaning or maintenance, switch off and unplug the appliance from the mains power supply and allow it to cool fully.

Wipe the main unit with a soft, damp cloth and allow to dry thoroughly.

Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Handle the chopping blades and disc with care. Using extreme caution, clean the blades with a brush and dry carefully.

Do not immerse the Mini Processor Pro main unit in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the Mini Processor Pro, as this could cause damage.

Note: The Mini Processor Pro should be cleaned after each use.

Warning: Handle the chopping attachments with care, as the blades are sharp. Exercise caution when attaching, removing, cleaning or storing any attachments.

Description of Parts



1. Mini Processor Pro base unit
2. Variable speed dial
3. Safety lock
4. Processor bowl
5. Processor lid
6. Drizzle hole
7. Chopper blade

8. Direct serve lid
9. Food outlet
10. Reversible slicing/shredding disc
11. Direct serve adaptor
12. Food pusher
13. Rubber feet
14. Feeding chute

Instructions for Use

Before First Use

Wash all of the attachments in warm, soapy water, then rinse and dry thoroughly. Wipe the Mini Processor Pro main unit with a soft, damp cloth and allow to dry thoroughly.

Note: When using the Mini Processor Pro for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the food processor.

Using the Mini Processor Pro

All attachments must be securely fitted before use; do not attempt to remove them until the blades have stopped moving.

STEP 1: Switch off and unplug the food processor from the mains power supply.

STEP 2: Position the Mini Processor Pro base unit onto a flat, stable surface, at a height that is comfortable for the user; check that the rubber feet are firmly planted so that the appliance does not wobble during use.

STEP 3: Place the processor bowl onto the Mini Processor Pro base unit, aligning the tabs and rotating the processor bowl in a clockwise direction until it locks into place.

STEP 4: Select the chosen attachment and fit the corresponding lid.

- For the chopper blade, insert directly into the processor bowl, then add the food to be chopped taking care not to exceed the max. fill line. Fit the processor lid; secure by aligning the tabs and then twisting it in a clockwise direction until it locks into position. Oil can be added using the drizzle hole in the top of the processor lid.
- For the slicing/shredding disc, fit the direct serve adaptor into the food processor bowl then place the disc on top, with the desired side facing upwards. Place the direct serve lid onto the bowl and twist clockwise to lock into position. Place a bowl under the food outlet. Add the food to be sliced/shredded via the feeding chute. Do not use fingers to push food down the feeding chute; only use the food pusher.

STEP 5: Plug in and switch on the Mini Processor Pro at the mains power supply.

STEP 6: Holding the unit steady, turn the variable speed dial clockwise to the required speed setting (1–2) or anticlockwise to activate the pulse (P) setting, until the food is chopped to the preferred size.

The pulse setting provides quick bursts of speed; hold the variable speed dial in place to activate the motor and release to stop it.

Turn the speed dial back to '0' and wait for the blades to stop rotating before removing the lid.

STEP 7: To remove the processor bowl from the base unit, remove the lid and carefully remove the chopping attachment. Twist the processor bowl anticlockwise and pull it away from the Mini Processor Pro base unit.

Caution: Switch off and unplug the Mini Processor Pro from the mains power supply before adding or removing food from the processor bowl.

Warning: Do not operate the Mini Processor Pro without food, as this can cause damage.

Do not use fingers to push food down the feeding chute; only use the food pusher.

Max. operation time is 1 minute. Allow to cool for 2 minutes before using again.

Storage

Check that the Mini Processor Pro and its accessories are cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the food processor; wrap it loosely to avoid causing damage.

Troubleshooting

Problem	Possible Cause	Solution
The Mini Processor Pro will not operate.	The Mini Processor Pro is not connected to the mains power supply. The Mini Processor Pro is not correctly assembled.	Plug in and switch on the Mini Processor Pro at the mains power supply. Check that the Mini Processor Pro has been properly assembled and that the processor bowl and lid are secured into place.
Dry ingredients are clumping together.	The processor bowl is wet.	Dry the processor bowl thoroughly before adding ingredients.
There are large unchopped chunks of ingredients after processing.	The processor bowl has been overfilled.	Remove some of the ingredients and chop in batches.
Food is not exiting the food outlet.	The food outlet or slicing/shredding disc is blocked.	Switch off the Mini Processor Pro and unplug from the mains power supply. Check that food is not clogging under the disc. Clear any trapped food before continuing.

Specifications

Product code: EK4244

Input: 220–240 V ~ 50/60 Hz

Output: 300 W

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.


The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

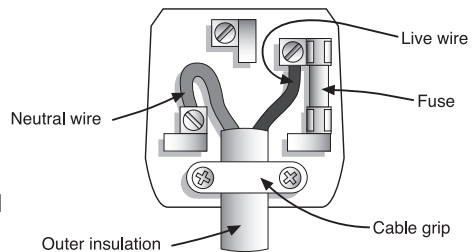

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.saltercookshop.com**.

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



*To be eligible for the extended guarantee,
go to **www.saltercookshop.com** and register
your product within 30 days of purchase.



Find us on 

www.facebook.com/SalterCookshop

SALTER[®]

Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester OL9 0DD. UK.

Made in China.

CD300620/MD000000/V1