

SALTER®

SINCE 1760

Coffee and Spice Grinder

Grind fresh coffee beans, nuts and spices



Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not use broken or loose cutting or rotating blades.

Do not overload the appliance; only fill up to the maximum level marked on the appliance as the mixture level may rise during blending.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not place boiling water or very hot liquid in the appliance.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: Do not touch sharp blades.

Care and Maintenance

STEP 1: Before attempting any cleaning or maintenance, switch off and unplug the coffee grinder from the mains power supply.

STEP 2: Wipe the coffee grinder base unit with a soft, damp cloth and allow to dry thoroughly. Do not immerse the coffee grinder base unit in water or any other liquid.

STEP 3: Clean the accessories in warm, soapy water, then rinse and dry thoroughly.

Note: Always clean the coffee grinder immediately after each use. Not suitable for dishwasher use.

Warning: Handle the stainless steel blade with care, as the blades are extremely sharp. Exercise caution when cleaning the stainless steel blade.

Description of Parts



- | | |
|---------------------------------------|--------------------------|
| 1. Coffee and Spice Grinder base unit | 4. Stainless steel bowl |
| 2. Power button | 5. Stainless steel blade |
| 3. Transparent lid | |

Before First Use

STEP 1: Switch off and unplug the coffee grinder from the mains power supply.

STEP 2: Wipe the coffee grinder base unit with a soft, damp cloth and dry thoroughly.

STEP 3: Clean the accessories in warm, soapy water, then rinse and dry thoroughly. Do not immerse the coffee grinder maker in water or any other liquid.

Note: When using the coffee grinder for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the coffee grinder.

Using the Coffee and Spice Grinder

STEP 1: Place the coffee grinder onto a flat, stable surface at a height that is comfortable for the user.

STEP 2: Remove the transparent lid from the coffee grinder base unit by rotating it in an anticlockwise direction and lifting it off.

STEP 3: Add up to 60 g of coffee beans, spices or nuts into the stainless steel bowl.

STEP 4: Fit the lid back onto the coffee grinder base unit and twist it in a clockwise direction, until secure.

STEP 5: Plug in and switch on the coffee grinder at the mains power supply.

STEP 6: Press the 'Power' button to begin grinding.

STEP 7: Stop the grinding process by pressing the 'Power' button once more.

STEP 8: Once grinding is complete, switch off and unplug the coffee grinder from the mains power supply.

STEP 9: Remove the transparent lid and transfer the ground coffee, spices or nuts into a suitable container, ready for use or storage.

Caution: Only grind dry ingredients; grinding wet ingredients may cause damage to the coffee grinder. Do not overfill the stainless steel bowl.

Warning: Maximum operation time is approx. 30 seconds. Allow to cool before using the coffee grinder again.

Storage

Check that the coffee grinder is cool, clean and dry before reassembling, then store in a cool, dry place.

Never wrap the cord tightly around the coffee grinder; wrap it loosely to avoid causing damage.

Specifications

Product code: EK2311

Operating voltage: 220–240 V~50/60 Hz

Power: 200 W

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.


The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

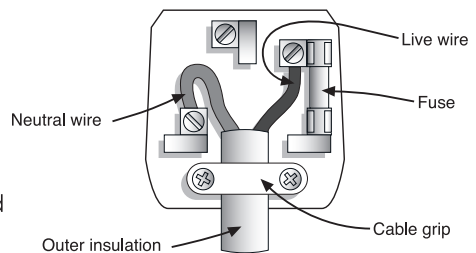

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.saltercookshop.com**.

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



*To be eligible for the extended guarantee, go to **www.saltercookshop.com** and register your product within 30 days of purchase.



Find us on 

www.facebook.com/SalterCookshop

SALTER[®]

Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester OL9 0DD. UK.

Made in China.



CD030820/MD070820/V2