

# SALTER<sup>®</sup>

SINCE 1760

## Electric Citrus Juicer

The quick and easy way  
to create fresh juices



Please read all of the instructions carefully and retain for future reference.

## Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm. Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not place boiling water or very hot liquid in the appliance.

Do not overload the appliance.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

## Care and Maintenance

**STEP 1:** Switch off and unplug the citrus juicer from the mains power supply before performing any cleaning or user maintenance.

**STEP 2:** Wipe the citrus juicer base unit with a soft, damp cloth and allow to dry thoroughly.

**STEP 3:** Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

**Caution:** Never immerse the citrus juicer base unit in water or any other liquid.

Do not use harsh or abrasive scourers to clean the citrus juicer, as this could cause damage.

The citrus juicer is not suitable for use in a dishwasher.

Always clean the citrus juicer immediately after each use.

**Warning:** Exercise caution when attaching, removing, cleaning or storing the attachments.

## Description of Parts



- |                                     |                    |
|-------------------------------------|--------------------|
| 1. Electric Citrus Juicer base unit | 6. Filter basket   |
| 2. Juicer jug                       | 7. Filter adjuster |
| 3. Small juicing cone               | 8. Lid             |
| 4. Large juicing cone               | 9. Spout           |
| 5. Accessory adaptor                | 10. Motor shaft    |

## Instructions for Use

### Before First Use

Before using the juicer for the first time, wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Wipe the juicer base unit with a soft, damp cloth and dry thoroughly.

Do not immerse the juicer base unit in water or any other liquid.

**Note:** When using the juicer for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the juicer.

## Assembling the Electric Citrus Juicer

**STEP 1:** Place the citrus juicer base unit on a flat, stable surface. Make sure that it is unplugged from the mains power supply.

**STEP 2:** Fit the accessory adaptor onto the motor shaft so that the tabs align and it clicks into place.

**STEP 3:** Position the citrus juicer jug onto the citrus juicer base unit, aligning the tabs and rotating until it locks.

**STEP 4:** Assemble the filter basket by aligning the filter adjuster with the slot and pushing until it clicks into place. Place the filter basket into the citrus juicer base unit, lining up the tab with the handle.

**STEP 5:** Place the small juicing cone onto the accessory adaptor. If required, place the large juicing cone on top of the small juicing cone, making sure that the indents are aligned.

**Warning:** Do not plug in the citrus juicer until it is fully assembled.

## Using the Electric Citrus Juicer

**STEP 1:** Place the citrus juicer onto a flat, stable surface.

**STEP 2:** Prepare the citrus fruit by cutting it in half.

**STEP 3:** Select the setting for the filter basket using the filter adjuster; for a smoother juice with less pulp, use a smaller filter setting.

**STEP 4:** Plug in and switch on the citrus juicer at the mains power supply; do not plug in the citrus juicer until it is fully assembled.

**STEP 5:** Press the citrus fruit onto the juicing cone; when pressure is applied, the juicing cone will rotate and juice the fruit.

**STEP 6:** Switch off and unplug the citrus juicer from the mains power supply.

**STEP 7:** Remove the juicing cone and the filter basket from the jug by lifting them away.

**STEP 8:** Remove the juicing jug from the citrus juicer base unit by rotating it in an anticlockwise direction and lifting it away. Serve the juice fresh.

**Note:** Check that the citrus juicer is fully assembled before use.

Always clean the citrus juicer after use.

The filter basket can be disassembled by pressing the filter adjuster down and pulling the two parts apart.

**Warning:** Only use the citrus juicer with citrus fruit; do not press hands directly onto the juicing cone.  
Do not juice for long amounts of time. max. operation time is 15 seconds; allow the citrus juicer to cool for 15 seconds before using it again.  
Make sure that all pulp is removed; if pulp begins to build up, stop juicing, switch off and unplug the citrus juicer from the mains power supply and remove the pulp.  
Do not operate the citrus juicer if any of the accessories are damaged.

### **Storage**

Reassemble the citrus juicer.

Check that the citrus juicer is cool, clean and dry before storing in a cool, dry place.

### **Specifications**

Product code: EK3071

Operating voltage: 220–240 V ~ 50/60 Hz

Power: 25 W



## Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

#### Blue Neutral (N)

#### Brown Live (L)

**FOR UK USE ONLY** - Plug fitting details  
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.


The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

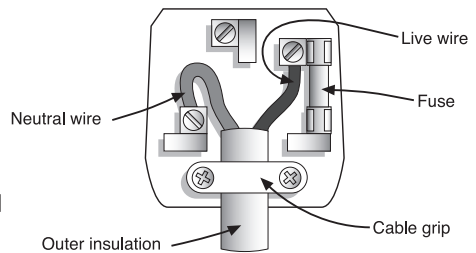

### Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



**UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at [www.saltercookshop.com](http://www.saltercookshop.com)

Please have your delivery note to hand as details from it will be required.  
If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

### **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



\*To be eligible for the extended guarantee, go to **www.saltercookshop.com** and register your product within 30 days of purchase.



Find us on 

[www.facebook.com/SalterCookshop](http://www.facebook.com/SalterCookshop)

# SALTER®

Manufactured by:

UP Global Sourcing UK Ltd.,  
Victoria Street,  
Manchester OL9 0DD. UK.

Made in China.

