

# SALTER®

SINCE 1760

## CAFFÈ Burr Coffee Grinder

High-quality **burr** grinding  
for coffee lovers



Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Only blend dry ingredients, blending liquids will cause damage to the appliance

Do not overload the appliance as the mixture level may rise during blending.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not use broken or loose cutting or rotating blades.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

**Warning:** Do not touch sharp blades.

## Care and Maintenance

**STEP 1:** Switch off and unplug the coffee grinder from the mains power supply before performing any cleaning or user maintenance.

**STEP 2:** Wipe the coffee grinder main unit with a soft, damp cloth and allow to dry thoroughly. Never immerse the coffee grinder base unit in water or any other liquid.

**STEP 3:** Clean the accessories in warm, soapy water, then rinse and dry thoroughly.

Never touch the blades; using extreme caution, clean the blade with a brush and dry carefully.

Do not use harsh or abrasive scourers to clean the coffee grinder, as this could cause damage.

**Note:** Always clean the Coffee Grinder immediately after each use. The Coffee Grinder and accessories, are not suitable for use in a dishwasher.

**Warning:** Keep hands away from the stainless steel blades during use, as the blades are extremely sharp. Exercise caution when attaching, removing, cleaning or storing the attachments.



## **Dos and Don'ts**

### **Do:**

Make sure the coffee grinder lid is securely fitted before use; do not attempt to remove the coffee grinder lid until the blades have stopped moving. This will help to avoid injury and preserve the flavour and aroma of the coffee.

Only grind the amount of coffee required at the time.

Clean the coffee grinder, coffee grinder lid, removable container and grinding wheel after each use.

### **Don't:**

Leave ground coffee in the coffee grinder as it will become stale which may affect its flavour.

Overfill the coffee grinder.

The coffee grinder can only handle dry ingredients. Do not attempt to grind oily or hard ingredients (e.g. rice).

**Warning:** Do not grind for long periods of time. Never operate the coffee grinder when the coffee grinder is empty, cracked or broken.

## Description of Parts



1. Coffee Grinder main unit
2. Removable container
3. Removable container lid
4. Safety Switch
5. Variable grind selector
6. Cup selector dial

7. Indicator light
8. Power button
9. Coffee grinder
10. Coffee grinder lid
11. Grinding wheel

## Instructions for Use

### Before First Use

Clean the coffee grinder and its accessories according to the instructions outlined in the section entitled 'Care and Maintenance'.

**Note:** When using the coffee grinder for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the coffee grinder.

### Assembling the Coffee Grinder

**STEP 1:** Align the groove on the removable container to the coffee grinder main unit and slide into position until secure.

**STEP 2:** Align the tabs on the grinding wheel with the indents on the inside of the coffee grinder and drop into place. Twist the coffee grinding wheel in an anticlockwise direction until it clicks.

**STEP 3:** Align the tabs on the coffee grinder with the indents on the top of the coffee grinder and slot into position. Twist the coffee grinder in an anticlockwise direction until it clicks.

**STEP 4:** Secure the coffee grinder lid to the top of the coffee grinder.

### Using the Coffee Grinder

**STEP 1:** Place the coffee grinder onto a flat, stable surface at a height that is comfortable for the user.

**STEP 2:** Remove the coffee grinder lid by lifting away from the coffee grinder main unit.

**STEP 3:** Add up to 250 g of coffee beans into the grinder.

**STEP 4:** Refit the coffee grinder lid to the top of the coffee grinder.

**STEP 5:** Plug in and switch on the coffee grinder at the mains power supply.

**STEP 6:** Select the desired coffee grind consistency using the variable grind selector. Twist in a clockwise direction for a finer blend; twist in an anticlockwise direction for a coarser blend.

**STEP 7:** To increase the number of cups required, twist the cup selector dial in a clockwise direction. Alternatively, twist in an anticlockwise direction to reduce the number of cups. The more cups selected on the cup selector dial, the longer the coffee

grinder will operate.

**STEP 8:** Press the power button to begin grinding. Stop the grinding process by pressing the Power button again.

**STEP 9:** Once grinding is complete, switch off and unplug the coffee grinder from the mains power supply.

**STEP 10:** Remove the removable container by pulling it away from the coffee grinder main unit. Remove the removable container lid and transfer the ground coffee into a suitable vessel, ready for use or storage.

**Caution:** Only grind dry coffee; grinding wet ingredients may cause damage to the coffee grinder.

Do not overfill the coffee grinder.

**Warning:** Max. operation time is 30 seconds. Allow to cool for 30 seconds before using the coffee grinder again.

## Storage

Check that the coffee grinder is cool, clean and dry before reassembling, then store in a cool, dry place.

Never wrap the cord tightly around the coffee grinder; wrap it loosely to avoid causing damage.

## Specifications

Product code: EK4367

Operating voltage: 220–240 V~50/60 Hz

Power: 200 W

## Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

**Blue Neutral (N)**

**Brown Live (L)**

**FOR UK USE ONLY** - Plug fitting details (where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.


The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

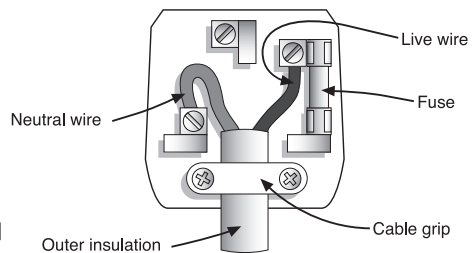

### Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,  
UK. Manchester OL9 0DD.  
Germany. Köln 51149.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **[www.saltercookshop.com](http://www.saltercookshop.com)**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





\*To be eligible for the extended guarantee, go to **www.saltercookshop.com** and register your product within 30 days of purchase.



Find us on 

[www.facebook.com/SalterCookshop](https://www.facebook.com/SalterCookshop)

# SALTER®

Manufactured by:

UP Global Sourcing UK Ltd.,  
**UK.** Manchester OL9 0DD.  
**Germany.** 51149 Köln.

Made in China.

