

A black and silver Salter Blender to Go is the central focus, filled with a variety of fresh fruits including pineapple, blueberries, raspberries, kiwi, and orange. To the left of the blender is a whole pineapple, and in front of it are several oranges and a small pile of strawberries and blueberries. To the right of the blender is a red shaker cup filled with a pink smoothie, and in front of it are three green apples and a small pile of raspberries. The background is a plain white surface.

SALTER®

SINCE 1760

Blender to Go

The easier way to a healthier lifestyle

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not place boiling water or very hot liquid in the appliance.

Do not dry blend ingredients; always add a small amount of liquid.

Do not overload the appliance as the mixture level may rise during blending.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not use broken or loose cutting or rotating blades.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: Do not touch sharp blades.

Care and Maintenance

STEP 1: Switch off and unplug the blender from the mains power supply before performing any cleaning or user maintenance.

STEP 2: Wipe the blender base unit with a soft, damp cloth and allow to dry thoroughly.

STEP 3: Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Never touch the chopping blades; using extreme caution, clean the blades with a brush and dry carefully.

Do not immerse the blender base unit or the underside of the blender bottles in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the blender, as this could cause damage.

The blender and accessories are not suitable for use in a

Note: The blender should be cleaned after every use.

Warning: Handle the attachments with care as the blades are sharp. Exercise caution when attaching, removing, cleaning or storing the attachments.

Description of Parts



1. Personal Blender base unit
2. Leakproof lid (qty. 2)
3. 600 ml blender bottle (qty. 2)

4. Cross-blade attachment
5. On/off button
6. Rubber gasket

Instructions for Use

Before First Use

Wash the cross-blade attachment and blender bottles in warm, soapy water, then rinse and dry thoroughly.

Wipe the blender base unit with a soft, damp cloth and allow to dry thoroughly

Note: When using the blender for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the blender.

Using the Personal Blender

STEP 1: Check that the blender is unplugged from the mains power supply.

STEP 2: Position the blender base unit onto a flat, stable surface at a height that is comfortable for the user.

STEP 3: Chop the ingredients to be blended into small pieces and then place them

into the blender bottle. Make sure they do not exceed the max. fill mark.

STEP 4: Fasten the cross-blade attachment onto the blender bottle by twisting in a clockwise direction until secure.

STEP 5: Invert the blender bottle so that the cross-blade attachment is facing downwards. Align the arrows on the blender bottle with those on the blender base unit and then twist the blender bottle in a clockwise direction to secure into place.

STEP 6: Plug in and switch on the blender at the mains power supply.

STEP 7: To blend the ingredients, press and hold the 'On/off' button.

STEP 8: Stop the blending process by releasing the 'On/off' button and then switch off and unplug the blender from the mains power supply.

STEP 9: Detach the blender bottle from the blender base unit by twisting it in an anticlockwise direction.

STEP 10: Remove the cross-blade attachment from the blender bottle by twisting it in an anticlockwise direction and then replace it with the leakproof lid for storage.

Note: Always make sure that the rubber gasket, located on the inside bottom edge of the cross-blade attachment, is in place.

The cross-blade attachment must be securely fitted before use; do not attempt to remove it until the blades have stopped moving.

When mixing liquid, use a tall container or blend small quantities at a time to reduce spillage.

Caution: Never dry blend, as this may cause overheating; always add liquid before blending.

Warning: Max. operation time is 1 minute. Allow to cool for 1½ minutes before using the blender again.

Do not use the blender attachment to blend very hot or boiling liquid of any kind, as this may cause injury.

Do not exceed the max. fill mark when adding ingredients to the blender bottle, as this could cause spillage and may damage the blender.

Do not use the blender bottle if it is cracked or broken.

Do not operate the blender when the blender bottle is empty, as this will cause damage to the appliance.

Troubleshooting

Problem	Possible Cause	Solution
The Personal Blender is not working.	The Personal Blender is not connected to the mains power supply. The fuse has blown. The blender bottle is not attached correctly	Plug in and switch on at the mains power supply. Replace the fuse with one of the same rating Make sure the blender bottle is securely fitted onto the blender base unit.
The drink still contains lumps.	There are too many ingredients in the blending bottle.	Reduce the amount of ingredients.

Storage

Reassemble the blender.

Check that the blender is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the blender; wrap it loosely to avoid causing damage.

Specification

Product code: EK2151

Input: 220–240 V~ 50/60 Hz

Output: 350 W

Max. operation time: 1 minute, cool for 1½ minutes

Muesli Breakfast Smoothie

Ingredients

60 g muesli
1 small banana, halved
1 tsp dry chia seeds
1 tsp peanut butter
Chilled soya or semi-skimmed milk



Method

Add the muesli, chia seeds, banana halves and peanut butter to the blender bottle.
Top-up to the max. fill mark with milk and blend until smooth.

Mango and Banana Smoothie

Ingredients

1 small mango
1 small banana
4 ice cubes
200 ml orange juice



Method

Cut the mango in half, remove the stone, then peel off the skin and cut the mango into small chunks.
Peel and chop the banana.
Put all of the ingredients into the blender bottle and blend until thick and smooth.

Avocado Pinch Smoothie

Ingredients

3 whole strawberries, frozen
1 small avocado, skin and stone removed
200 ml milk
1 tbsp honey
1 tbsp Greek style yoghurt



Method

Add all of the ingredients to the blender bottle and blend until thick and smooth.

Blueberry Health Smoothie

Ingredients

100 g blueberries
6 ice cubes
2 tbsp natural yoghurt
1 tsp green tea
Chilled water or pure juice



Method

Add the blueberries, green tea, natural yoghurt and ice cubes to the blender bottle.
Top-up to the maximum fill mark with chilled water or juice and blend until smooth.

Fruit Boost Smoothie

Ingredients

100 g strawberries
6 small ice cubes
1 slice of honeydew melon
1 slice of watermelon, de-seeded
150 ml fresh orange juice
90 ml pineapple juice



Method

Place all of the ingredients into the blender bottle and blend until smooth.

Peach Mango Smoothie

Ingredients

3 peaches
2 mangos
½ lemon, juiced
1 cup ice cubes
150 ml white grape juice



Method

Cut the mango and peaches in half and remove the stones. Remove the skin and chop into chunks.

Add the mango, peach, white grape juice and lemon juice to the blender bottle and blend until smooth.

Berry Protein Blast

Ingredients

30 g vanilla or banana protein powder
1 large handful of frozen or fresh berries
6 ice cubes
300 ml skimmed milk



Method

Add all of the ingredients to the blender bottle and blend until thick and smooth.

Thick Berry Smoothie

Ingredients

1 handful of selected berries
250 ml chilled milk of your choice
125 ml of a berry flavoured yoghurt



Method

Add all of the ingredients to the blender bottle and blend until thick and smooth.

Honeydew and Kiwi Fruit Smoothie

Ingredients

- 1 small honeydew melon, cubed
- 1 kiwi fruit, peeled and cut up
- 1 small green apple, peeled, cored and cut up
- 1 cup ice cubes
- 50 ml water
- 1 tbsp of sugar
- 1 tbsp lemon juice



Method

Add the honeydew melon, apple, kiwi fruit, sugar and lemon juice to the blender bottle and blend until smooth.

Add the ice cubes and then blend the mixture again, until the ice cubes are crushed and the mixture is slushy.

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.


The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

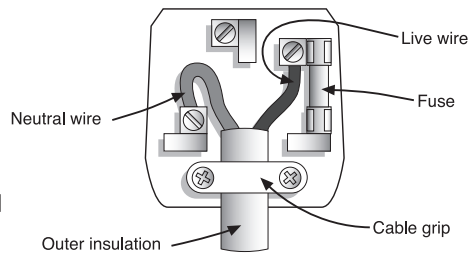

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD. Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.saltercookshop.com.

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



*To be eligible for the extended guarantee, go to **www.saltercookshop.com** and register your product within 30 days of purchase.



Find us on 

www.facebook.com/SalterCookshop

SALTER®

Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.
MADE IN CHINA

