

SALTER[®]

SINCE 1760

25 Litre Toaster Oven

Countertop toaster
oven perfect
for everyday use



Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances. Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands.
Do not leave the appliance unattended whilst connected to the mains power supply.
Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
Do not pull or carry the appliance by its power supply cord.
Do not use the appliance for anything other than its intended use.
Do not use any accessories other than those supplied.
Do not use this appliance outdoors.
Do not store the appliance in direct sunlight or in high humidity conditions.
Do not move the appliance whilst it is in use.
Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.
Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.
Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.
Always unplug the appliance after use and before any cleaning or user maintenance.
Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.
Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
Use of an extension cord with the appliance is not recommended.
This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface or door of the appliance may get hot during operation.



Caution: Hot surface – do not touch the hot section or heating components of the appliance.

Take care not to pour water on the heating element.

Warning: Keep the appliance away from flammable materials.

Care and Maintenance

Before attempting any cleaning or maintenance, unplug the toaster oven from the mains power supply and allow to cool fully.

STEP 1: Wipe the toaster oven housing with a soft, damp cloth and dry thoroughly.

STEP 2: Clean the baking tray, baking tray handle and wire rack in warm, soapy water, then rinse and dry thoroughly.

STEP 3: Remove baked-on food and stubborn stains using a small amount of warm water mixed with a mild detergent, then wipe them clean with a paper towel. Use a nonabrasive scourer if the food is difficult to remove.

Do not immerse the toaster oven in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the toaster oven or its accessories, as this could damage the surface.

Note: The toaster oven should be cleaned after every use.

Warning: The toaster oven and accessories are not suitable for dishwasher use.

Description of Parts



- | | |
|------------------------------------|--|
| 1. 25 Litre Toaster Oven main unit | 9. Baking tray |
| 2. Oven door | 10. Wire rack |
| 3. Temperature control dial | 11. Oven feet |
| 4. Heating element selector dial | 12. Cool-touch handle |
| 5. Timer dial | 13. Baking tray handle |
| 6. Power indicator light | 14. Rotisserie bar |
| 7. Upper heating element | 15. Rotisserie forks (qty 2) |
| 8. Lower heating element | 16. Rotisserie fork tightening screw (qty 2) |

Instructions for Use

Before First Use

Clean the toaster oven and accessories according to the instructions outlined in the section entitled 'Care and Maintenance'.

Note: When using the toaster oven for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the toaster oven.

Using the 25 Litre Toaster Oven

The temperatures shown on the temperature control dial are comparable to those of a standard electric oven. Due to the size of the toaster oven, cooking times may be slightly shorter. This will vary depending upon the type of food cooked and where the baking tray or wire rack is placed. Always check that food is thoroughly cooked before serving.

Note: The power indicator light will remain lit whilst the toaster oven is plugged in and the timer is in use.

Do not force the timer dial to '0'; allow it to run down naturally. When using the wire rack, it is recommended to place the baking tray beneath it in order to keep the toaster oven clean.

Caution: Always wear heat-resistant oven gloves when removing hot food, the baking tray or the wire rack from the toaster oven.

Warning: Never allow food to come into direct contact with the heating elements; always maintain a gap of at least 3 cm.

Using as an Oven

STEP 1: Remove any accessories and then plug in and switch on the toaster oven at the mains power supply.

STEP 2: Prepare the ingredients that are to be cooked.

STEP 3: Turn the temperature control dial to the required heat setting.

STEP 4: Preheat the oven by turning the timer dial to 5 minutes. It is recommended to preheat the oven for at least 5 minutes to avoid temperature fluctuation during use.

STEP 5: Using heat-resistant oven gloves, use the handle to open the glass oven door. Place the food to be cooked onto the baking tray or wire rack and then shut the glass oven door. The food should not exceed 3 kg in weight.

STEP 6: Turn the timer dial to the required cooking time. Check the food periodically; it may be necessary to turn or flip the food during cooking to achieve an even bake.

STEP 7: Once cooking is complete, use heat-resistant oven gloves to carefully open the glass oven door by the handle. Remove the wire rack or baking tray. If the timer is still running, do not force it to '0'; allow it to run down naturally.

STEP 8: Switch off and unplug the toaster oven from the mains power supply.







Note: When placing the baking tray or wire rack in the toaster oven, align with the oven grooves to easily slot in. During use, the oven door can be left slightly or fully open in order to ventilate during cooking.

Using as a Grill

Follow the instructions in the section entitled 'Using as an Oven' but select only the upper heating element with the heating element selector dial. Then turn the temperature control dial to the required heat setting.

Note: The oven door must be kept open when using the grill. Place the wire rack onto the upper groove for optimum grilling.

Heating Element Symbols

Heating Element Symbol	Symbol Meaning	Suggested Use
	Lower heating element only	Baking cakes, pizzas
	Upper heating element only	Toasting, grilling, cooking thin foods
	Upper and lower heating elements	Roasting meats, oven cooking
	Lower heating element and rotisserie function	Baking, roasting large meats
	Upper heating element and rotisserie function	Grilling large meats
	Upper and lower heating elements and rotisserie function	Roasting large meats

Using the Rotisserie

The rotisserie can be used to cook large foods, such as a whole chicken or meat joint. The food to be cooked must be able to rotate freely without touching the inside of the toaster oven.

STEP 1: Prepare the food to be cooked.

 
STEP 2: Skewer the prepared food with the rotisserie bar. The bar should go through the centre of the food.

STEP 3: Use the rotisserie forks to hold the food in place. Put one fork on either end of the rotisserie bar with the forks pointing inwards. This will clamp the food securely. Secure in place by twisting the rotisserie fork tightening screws in a clockwise direction. It should be possible to rotate the rotisserie bar without the food slipping.

STEP 4: Carefully insert the large end of the rotisserie bar into the rotating socket on the inside right of the toaster oven. Then lower the small end of the rotisserie bar onto the rotisserie bar bracket on the inside left of the toaster oven. The rotisserie bar should be able to spin freely.

Note: Food must be able to turn fully and should not touch the inside of the toaster oven when rotating.

Always use the baking tray to catch any drips from food being cooked on the rotisserie.



Storage

Check that the toaster oven is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the toaster oven; wrap it loosely to avoid causing damage.

Specifications

Product code: EK4360VDEEU7

Input: 220–240 V ~ 50/60 Hz

Output: 1500 W

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.saltercookshop.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



SALTER®

Manufactured by:

UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

Made in China.



CD231120/MD000000/V1