

# **SALTER®**

SINCE 1760

## 4 in 1 Juice and Blend

Tasty smoothies, juices, fresh coffee  
and spice blends



Please read all of the instructions carefully and retain for future reference.

## Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not use broken or loose cutting or rotating blades.  
Do not overload the appliance as the mixture level may rise during blending.  
Do not leave the appliance unattended whilst connected to the mains power supply.  
Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.  
Do not use the appliance for anything other than its intended use.  
Do not use any accessories other than those supplied.  
Do not use this appliance outdoors.  
Do not store the appliance in direct sunlight or in high humidity conditions.  
Do not move the appliance whilst it is in use.  
Do not place boiling water or very hot liquid in the appliance.  
Always unplug the appliance after use and before any cleaning or user maintenance.  
Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.  
Use of an extension cord with the appliance is not recommended.  
This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.  
This appliance is intended for domestic use only. It should not be used for commercial purposes.  
**Warning:** Do not touch sharp blades.

## Care and Maintenance

Before attempting any cleaning or maintenance, switch off and unplug the Juice and Blend from the mains power supply and allow it to cool fully.

**STEP 1:** Wipe the Juice and Blend main unit with a soft, damp cloth and allow to dry thoroughly.

**STEP 2:** Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Never touch the chopping blades; using extreme caution, clean the blades with a brush and dry carefully. Do not immerse the Juice and Blend main unit in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the Juice and Blend, as this could cause damage.

**Note:** The Juice and Blend should be cleaned after each use.

**Warning:** Handle the chopping attachments with care, as the blades are sharp. Exercise caution when attaching, removing, cleaning or storing attachments.

## Description of Parts



- |                                     |                       |
|-------------------------------------|-----------------------|
| 1. 4 in 1 Juice and Blend main unit | 11. Juice cup divider |
| 2. Speed control dial               | 12. Sports bottle     |
| 3. Pusher                           | 13. Sports bottle lid |
| 4. Pulp collector                   | 14. Blender blade     |
| 5. Juice collector                  | 15. Grinder cup       |
| 6. Lid cover                        | 16. Grinder blade     |
| 7. Filter                           | 17. 1 litre jug       |
| 8. Anti-drip spout                  | 18. 1 litre jug lid   |
| 9. Juice cup                        | 19. Measuring cap     |
| 10. Juice cup lid                   |                       |

## Instructions for Use

### Before First Use

Wash all of the attachments in warm, soapy water, then rinse and dry thoroughly. Wipe the Juice and Blend main unit with a soft, damp cloth and allow to dry thoroughly.

**Note:** When using the Juice and Blend for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the Juice and Blend.

### Assembling the 4 in 1 Juice and Blend

All attachments must be securely fitted before use; do not attempt to remove attachments until the blades have stopped moving.

**STEP 1:** Check that the Juice and Blend main unit is switched off and unplugged from the mains power supply.

**STEP 2:** Position the Juice and Blend main unit onto a flat, stable surface, at a height that is comfortable for the user. Check that the rubber feet are firmly planted so that the Juice and Blend does not wobble during use.

**STEP 3:** Make sure the speed control dial is set to position '0'.

**STEP 4:** Select the attachments as desired.

### Assembling the Juicer

**STEP 1:** Place the juice collector onto the Juice and Blend main unit. Align the locking tabs and gently press downwards. Twist in a clockwise direction until locked into place.

**STEP 2:** Place the filter inside the pulp collector and push downwards until it clicks.

**STEP 3:** Position the lid cover onto the juice collector and rotate in a clockwise direction until secure.

**STEP 4:** Lean the pulp collector under the lid cover.

### Assembling the Blender with Sports Bottle

**STEP 1:** Place the ingredients to be blended into the sports bottle.

**STEP 2:** Carefully attach the blender blade by placing it on top of the sports bottle and rotating in a clockwise direction until locked into place.

**STEP 3:** Invert the sports bottle and place it on top of the Juice and Blend main unit. Align the blender blade locking tabs with the Juice and Blend main unit and gently press downwards. Twist in a clockwise direction until locked in place.

## Assembling the Grinder Cup

**STEP 1:** Place the ingredients into the grinder cup.

**STEP 2:** Attach the grinder blade by placing it on top of the grinder cup and rotating in a clockwise direction until secure.

**STEP 3:** Carefully place the grinder blade onto the Juice and Blend main unit. Align the locking tabs and gently press downwards. Twist in a clockwise direction until locked into place.

## Assembling the 1 Litre Jug

**STEP 1:** Carefully place the blender blade onto the Juice and Blend main unit. Align the locking tabs and gently press downwards. Twist in a clockwise direction until locked into place.

**STEP 2:** Position the 1 litre jug over the blender blade and rotate in a clockwise direction until secure.

**STEP 3:** Open the 1 litre jug lid by rotating it in an anticlockwise direction and lifting away from the 1 litre jug. Then add the food to be blended.

## Using as a Juice Collector

**STEP 1:** Add food via the lid cover opening; the pusher can be used to push food into the juice collector chamber if necessary.

**STEP 2:** Plug in and switch on the Juice and Blend main unit at the mains power supply.

**STEP 3:** Holding the Juice and Blend main unit steady, rotate the speed control dial to the required setting.

**STEP 4:** Open the anti-drip spout and use the juice cup to collect any juice that is produced.

**STEP 5:** Additional food can be added through the lid cover opening using the pusher during juicing.

**STEP 6:** Turn the speed control dial back to position '0' after juicing is complete and wait until the blades stop rotating. Close the anti-drip spout.

**STEP 7:** Remove the lid cover by turning it in an anticlockwise direction and lifting it up away from the main unit.

**STEP 8:** Remove the pulp collector by lifting it up and away from the main unit. Carefully rotate the juice collector in an anticlockwise direction, while avoiding touching the blades on the filter, and detach it from the Juice and Blend main unit. Carefully remove and wash the filter.

**Note:** Setting '1' is recommended for soft foods and setting '2' for hard foods. Remove hard kernels from food before juicing. Cutting food into smaller pieces may improve results.

**Warning:** Max. continuous operation time is 30 seconds. Leave to cool for at least 1 minute before using the Juice and Blend again.

## Using as a Blender/Grinder

**STEP 1:** Prepare the food and fit the required attachments as desired.

**STEP 2:** Holding the Juice and Blend main unit steady, rotate the speed control dial to the required setting until the food is processed. Turn the control dial back to position '0' and wait for the blades to stop rotating before detaching the blender/grinder blade.

**STEP 3:** Remove the blender/grinder blade by twisting in an anticlockwise direction and lifting away from the Juice and Blend main unit.

**Note:** Use a small amount of liquid to help blend ingredients. Do not exceed the max. fill mark.

**Warning:** Max. continuous operation time for grinding is 30 seconds. Leave to cool down for at least 10 minutes before grinding again.

Do not operate the blender whilst empty, as this can cause damage.

Do not blend warm or hot liquid or food.

## Using the Speed Settings

Holding the Juice and Blend main unit steady, turn the speed control dial in a clockwise direction to select a speed setting or in an anticlockwise direction to activate the pulse setting (P).

The pulse setting provides quick bursts of speed. Hold the speed control dial in place to activate the motor and release to stop it.

Turn the speed control dial back to position '0' and wait for blades to stop rotating before removing attachments.

## Storage

Check that the Juice and Blend main unit and its accessories are cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the Juice and Blend; wrap it loosely to avoid causing damage.

Problem	Possible Cause	Solution
The Juice and Blend will not operate.	The Juice and Blend is not connected to the mains power supply. The Juice and Blend is not correctly assembled.	Plug in and switch on the Juice and Blend at the mains power supply. Check that the Juice and Blend has been correctly assembled and that the attachments are secure.
There are large unchopped chunks of ingredients after processing.	The Juice and Blend has been overfilled.	Remove some of the ingredients and chop in batches.
The sports bottle is leaking.	The sports bottle lid is not fitted correctly.	Checking that the threads are correctly aligned, twist the sports bottle lid in a clockwise direction until secure.

## Specifications

Product code: EK4294

Input: 220–240 V~ 50-60 Hz

Output: 400 W

## Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

#### Blue Neutral (N)

#### Brown Live (L)

**FOR UK USE ONLY** - Plug fitting details  
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.


The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

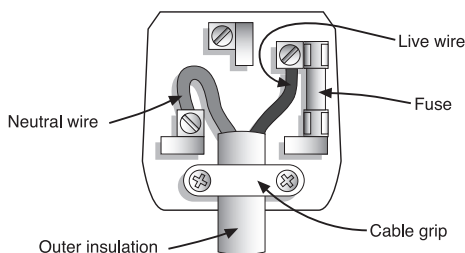

### Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,  
UK. Manchester OL9 0DD.  
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **[www.saltercookshop.com](http://www.saltercookshop.com)**.

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



\*To be eligible for the extended guarantee, go to **www.saltercookshop.com** and register your product within 30 days of purchase.

**3**  
YEAR  
GUARANTEE\*

Find us on 

[www.facebook.com/SalterCookshop](http://www.facebook.com/SalterCookshop)

# SALTER®

Manufactured by:

UP Global Sourcing UK Ltd.,

**UK.** Manchester OL9 0DD.

**Germany.** 51149 Köln.

Made in China.

