

SALTER[®]

SINCE 1760

Power Juicer

Create refreshing, all-natural fruit juices
at home

THE EASY
WAY TO GET
**FIVE
A DAY**



Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not place boiling water or very hot liquid in the appliance.

Do not dry blend ingredients; always add a small amount of liquid.

Do not overload the appliance as the mixture level may rise during juicing.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not use broken or loose cutting or rotating blades.

Switch off the appliance and disconnect it from the mains power supply before changing accessories.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use

before performing any cleaning or maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

WARNING: Handle the stainless steel blades with care, as the blades are extremely sharp. Exercise caution when attaching, removing, cleaning or storing the stainless steel blades.

Care and Maintenance

STEP 1: Switch off and unplug the juicer from the mains power supply before performing any cleaning or user maintenance.

STEP 2: Rinse the juicer before disassembling, following the instructions in the section entitled 'Disassembling the Power Juicer'.

STEP 3: Wipe the juicer base unit with a soft, damp cloth and allow to dry thoroughly.

STEP 4: Wash all of the accessories, except the stainless steel blades, in warm, soapy water, then rinse and dry thoroughly. Never touch the blades; using extreme caution, clean the blades with a brush and dry carefully.

Do not immerse the juicer base unit in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the juicer, as this could cause damage.

The juicer is not suitable for use in a dishwasher.

NOTE: Always clean the juicer immediately after each use. It is recommended to soak the juicing filter basket in warm,

soapy water for approx. 10 minutes after using the juicer to aid the removal of stubborn pulp. If any pulp is left to dry onto the juicing filter basket, it may block the fine cutting blades and mesh surround, reducing the effectiveness of the juicer. Some foods may discolour the plastic accessories. This is normal and will not damage the plastic or affect the flavour of the food. To reduce the risk of discolouration, clean the juicer immediately after use. Rub any discoloured areas with a cloth dipped in vegetable oil.

Description of Parts



- | | |
|---------------------------|-----------------------------|
| 1. Power Juicer base unit | 7. Interlocking safety arm |
| 2. Juicer lid | 8. Suction feet |
| 3. Feeding chute | 9. Plunger |
| 4. Control dial | 10. 600 ml juicer container |
| 5. Juicing filter basket | 11. Juicer container lid |
| 6. Pulp container | 12. Juicer filter |

Instructions for Use

Before First Use

Before using the juicer for the first time, wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Wipe the juicer base unit with a soft, damp cloth and allow to dry thoroughly.

Do not immerse the juicer base unit in water or any other liquid.

NOTE: When using the juicer for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the juicer.

Assembling the Power Juicer

STEP 1: Check that the juicer is switched off and unplugged from the mains power supply. Position the juicer base unit onto a flat, stable surface, at a height that is comfortable for the user.

STEP 2: Attach the pulp container to the tab on the back of the power juice base unit and then position the juice dispenser unit so that the juice dispenser chute is aligned with the slot in the juicer base unit.

STEP 3: Carefully fit the juicing filter basket with built-in blades into the centre of the juicer base unit by aligning the locking tabs with the corresponding recesses, pressing down to check that it is secure.

STEP 4: Place the lid onto the juice dispenser unit by aligning the locking tabs and slotting it into position. To lock the lid into place, raise the interlocking safety arm until it sits securely in the indents on the lid.

STEP 5: Insert the plunger into the feeding chute.

STEP 6: Position the juice container underneath the juice dispenser and attach the juice container lid.

Using the Power Juicer

STEP 1: Position the juicer base unit onto a flat, stable surface, at a height that is comfortable for the user.

STEP 2: Wash the ingredients to be juiced and cut them down to size, if necessary.

STEP 3: Remove the plunger from the feeding chute.

STEP 4: Plug in and switch on the juicer at the mains power supply.

STEP 5: Rotate the two-speed control dial in a clockwise direction to the required speed. Select speed setting I for a low juicing speed; for a higher juicing speed, select speed setting II. For pulse action rotate the dial in an anticlockwise direction and hold for the required amount. For guidance, refer to the table in the section entitled 'Speed Selector Table'.

STEP 6: Add the prepared ingredients to the feeding chute, using the plunger to slowly move the ingredients further into the chute. Juice and pulp will begin to be extracted from the ingredients into their respective containers.

STEP 7: Once either the pulp and/or juice container is close to being full, stop juicing, turn off the juicer by rotating the control dial until it reaches the 'O' symbol and then switch off and unplug the juicer from the mains power supply.

STEP 8: Pour the juice from the juice container into a separate jug and empty the pulp container, in order to avoid any blockages.

NOTE: The juicer will not operate when the pulp container and the lid are not properly fitted.

CAUTION: Do not juice for long periods of time. Max. operation time is 5 minutes; allow the juicer to cool for 15 minutes before using it again. For best results, after 1 minute of continuous operation, stop for 1 minute before continuing use.

WARNING: Never use fingers to push ingredients down the feed chute; always use the plunger provided. Do not exceed the max. fill mark when adding ingredients, as this could cause spillage and may damage the juicer.

Cleaning the Power Juicer

STEP 1: Switch off and unplug the juicer from the mains power supply.

STEP 2: Pour the juice from the juice container into a separate jug and empty the pulp container.

STEP 3: Remove the plunger from the feeding chute. Pour 50 ml of warm, soapy water down the feeding chute. Fit the plunger back into the feeding chute and engage the interlocking safety arm, following the instructions in the section entitled 'Assembling the Power Juicer'.

STEP 4: Plug in and switch on the juicer at the mains power supply.

STEP 5: Rotate the control dial in an anticlockwise direction to 'P' in several short bursts.

STEP 6: Turn off the juicer by rotating the control dial until it reaches the 'O' symbol and then switch off and unplug the juicer from the mains power supply.

STEP 7: Empty and clean the juicer container and lid.

STEP 8: Unlock the interlocking safety alarm by releasing it from the indents in the lid and lowering it into the horizontal position.

STEP 9: Remove the lid from the pulp container. Then remove both the juicing filter and the juicing filter basket from the juicer base unit by pulling them in an upwards direction, taking care not to touch the blades in the base unit.

STEP 10: Clean all components and the areas around the blade.

STEP 11: Empty and clean remaining pulp from the pulp container, then rinse and dry thoroughly.

STEP 12: Once all the components are clean and dry, reassemble the juicer and store in a cool, dry place.

Speed Selector Table

The speed selector table should be used as a guide only. Remove any stones and hard skins from fruits and vegetables before juicing.

| Ingredients | Speed setting |
|-------------|---------------|
| Apple | II |
| Apricot | I |
| Beetroot | II |
| Blueberries | I |
| Broccoli | I |
| Cabbage | I |
| Carrot | II |
| Celery | II |
| Cucumber | I |
| Grapes | I |
| Kiwi | I |
| Mango | I |
| Melon | I |
| Orange | I/II |
| Peach | I |
| Pear | I/II |
| Pineapple | II |
| Plum | I |
| Raspberry | I |
| Tomato | I |

Disassembling the Power Juicer

It is recommended to briefly rinse the juicer before it is disassembled.

STEP 1: Switch off and unplug the juicer from the mains power supply.

STEP 2: Pour the juice from the juice container into a separate jug and empty the pulp container.

STEP 3: Remove the plunger from the feeding chute and then pour 50 ml of warm, soapy water down the chute. Fit the plunger back into the feeding chute and engage the interlocking safety arm, following the instructions in the section entitled 'Assembling the Power Juicer'.

STEP 4: Plug in and switch on the juicer at the mains power supply.

STEP 5: Rotate the control dial in an anticlockwise direction to 'P' for several short bursts.

STEP 6: Turn off the juicer by rotating the control dial until it reaches the 'O' symbol and then switch off and unplug the juicer from the mains power supply.

STEP 7: Unlock the interlocking safety arm by releasing it from the indents in the lid and lowering it into the horizontal position.

STEP 8: Remove the lid from the pulp container and then remove the juicing filter basket from the juicer base unit by pulling it in an upwards direction, taking care not to touch the blades in the base.

STEP 9: Empty the pulp from the bowl.

CAUTION: The juicing filter basket contains sharp blades.
Handle with care.

Storage

Check that the juicer is cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the juicer; wrap it loosely to avoid causing damage.

Troubleshooting

| Problem | Cause | Solution |
|---|---|--|
| The juicer will not operate even though it is switched on at the mains power supply and the 2-speed control is turned on. | <p>The interlocking safety arm is not properly fitted.</p> <p>The pulp container and juicer lid have not been properly fitted.</p> | <p>Check that the interlocking safety arm is correctly positioned in the indents in the juicer lid.</p> <p>Fit the pulp container and juicer lid, following the instructions in the section entitled 'Assembling the Power Juicer'.</p> |
| The juicer stops and starts whilst in operation. | <p>Food is being pushed down the feeding chute too quickly.</p> <p>The max. operation time has been exceeded.</p> <p>The ingredients being added down the feeding chute are too large.</p> <p>The ingredients being added down the feeding chute are too hard.</p> <p>The pulp container is too full.</p> | <p>Push the ingredients down the feeding chute slowly and allow them to be juiced before adding more.</p> <p>Do not exceed the max. operation time. Allow the juicer to cool for approx. 15 minutes before using again.</p> <p>Chop the ingredients into smaller chunks and add to the feeding chute slowly.</p> <p>Remove any stones and hard skins from fruits and vegetables before juicing.</p> <p>Switch off the juicer and empty the pulp container.</p> |

| | | |
|--|--|--|
| The juicer is not producing much juice and the pulp appears too wet. | The juicing filter basket is blocked. | Switch off and unplug the juicer, remove the juicing filter basket and then clean it, following the instructions in the section entitled 'Care and Maintenance'. |
| Juice sprays from the juice dispenser. | The incorrect speed setting has been selected. | Select a slower speed setting. |

Specifications

Product Code: EK3454

Operating voltage: 220 V–240 V ~ 50/60 Hz

Power: 600 W

Recipes

*Any recipe images used in this instruction manual are intended for illustrative purposes only.



Vegetable Juice

Serves 1

Ingredients

4 tomatoes
2 red peppers
1 celery stick
3 tbsp citrus juice

Home-made Lemonade

Serves 2

Ingredients

3–4 lemons, for juicing
Peeled rind of 2 unwaxed lemons
10 g agave nectar
Small handful fresh mint, leaves stripped
Sprigs fresh mint, to serve
Lemon wedges, to serve

Method

Put the lemon rind, mint leaves, agave nectar and 100 ml water in a saucepan and bring to the boil. Stir until the agave nectar has dissolved.

Simmer for 5 minutes, then remove from the heat and leave to cool completely. Once cool, strain into a flask, jug or bottle.

Juice 3–4 lemons using the Power Juicer using speed setting I.

Combine the lemon juice and 400 ml water to the jug and chill until ready to serve. Decorate with mint sprigs and lemon wedges.

Method

Select speed setting II.

Place the peppers, tomatoes and celery stick into the feeding chute, using the plunger to slowly move the ingredients further down.

Add 3 tbsp citrus juice to bring out the flavours.

Spiced Celery Juice

Serves 1

Prep time 5 minutes

Ingredients

2 celery sticks
2 handfuls chopped kale
1 pear, deseeded
Small handful fresh parsley
Pinch turmeric

Method

Place the pear, celery, kale and parsley into the feeding chute, using the plunger to slowly move the ingredients further down.

Add a couple of tablespoons water to thin the juice if needed.

Serve immediately.

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.


The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

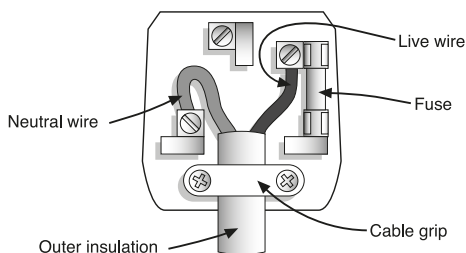

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.saltercookshop.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

*To be eligible for the extended guarantee, go to **www.saltercookshop.com** and register your product within 30 days of purchase.

3
YEAR
GUARANTEE*

Find us on 

www.facebook.com/SalterCookshop

SALTER®

Manufactured by:

UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

Made in China.

©Salter trademark. All rights reserved.



UK
CA CE

