

SALTER®

SINCE 1760

CAFFÈ

Digital
Coffee
to Go

Fresh *coffee* at the touch
of a button



Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the supply cord, plug or any part of the appliance is malfunctioning, or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from heat emitting appliances.

Do not leave the appliance within reach of children.

Do not allow the mains plug to hang over worktops, touch hot surfaces or become twisted.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not overload the appliance; only fill up to the maximum level marked on the appliance.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Do not place boiling water or very hot liquid in the appliance.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface of the appliance may get hot during operation.

Caution: Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance.



Hot surface – do not touch the hot section or heating components of the appliance.

Warning: Keep the appliance away from flammable materials.

Care and Maintenance

Before performing any cleaning or user maintenance, unplug the coffee maker from the mains power supply and allow it to cool fully.

STEP 1: Wipe the coffee maker main body with a soft, damp cloth and allow to dry thoroughly.

Do not immerse the coffee maker main body in water or any other liquid.

Never use harsh or abrasive scourers to clean the coffee maker, as this could cause damage.

STEP 2: Wash the reusable coffee filter and filter basket in warm, soapy water, then rinse and dry thoroughly before reassembling the coffee maker.

STEP 3: Clean the travel mug in warm, soapy water; rinse and dry thoroughly before storing.

Description of Parts



- | | |
|-----------------------------------|---------------------------------------|
| 1. Digital Coffee Maker Main Body | 10. Minute Button (MIN) |
| 2. Water Reservoir | 11. Program Button (PROGRAM) |
| 3. Water Reservoir Lid | 12. Reusable Coffee Filter |
| 4. Digital Control Panel | 13. Filter Basket |
| 5. Digital LCD Display | 14. Brewing Chamber |
| 6. Brewing Indicator Light | 15. 420 ml Stainless Steel Travel Mug |
| 7. Preset Indicator Light | 16. Easy-drink Lid |
| 8. On/Off Button | 17. Base |
| 9. Hour Button (HOUR) | |

Instructions for Use

Before First Use

STEP 1: Before using the coffee maker for the first time, remove the travel mug, easy-drink lid, reusable coffee filter and filter basket and wash them in warm, soapy water, then rinse and dry thoroughly.

STEP 2: Wipe the coffee maker main body with a soft, damp cloth and allow to dry thoroughly. Do not immerse the coffee maker main body in water or any other liquid.

Note: When using the coffee maker for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the coffee maker.

Setting the Clock

The clock can be set at any time after plugging in the coffee maker. Once plugged in, the coffee maker will show 12:00 as the time. Press the **HOUR** and **MIN** buttons until the correct time is displayed.

Using the Digital Coffee Maker

Quick Coffee Brewing

STEP 1: Before connecting to the mains power supply, position the coffee maker onto a flat, stable surface at a height that is comfortable for the user. Check that all of the accessories are in place.

STEP 2: Lift the water reservoir lid and remove the reusable coffee filter from the brewing chamber. Add 15–20 g of finely ground or regular ground coffee, or 1–2 coffee pads, into the reusable coffee filter to create one full travel mug of fresh coffee.

STEP 3: Gently shake the reusable coffee filter to evenly distribute the coffee.

STEP 4: Position the reusable coffee filter back into the filter basket and then place into the brewing chamber.

STEP 5: Pour up to 400 ml of fresh, cold water into the water reservoir and close the water reservoir lid. Do not exceed the max. fill mark.

STEP 6: Remove the lid from the travel mug and place the travel mug onto the base of the coffee maker, aligning it with the brewing chamber.

STEP 7: Plug in and switch on the coffee maker at the mains power supply and use the **HOUR** and **MIN** buttons to set the correct time, if desired. Press the On/Off button; the brewing indicator light will flash red to signal that the coffee maker is in operation. The digital LCD display will also show ON at the top right, along with the

coffee cup icon. The On/Off button can be pressed at any point to pause brewing.

STEP 8: Once all of the coffee has dripped from the brewing chamber into the travel mug and the brewing cycle is complete (approx. 4 minutes), the brewing indicator light will switch off.

STEP 9: Remove the travel mug from the base; it is recommended to wait 1–2 minutes before doing this to allow the coffee maker to cool and let any excess water drip into the travel mug. Take care when handling, as the travel mug is likely to have become hot during operation.

Replace the lid and check that it is fully secured to avoid any leaking.

STEP 10: Once the coffee maker has fully cooled, remove the filter basket and dispose of used coffee grounds.

Note: The coffee filter should always be placed into the filter basket before use. Do not use the coffee maker without both the coffee filter and the filter basket in place.

Caution: Do not switch on the coffee maker without any water in the water reservoir.

Do not open the water reservoir lid during the brewing cycle, as this will allow steam to escape and could cause scalding or burns.

Warning: Allow the coffee maker to cool for at least 3 minutes before making a second cup of coffee. If the coffee maker does not cool completely before reuse, water placed in the water reservoir may overheat. This will allow hot steam to escape, which could injure the user.

Using the Digital Coffee Maker

Pre-programmed Coffee Brewing

STEP 1: Before connecting to the mains power supply, position the coffee maker onto a flat, stable surface at a height that is comfortable for the user. Check that all of the accessories are in place.

STEP 2: Lift the water reservoir lid and remove the reusable coffee filter from the brewing chamber. Add 15–20 g of finely ground or regular ground coffee, or 1–2 coffee pads, into the reusable coffee filter to create one full travel mug of fresh coffee.

STEP 3: Gently shake the reusable coffee filter to evenly distribute the coffee.

STEP 4: Position the reusable coffee filter into the filter basket and then place into

the brewing chamber.

STEP 5: Pour up to 400 ml of fresh, cold water into the water reservoir and close the water reservoir lid. Do not exceed the max. fill mark.

STEP 6: Remove the lid from the travel mug and place the travel mug onto the base of the coffee maker, aligning it with the brewing chamber.

STEP 7: Plug in and switch on the coffee maker at the mains power supply; use the **HOUR** and **MIN** buttons to set the correct time.

STEP 8: Press the **PROGRAM** button to set the desired time for the brew cycle to start automatically. Once pressed, the digital LCD display will show **PROGRAM** at the top left. Use the HOUR and MIN buttons to set the time for brewing to begin.

STEP 9: Once the time has been set, wait 2 seconds. The program setting will switch off automatically and the current time will be displayed again. The preset indicator light will illuminate and the digital LCD display will show AUTO to indicate that a brewing time has been programmed.

STEP 10: At the preset time, the brew cycle will begin automatically. The brewing indicator light will flash red to signal that the coffee maker is in operation. The digital LCD display will also show ON at the top right, along with the coffee cup icon. The On/Off button can be pressed at any point to pause brewing.

STEP 11: Once all of the coffee has dripped from the brewing chamber into the travel mug and the brewing cycle is complete (approx. 4 minutes), the brewing indicator light will switch off.

STEP 12: Remove the travel mug from the base; it is recommended to wait 1–2 minutes before doing this to allow the coffee maker to cool and let any excess water to drip into the travel mug. Take care when handling, as the travel mug is likely to have become hot during operation.

Replace the lid and check that it is fully secured to avoid any leaking.

STEP 13: Once the coffee maker has fully cooled, remove the filter basket and dispose of the used coffee grounds. When the coffee maker has been cleaned following the instructions in the section titled 'Care and Maintenance', the next brew cycle can be prepared using steps 1–5, and the preset time can be programmed again.

Note: When a brewing time has been preset, it will not be possible to change the time setting on the unit until the brewing preset has been removed. To remove the preset, hold down the **PROGRAM** button for 3 seconds. The unit will go in to the program mode with **PROGRAM** displayed, and then will display the time again after 2 seconds. The preset

time will have been removed.

Press the **PROGRAM** button at any time to check the preset brewing time.

Caution: Do not set a preset time on the coffee maker without any water in the water reservoir. Ensure the empty travel mug is in place before the brewing cycle begins. Do not open the water reservoir lid during the brewing cycle, as this will allow steam to escape and could cause scalding or burns.

Warning: Allow the coffee maker to cool for at least 3 minutes before making a second cup of coffee. If the coffee maker does not cool completely before reuse, water placed in the water reservoir may overheat. This will allow hot steam to escape, which could injure the user.

Hints and Tips

1. Always use fresh, cold water to fill the water reservoir.
2. The quantity of ground coffee can be adapted to suit taste. For stronger coffee, increase the amount of coffee, or use less for weaker coffee.
3. If using regular ground coffee, more is needed per cup to achieve the same strength as finer ground coffee.
4. After using packaged ground coffee, tightly reseal it and store the unused ground coffee in a cool, dry place.
5. To achieve optimum coffee taste, use whole coffee beans and finely grind them before brewing.
6. Do not reuse ground coffee that has already been used in the coffee maker, as this will greatly reduce the flavour of the coffee.
7. Reheating coffee is not recommended, as it interferes with the taste.

Storage

The coffee maker must be cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around coffee maker; wrap it loosely to avoid causing damage.

Specifications

Product Code: EK2732BRMFOB

Operating Voltage: 220–240 V ~ 50/60 Hz

Power: 650–750 W

Brand Merchant Pty Ltd. Suite 8, 8A St Andrews Street,

Brighton Victoria 3186, Australia

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.salterhousewares.com.au**.

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Imported & Distributed by:
Brand Merchant Pty Ltd
Suite 8, 8A St Andrews Street,
Brighton Victoria 3186,
Australia

www.brandmerchant.com.au

Made in China.



SALTER®

CD170721/MD030821/V2