

SALTER[®]

SINCE 1760

Deluxe Citrus Juicer

Create all-natural
fruit juices at home



Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use, and clean this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage. Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not use any accessories other than those supplied.

Do not move the appliance whilst it is in use.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Care and Maintenance

STEP 1: Switch off and unplug the citrus juicer from the mains power supply before performing any cleaning or user maintenance.

STEP 2: Wipe the citrus juicer base unit with a soft, damp cloth and allow to dry thoroughly.

STEP 3: Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

CAUTION: Never immerse the citrus juicer base unit in water or any other liquid.

Do not use harsh or abrasive scourers to clean the citrus juicer, as this could cause damage.

The citrus juicer is not suitable for use in a dishwasher.

Always clean the citrus juicer immediately after each use.

WARNING: Exercise caution when attaching, removing, cleaning or storing the attachments.

Description of Parts



1. Deluxe Citrus Juicer base unit
2. Juicer container
3. Juicer strainer
4. Small juicing cone
5. Large juicing cone

6. Pressure cone
7. Handle
8. Accessory adaptor
9. Spout

Instructions for Use

Before First Use

Clean the citrus juicer following the instructions outlined in the section entitled 'Care and Maintenance'.

NOTE: The citrus juicer arrives fully assembled.

Reassembling the Deluxe Citrus Juicer

STEP 1: Place the citrus juicer base unit on a flat, stable surface. Make sure that it is unplugged from the mains power supply.

STEP 2: Fit the juicer container onto the unit by aligning the tabs with the cut-outs and rotating in a clockwise direction to lock into place.

STEP 3: Align the spout on the juicer container with the cut-outs on the citrus juicer base unit and slot into place. Make sure the spout is pointing upwards to prevent leaking.

STEP 4: Fit the juicer strainer on top of the citrus juicer.

STEP 5: Position the small juicing cone onto the accessory adaptor.

For larger fruits, place the large juicing cone on top of the small juicing cone and push downwards until it clicks into place. To remove, push the sides of the large juicing cone inwards and pull it up and away from the small juicing cone.

WARNING: Do not plug in the citrus juicer until it is fully assembled.

Using the Deluxe Citrus Juicer

STEP 1: Place the citrus juicer onto a flat, stable surface.

STEP 2: Prepare the citrus fruit by cutting it in half.

STEP 3: Plug in and switch on the citrus juicer at the mains power supply; do not plug in the citrus juicer until it is fully assembled.

STEP 4: Make sure the spout is pointing upwards and is sealed, and place suitable container underneath.

STEP 5: Hold the fruit onto the juicing cone and bring down the handle to secure the fruit in place. When pressed down the motor will activate and juicing will start.

STEP 6: Switch off and unplug the citrus juicer from the mains power supply.

STEP 7: Remove the juicing cone and the juicer strainer by lifting them up and away from the citrus juicer.

STEP 8: Remove the juicing container by lifting it up and away from the base unit. Position the spout downwards before pouring juice. Serve the juice fresh.

NOTE: Check that the citrus juicer is fully assembled before use.

Always clean the citrus juicer after use. To reassemble, follow the steps in the section entitled 'Reassembling the Deluxe Citrus Juicer'.

WARNING: Only use the citrus juicer with citrus fruit; do not press hands directly onto the juicing cone.

Do not juice for extended periods. Max. operation time is 15 seconds; allow the citrus juicer to cool for 15 seconds before using it again.

Make sure that all pulp is removed; if pulp begins to build up, stop juicing, switch off and unplug the citrus juicer from the mains power supply and remove the pulp.

Do not operate the citrus juicer if any of the accessories are damaged.

Storage

Reassemble the citrus juicer. To reassemble, follow the steps in the section entitled 'Reassembling the Deluxe Citrus Juicer'.

Check that the citrus juicer is cool, clean and dry before storing in a cool, dry place.

Specifications

Product code: EK5026

Operating voltage: 220–240 V ~ 50–60 Hz

Power: 100 W

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked \perp .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt, consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

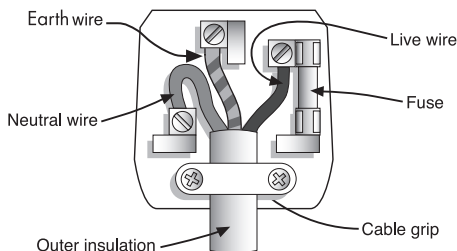

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.salterhousewares.co.uk

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

*To be eligible for the extended guarantee, go to **guarantee.upgs.com/salter** and register your product within 30 days of purchase.



Find us on 

www.facebook.com/SalterUK

SALTER®

Manufactured by:

UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

Made in China.

©Salter trademark. All rights reserved.

