

# **SALTER®**

SINCE 1760

## Colour Changing Glass Kettle



Please retain instructions for future reference.

## Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy. Keep the appliance and its power supply cord out of the reach of children.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands, or if any connections are wet.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use any power supply base unit other than the one provided with this appliance.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance when it is in use.

Do not fill the appliance above its max. fill mark. Overfilling the appliance may cause boiling water to be ejected.

Always unplug the appliance after use and allow it to cool fully before any cleaning or user maintenance/ storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The heating element will remain hot after use.

Exercise caution when using this appliance, as steam will be emitted from the spout and/or lid, especially whilst refilling.



**CAUTION:** Hot surface – do not touch the hot section or heating components of the appliance.

Always allow the appliance to cool thoroughly before touching or opening the lid.

**WARNING:** Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance. Do not open the lid while the kettle is boiling.

The appliance will become very hot during use; do not touch the appliance and always take care when handling.

Misuse of the appliance could cause injury to the user.

As this is a glass kettle care must be taken not to create impact damage, which can cause micro-cracks to appear in the glass. To avoid impact damage, take care not to knock the kettle against a tap or other hard kitchen surface. Examine the condition of the kettle body and lid before each use.

## Boil-dry Sensor

The kettle is equipped with a boil-dry sensor. If the kettle is accidentally turned on whilst empty, the boil-dry sensor will activate causing the power to switch off. The kettle will then remain inactive and the power switch will not function for several minutes until the kettle is cool. Do not try to use the kettle during this time; once it has cooled down, it will resume its normal function.

## Care and Maintenance

Wipe the kettle and power base with a soft, damp cloth then allow it to dry thoroughly.

Do not immerse the kettle in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the kettle as this could cause damage.

## Removing Limescale

Limescale can develop over time and may affect the performance and lifespan of the kettle.

It is recommended to descale the kettle regularly, at least once every three months, especially if the kettle is used in a hard water area. Frequent descaling will improve the performance and lifespan of the kettle.

**STEP 1:** Fill the kettle to the max. fill mark with cold water.

**STEP 2:** Add a commercial descaling agent to the kettle, adhering to the manufacturer's instructions. It is not recommended to use vinegar to descale the kettle.

**STEP 3:** Allow the kettle to boil, switch it off and leave to soak for at least 20 minutes or for the length of time specified on the descaling product.

**STEP 4:** Empty the kettle and refill to the max. fill mark with clean water. Boil the kettle once more and pour the water away after it has cooled. The kettle should now be descaled.

**If the kettle switches off before it has boiled or a white deposit is noticed on the inside of the kettle, it needs to be descaled. Add a commercial descaling agent to the kettle, adhering to the manufacturer's instructions. It is not recommended to use vinegar to descale the kettle.**

## Description of Parts



- |                                 |                                |
|---------------------------------|--------------------------------|
| 1. Colour Changing Glass Kettle | 7. Water fill gauge            |
| 2. Power base                   | 8. Water inlet cover           |
| 3. Power switch                 | 9. Lid                         |
| 4. Handle                       | 10. Lid opening handle         |
| 5. Min. fill mark (0.5 L)       | 11. Spout                      |
| 6. Max. fill mark (1.7 L)       | 12. Removable limescale filter |

## Instructions for Use

### Before First Use

Before using the kettle for the first time, wipe it clean with a soft, damp cloth and dry thoroughly.

Check that the limescale filter is attached.

**NOTE:** When using the kettle for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the kettle.

**WARNING:** The kettle is not suitable for dishwasher use.

## Removing the 'New Kettle' Taste

Fill the kettle to the max. fill mark and boil the water, following the instructions in the section entitled 'Using the Kettle'. If any slight 'new kettle' taste or odour remains in the boiled water, discard this and refill the kettle to three-quarters full. Once boiled, add two tablespoons of bicarbonate of soda and leave to stand overnight. Discard the water then re-boil a couple of times to remove any residue.

## Using the Colour Changing Glass Kettle

**STEP 1:** Remove the kettle from the power base.

**STEP 2:** Pour water on to the water inlet cover and fill the kettle to desired water level between the min. fill mark and the max. fill mark. Then place the kettle back onto the power base.

**STEP 3:** Plug in and switch on the kettle at the mains power supply and flip the power switch to the 'on' position until it clicks. Do not touch the body of the kettle during use.

**STEP 4:** Once the kettle has boiled, the power switch will automatically flip back into the off position.

## Storage

The kettle must be cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the kettle; wrap it loosely to avoid causing damage.

## Storage

Product code: EK5078SS

Input: 220-240 V ~ 50-60 Hz

Output: 1850-2200 W

## Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

**Blue Neutral (N)**

**Brown Live (L)**

**Green/Yellow Earth ( $\perp$ )**

**FOR UK USE ONLY** - Plug fitting details (where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.


The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked  $\perp$ .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

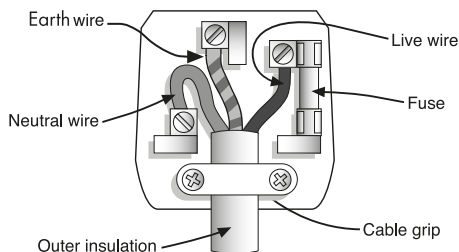

## Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



UP Global Sourcing UK Ltd.,  
UK. Manchester OL9 0DD.  
Germany. 51149 Köln.

If this product does not reach you in an acceptable condition please contact our Customer Services Department at [www.salter.com](http://www.salter.com)

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

## Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

\*To be eligible for the extended guarantee, go to [guarantee.upgs.com/salter](http://guarantee.upgs.com/salter) and register your product within 30 days of purchase.

**3**  
**YEAR**

**GUARANTEE\***

Find us on 

[www.facebook.com/SalterUK](http://www.facebook.com/SalterUK)

# **SALTER®**

Manufactured by:

UP Global Sourcing UK Ltd.,  
UK. Manchester OL9 0DD.  
Germany. 51149 Köln.

Made in China.

©Salter trademark. All rights reserved.



**UK  
CA** 






**ULTIMATE PRODUCTS**  
**HOME OF BRANDS**

Manchester  
OL9 0DD  
United Kingdom  
[www.upgs.com](http://www.upgs.com)

Artworker:	SCARLETT CHESTER-ROBERTS
Date:	13/07/2022
Project Name:	EEK220302 UPG EK5078SS IM
Type of Artwork:	Instruction Manual ONLINE ONLY
Size:	A5 10 PP
Software Used:	Indesign CC22
Typefaces:	ITC Avant Garde Gothic Pro

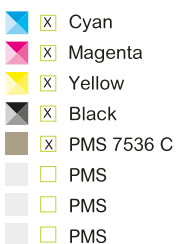

**Artwork Version 1**

**Artwork Scale 1:1**

©2022 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE  
ARTWORK REFERENCE ONLY