

SALTER®
SINCE 1760
PROFESSIONAL



The Chocolatier

Melt chocolate flakes with dairy or plant-based milk

Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs.

Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not operate the appliance without the lid in place.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface or door may get hot during operation.



CAUTION: Hot surface – do not touch the hot section or heating components of the appliance.



WARNING: Hot or boiling liquids and steam can cause serious injury; exercise extreme caution when using this appliance.

The appliance may become hot during use; do not touch the appliance and always take care when handling.

Care and Maintenance

Switch off and unplug the hot chocolate maker from the mains power supply and allow it to cool fully before attempting any cleaning or maintenance.

STEP 1: Wipe the hot chocolate maker with a soft, damp cloth and dry thoroughly.

Do not immerse the hot chocolate maker in water or any other liquid.

STEP 2: Clean the interior of the hot chocolate maker with warm, soapy water, then rinse and dry thoroughly.

NOTE: The hot chocolate maker should be cleaned after each use. The foaming stirrer can be removed and rinsed.

WARNING: The hot chocolate maker is not safe for dishwasher use.

Do not use harsh or abrasive cleaning detergents or scourers to clean the hot chocolate maker, as this could cause damage.

DO:

Check that the base of the hot chocolate maker is clean before each cycle.

Always fill the hot chocolate maker cup above the min. fill mark, whilst making sure not to exceed the max. fill mark for the heating function.

DO NOT:

Connect the hot chocolate maker to the mains power supply before milk has been added.

Operate the hot chocolate maker whilst empty.

Description of Parts



1. Chocolatier main unit
2. Cup
3. Cup lid
4. Handle
5. Function button (⏻)
6. Base
7. Frothing ring
8. Heating ring
9. Min. fill mark

10. 115 ml max. fill mark for frothing function
11. 240 ml max. fill mark for heating function
12. Thick warm froth indicator light
13. Light warm froth indicator light
14. Hot milk indicator light
15. Cold froth indicator light

Instructions for Use

Before First Use

Clean the hot chocolate maker and stirrer following the instructions in the section entitled 'Care and Maintenance'.

Place the hot chocolate maker onto a flat stable surface.

Using the Chocolatier

The hot chocolate maker has four functions which can be used to create:

1. Thick hot froth
2. Light hot froth
3. Hot milk/hot chocolate
4. Cold froth

FUNCTION	BEST FOR	ML
Thick hot froth	Cappucino or macchiato	115 ml
Light hot froth	Latte or matcha latte	115 ml
Hot milk/hot chocolate	Hot chocolate or mocha	240 ml
Cold milk froth	Frappe or iced coffee	115 ml

STEP 1: Pour the required amount of milk into the hot chocolate maker according to the guidelines above.

STEP 2: If making hot chocolate, add 35 g of chocolate shavings to the milk. If simply frothing milk, skip to step 3.

STEP 3: Press **☺** once for thick hot froth, twice for light hot froth, three times for hot milk/hot chocolate and four times for cold froth.

STEP 4: Wait until the cycle is complete.

NOTE: When using the hot chocolate maker for several cycles, rinse the inside of the hot chocolate maker with cold water between cycles for best results.

Heating Milk in the Chocolatier

To heat milk without frothing:

STEP 1: Remove the frothing ring from the cup and replace with the heating ring located in the cup lid.

STEP 2: Pour the required amount of milk into the hot chocolate maker according to the guidelines for 'hot milk'.

STEP 3: Press **☺** three times and wait until the cycle is complete.

Boil-dry Protection

If there is insufficient milk in the hot chocolate maker, it will automatically shut off. If this happens, switch off and unplug the hot chocolate maker from the mains power supply. Allow to cool fully for at least 10 minutes before using again.

Storage

Check that the hot chocolate maker is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the hot chocolate maker; wrap it loosely to avoid causing damage.

Do not store the cord inside the hot chocolate maker.

Specifications

Product code: EK5134

Input: 220–240 V ~ 50/60 Hz

Output: 500 W

Notes:

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.


The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked \perp .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

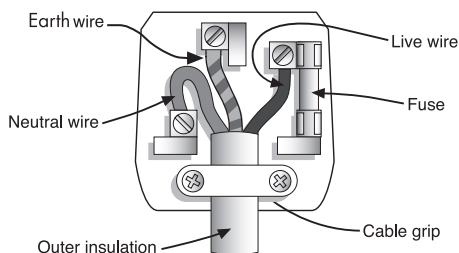

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Edmund-Rumpler Straße 5, 51149 Köln. Germany.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.salter.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

*To be eligible for the extended guarantee, go to **guarantee.upgs.com/salter** and register your product within 30 days of purchase.



Find us on 

www.facebook.com/SalterUK



SALTER[®]

SINCE 1760

PROFESSIONAL

Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**

Made in China.

©Salter trademark. All rights reserved.

