

WARNING **PLEASE READ**

- TO REDUCE DISCOLOURATION OF THE TRANSPARENT JUG, CLEAN THE UNIT IMMEDIATELY AFTER USE.
- HAND-WASH THE JUG AND LID INNERS USING A MILD DETERGENT WITH WARM WATER. WIPE THE JUG WITH A DAMP CLOTH, THEN RINSE.
- TO REMOVE STUBBORN STAINS, USE THE 'BLEND/CLEAN' FUNCTION. FOR A DEEPER CLEAN, USE THE CLEANING SPONGE PROVIDED TO TARGET TOUGH SPOTS.
- DARK-COLOURED INGREDIENTS, SUCH AS TOMATO, BEETROOT, TURMERIC AND BERRIES, MAY CAUSE DISCOLOURATION AT A FASTER RATE IF USED REGULARLY AND WITHOUT ADEQUATE CLEANING AFTER USE.
- DISCOLOURATION HAS NO EFFECT ON THE FUNCTIONALITY OF THE SOUP MAKER.
- NEVER SUBMERGE THE SOUP MAKER IN WATER.

FOR MORE TIPS
ON CLEANING THE SOUP MAKER:

SCAN HERE

