

SALTER®
SINCE 1760
PROFESSIONAL

Instructional Video Promotional Video



Precision
Grill Pro

Take the guesswork
out of grilling.

Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances. Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.
Do not leave the appliance unattended whilst connected to the mains power supply.
Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
Do not pull or carry the appliance by its power supply cord.
Do not use the appliance for anything other than its intended use.
Do not use any accessories other than those supplied.
Do not use this appliance outdoors.
Do not store the appliance in direct sunlight or in high humidity conditions.
Do not move the appliance whilst it is in use.
Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.
Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.
Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.
Always unplug the appliance after use and before any cleaning or user maintenance.
Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.
Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
Use of an extension cord with the appliance is not recommended.
This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.
This appliance is intended for domestic use only. It should not be used for commercial purposes.
The outer surface of the appliance may get hot during operation.



CAUTION: Hot surface – do not touch the hot section or heating components of the appliance.

Take care not to pour water on the heating element.

WARNING: Keep the appliance away from flammable materials.

Care and Maintenance

STEP 1: Before attempting any cleaning or maintenance, unplug the health grill from the mains power supply and check that it has fully cooled.

STEP 2: Wipe the grill housing with a soft, damp cloth and dry thoroughly.

STEP 3: Clean the accessories in warm, soapy water, then rinse and dry thoroughly.

STEP 4: Remove baked-on food by applying a small amount of warm water mixed with a mild detergent to the non-stick coated cooking plates, then wipe them clean with a paper towel or nonabrasive scourer.

Never use harsh or abrasive cleaning detergents or scourers to clean the health grill or its accessories, as this could damage the surface.

NOTE: The health grill should be cleaned after every use.

WARNING: The drip tray will gather oil and fat, which may still be hot after use. Allow it to cool fully before carefully removing the drip tray for cleaning.

Description of Parts



- | | |
|--|-------------------------|
| 1. Grill | 6. Temperature dial |
| 2. Upper housing | 7. On/off switch |
| 3. Lower housing | 8. Steak setting button |
| 4. Removable non-stick coated cooking plates | 9. Oil channel |
| 5. Removable plate switch | 10. Oil tray |

Instructions for Use

Before First Use

STEP 1: Before connecting to the mains power supply, wipe the health grill housing with a soft, damp cloth and dry thoroughly.

STEP 2: Clean the accessories in warm, soapy water, then rinse and dry thoroughly. Do not immerse the grill in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the grill or its accessories, as this could cause damage.

NOTE: When using the health grill for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the health grill.

Using the Grill

STEP 1: Prepare the ingredients that are to be grilled.

STEP 2: Plug in and switch on the health grill at the mains power supply. The on/off button will illuminate to show it is on and beep once.

STEP 3: Use the temperature dial to select the desired temperature and the grill will start to preheat. Preheat the health grill for approx. 3 minutes. The on/off button will beep and stop flashing when it has preheated.

STEP 4: Place the prepared ingredients onto the lower non-stick coated cooking plate and then close the lid.

STEP 5: Cooking times will differ, depending on the type of ingredients. Refer to the cooking chart.

STEP 6: Once cooking is complete, carefully open the lid and remove the food with a heat-resistant plastic or wooden spatula.

STEP 7: Switch off and unplug the grill from the mains power supply. Leave the lid open and allow to cool.

STEP 8: Use a non-stick coated spatula to channel any excess oil into the drip tray.

NOTE: Always preheat the non-stick coated cooking plates before starting to cook. Carefully apply a thin coat of cooking oil to the non-stick coated cooking plates, rubbing it in carefully with a paper towel. This will help to prolong the life of the non-stick coating.

CAUTION: The non-stick coated cooking plates get very hot during use; always use heat-resistant gloves to avoid injury.

WARNING: Exercise caution during cooking; the health grill will emit steam.

Precision Grill Chart

Ingredient	Temperature	Cooking time
Meat		
Bacon	230 °C	8 mins
Sausage	230 °C	10–11 mins
Thin steak	230 °C	4–5 mins
Burger	Rare steak setting	1–2 mins
Burger	Medium steak setting	2–3 mins
Burger	Well done steak setting	3–4 mins
Panini	230 °C	5–8 mins
Chicken breasts	160 °C	6 mins
Ribeye steak	230 °C	3 mins
Steak	Steak setting	Rare – 3 mins Medium – 5 mins Well done – 10 mins
Salmon	150 °C	3–4 Mins
Tuna steak	210 °C	2 mins (med/rare)
Vegetables		
Pepper	200 °C	3 mins
Red onion	200 °C	3 mins
Aubergine	200 °C	2 mins

Using the Steak Function

STEP 1: Prepare the ingredients that are to be grilled.

STEP 2: Plug in and switch on the health grill at the mains power supply. The on/off button will illuminate to show it is on and beep once.

STEP 3: Select the steak function and select the required doneness using the temperature dial. Once it has preheated the unit will beep 3 times and the button will flash blue.

STEP 4: Place the prepared ingredients onto the lower non-stick coated cooking plate and then close the lid.

STEP 5: Cook the food until the unit beeps 8 times.

STEP 6: Once cooking is complete, carefully open the lid and remove the food with a heat-resistant plastic or wooden spatula.

STEP 7: Switch off and unplug the grill from the mains power supply. Leave the lid open and allow to cool.

STEP 8: Use a non-stick coated spatula to channel any excess oil into the drip tray.

Removing the Non-stick Coated Plates

STEP 1: Push the latch up and gently pull the plate away from the tabs.

STEP 2: To put them back in, place the back of the plate in the tabs and slot the top into the latch.

Storage

Check that the health grill is cool, clean and dry before storing in a cool, dry place. Never store the health grill whilst it is wet.

Never wrap the cord tightly around the health grill; wrap it loosely to avoid causing damage.

Specifications

Product code: EK5374

Input: 220–240 V ~ 50/60 Hz

Output: 1600 W

Notes:

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.


The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked \perp .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

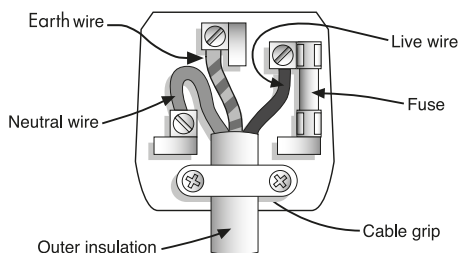

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Edmund-Rumpler Straße 5, 51149 Köln. Germany.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.salter.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

To be eligible for the extended guarantee,
go to **guarantee.upgs.com/salter** and register
your product within 30 days of purchase.

Find us on 

www.facebook.com/SalterUK

SALTER[®]
SINCE 1760
PROFESSIONAL

Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**

Made in China.

©Salter trademark. All rights reserved.

