

Description of Parts



1. NutriPro 1000 Blender base unit
2. Six-blade lid attachment
3. 1 litre blending cup
4. Storage lid

EN I PLEASE RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury. This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm. Keep the appliance and its power supply cord out of the reach of children. Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance. Do not immerse the electrical components of this appliance in water or any other liquid. Do not leave the appliance unattended whilst connected to the mains power supply. Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand. Do not pull or carry the appliance by its power supply cord. Do not use the appliance for anything other than its intended use. Do not use any accessories other than those supplied. Do not use any damaged accessories. Do not place boiling water or very hot liquid in the appliance. Do not dry blend ingredients; always add a small amount of liquid. Do not overload the appliance as the mixture level may rise during blending. Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user. Use of an extension cord with the appliance is not recommended. This appliance is intended for indoor domestic use only. It should not be used for commercial purposes.

WARNING: DO NOT TOUCH SHARP BLADES.

CARE AND MAINTENANCE

STEP 1: Switch off and unplug the blender from the mains power supply before performing any cleaning or user maintenance.

STEP 2: Wipe the blender base unit with a soft, damp cloth and allow to dry thoroughly.

STEP 3: To clean the blending cups, either rinse under a tap, or add soapy water and blend for 30 seconds.

STEP 4: Empty the water, fill again with fresh water and repeat until clean.

Never touch the blades; using extreme caution, clean the blade with a brush and dry carefully.

Never immerse the blender base unit or the underside of the six blade lid attachment in water or any other liquid.

Do not use harsh or abrasive scourers to clean the blender, as this could cause damage.

The blender and accessories, including the six blade lid attachment, are not suitable for use in a dishwasher.

NOTE: Always clean the blender immediately after each use.

WARNING: HANDLE THE SIX-BLADE LID ATTACHMENT WITH CARE, AS THE BLADES ARE SHARP. EXERCISE CAUTION WHEN ATTACHING, REMOVING, CLEANING OR STORING THE ATTACHMENTS.

INSTRUCTIONS FOR USE

BEFORE FIRST USE

Before using the blender for the first time, wash all of the accessories and the interior of the blending jug in warm, soapy water, then rinse and dry thoroughly.

Wipe the blender base unit with a soft, damp cloth and allow to dry thoroughly.

Do not immerse the blender base unit in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the blender or its accessories, as this could cause damage.

NOTE: When using the blender for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the blender.

WARNING: DO NOT TOUCH SHARP BLADES. MAX. CONTINUOUS OPERATION TIME IS 30 SECONDS. LEAVE TO COOL DOWN FOR AT LEAST 1 MINUTE BEFORE USING AGAIN.

Using the NutriPro 1000 Blender

STEP 1: Position the blender base unit onto a flat, stable surface, at a height that is comfortable for the user.

STEP 2: Place the ingredients into the blending cup, making sure that they do not exceed the max. fill mark.

STEP 3: Pour a small amount of liquid into the blending cup; this will help to blend the ingredients.

STEP 4: Secure the six-blade lid attachment onto the blending cup by twisting it in a clockwise direction.

STEP 5: Plug in and switch on the blender at the mains power supply.

STEP 6: To pulse blend the ingredients, invert the blending cup so that the six-blade lid attachment is facing downwards, align the three tabs with the corresponding slots in the blender base unit and then push it down.

STEP 7: For a continuous blend, press the blending cup down and twist it in a clockwise direction to lock it into position. To stop blending, twist the blending cup in an anticlockwise direction and lift it up and away from the blender base unit.

STEP 8: Switch off and unplug the blender from the mains power supply.

STEP 9: Remove the six-blade lid attachment by twisting it in an anticlockwise direction and then replace it with the storage lid, as required.

NOTE: Check that the lid is securely fitted before use.

If the blades are not running smoothly, stop the blender and carefully remove the six-blade lid attachment. Add a small amount of cold liquid or reduce the quantity of the ingredients in the blending cup.

CAUTION: Take care when handling the six-blade lid attachment, as the blades may get hot during use.

WARNING: DO NOT BLEND WARM OR HOT LIQUID OR FOOD, AS THIS MAY CAUSE A PRESSURE BUILD-UP AND, IN TURN, SERIOUS INJURY. DO NOT BLEND FOR LONG PERIODS OF TIME. MAX. OPERATION TIME IS 30 SECONDS;

ALLOW THE BLENDER TO COOL FOR 1 MINUTE BEFORE USING IT AGAIN. USING THE BLENDER FOR LONGER THAN 30 SECONDS AT A TIME WILL CAUSE THE TEMPERATURE TO INCREASE, WHICH MAY IN TURN LEAD TO A PRESSURE BUILD-UP. IF THIS HAPPENS, SWITCH OFF AND UNPLUG THE BLENDER FROM THE MAINS POWER SUPPLY AND ALLOW IT TO COOL THOROUGHLY BEFORE ATTEMPTING TO REMOVE THE SIX-BLADE LID ATTACHMENT. DO NOT IMMERSE THE BLENDING CUP IN COLD WATER AT THIS TIME. DO NOT EXCEED THE MAX. FILL MARK WHEN ADDING INGREDIENTS TO THE BLENDING CUP, AS THIS COULD CAUSE SPILLAGE AND MAY DAMAGE THE BLENDER. DO NOT OPERATE THE BLENDER IF THE BLENDING CUP IS CRACKED, BROKEN OR EMPTY.

Handy Hint

If the ingredients do not blend evenly, remove the blending cup from the NutriPro base unit. Shake the blending cup to redistribute the ingredients and then blend once more.

Storage

Reassemble the blender.

Check that the blender is cool, clean and dry before storing in a cool, dry place.

Specifications

Product code: EK2002V5

Operating voltage: 220–240 V ~ 50/60 Hz

Power: 1000 W

If this product does not reach you in an acceptable condition, please contact our Customer Services Department at salter.com. Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions). Go to salter.com/instruction-manuals.html and search **EK2002V5** to access the instruction manual for your product.

***To be eligible for the extended guarantee, go to guarantee.upgs.com/salter and register your product within 30 days of purchase.**

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

FULL INSTRUCTION MANUAL AT
salter.com/instruction-manuals.html
PRODUCT CODE: EK2002V5

SALTER®

NutriPro 1000

QUICK START GUIDE

Find us on 

www.facebook.com/SalterUK



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**

MADE IN CHINA.

salter.com

©Salter trademark. All rights reserved.

CD220223/MD000000/V1