

## SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance. This appliance is not a toy – children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its power supply cord out of the reach of children. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury. This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm. Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage. Do not immerse the electrical components of this appliance in water or any other liquid. Do not operate the appliance with wet hands, or if any connections are wet. Do not leave the appliance unattended whilst connected to the mains power supply. Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand. Do not pull or carry the appliance by its

power supply cord.

Do not use the appliance for anything other than its intended use.  
Do not use any power supply base unit other than the one provided with this appliance.  
Do not store the appliance in direct sunlight or in high humidity conditions.  
Do not move the appliance when it is in use.  
Do not fill the appliance above its max. fill mark. Overfilling the appliance may cause boiling water to be ejected.

Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or when storing it away. Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.  
This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Exercise caution when using this appliance, as steam will be emitted from the spout and/or lid, especially whilst refilling.



**CAUTION:** Hot surface – do not touch hot sections or heating components of the appliance.

The heating element surface is subject to residual heat after use.

Always allow the appliance to cool thoroughly before touching or opening the lid.

**WARNING: BOILING WATER AND STEAM CAN CAUSE SERIOUS INJURY; EXERCISE EXTREME CAUTION WHEN USING THIS APPLIANCE. DO NOT OPEN THE LID WHILE THE KETTLE IS BOILING. MISUSE OF THE APPLIANCE COULD CAUSE INJURY TO THE USER.**

## Boil-dry Sensor

The kettle is equipped with a boil-dry sensor. If the kettle is accidentally turned on whilst empty, the boil-dry sensor will activate causing the power to switch off. The kettle will then remain inactive and the power switch will not function for several minutes until the kettle is cool. Do not try to use the kettle during this time; once it has cooled down, it will resume its normal function.

## Care and Maintenance

Wipe the kettle and power base with a soft, damp cloth then allow it to dry thoroughly. Do not immerse the kettle in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the kettle as this could cause damage.

## Removing the 'New Kettle' Taste

Fill the kettle to the max. fill mark and boil the water, following the instructions in the section entitled 'Using the 3 kW Kettle'. If any slight 'new kettle' taste or odour remains in the boiled water, discard this and refill the kettle to three-quarters full. Once boiled, add two tablespoons of bicarbonate of soda and leave to stand overnight. Discard the water then re-boil a couple of times to remove any residue.

## Removing Limescale

Limescale can develop over time and may affect the performance and lifespan of the kettle.

It is recommended to descale the kettle regularly, at least once every three months, especially if the kettle is used in a hard water area. Frequent descaling will improve the performance and lifespan of the kettle. If the kettle switches off before it has boiled or a white deposit is noticed on the inside of the kettle, it needs to be descaled.

Add a commercial descaling agent to the kettle, adhering to the manufacturer's instructions. It is not recommended to use vinegar to descale the kettle.

#### Description of Parts



- |                           |                      |
|---------------------------|----------------------|
| 1. Kettle                 | 7. Water fill gauge  |
| 2. Power base             | 8. Pull-top lid      |
| 3. Power switch           | 9. Lid handle        |
| 4. Handle                 | 10. Spout            |
| 5. Min. fill mark (0.6 L) | 11. Limescale filter |
| 6. Max. fill mark (1.7 L) |                      |

#### Instructions for Use

##### Before First Use

Before using the kettle for the first time, wipe it clean with a soft, damp cloth and dry thoroughly. Check that the limescale filter is attached.

**NOTE:** When using the kettle for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the kettle.

**WARNING: THE KETTLE IS NOT SUITABLE FOR DISHWASHER USE.**

#### Using the 3 kW Kettle

**STEP 1:** Remove the kettle from the power base.

**STEP 2:** Open the lid and fill the kettle to desired water level between the min. fill mark and the max. fill mark. Replace the lid, making sure it clicks securely shut and place the kettle back onto the power base.

**STEP 3:** Plug in and switch on the kettle at the mains power supply and flip the power switch to the 'on' position until it clicks; it will illuminate to indicate that it is switched on. Do not touch the body of the kettle during use.

**STEP 4:** Once the kettle has boiled, the power switch will automatically flip back into the off position.

**NOTE:** The boiling process can be cancelled at any time by flicking the power switch back into the off position.

**CAUTION:** Allow the kettle to cool thoroughly before touching the body or opening the lid.

#### Storage

The kettle must be cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the kettle; wrap it loosely to avoid causing damage.

#### Specifications

Product code: EK5632

Input: 220–240 V ~ 50/60 Hz

Output: 2500–3000 W

If this product does not reach you in an acceptable condition, please contact our Customer Services Department at [salter.com](http://salter.com). Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Go to [salter.com/instruction-manuals.html](http://salter.com/instruction-manuals.html) and search **EK5632** to access the instruction manual for your product.

**\*To be eligible for the extended guarantee, go to [guarantee.upgs.com/salter](http://guarantee.upgs.com/salter) and register your product within 30 days of purchase.**

##### Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

FULL INSTRUCTION MANUAL AT  
[salter.com/instruction-manuals.html](http://salter.com/instruction-manuals.html)  
PRODUCT CODE: EK5632

# SALTER®

## 3 kW Kettle

### QUICK START GUIDE

Find us on

[www.facebook.com/SalterUK](http://www.facebook.com/SalterUK)

UK  
CA  
CE



Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**  
MADE IN CHINA.  
[salter.com](http://salter.com)

©Salter trademark. All rights reserved.

CD300323/MD000000/V1