

SALTER®

SINCE 1760

20 Litre

Digital Microwave

Elegantly designed for all kitchens.



Please retain instructions for future reference.

WARNING – READ BEFORE USE

Do not use the appliance with an extension cord.

If the door or door seals are damaged, the appliance must not be operated until it has been repaired by a competent person. It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Liquids and other foods must not be heated in sealed containers since they are liable to explode.

The heating of beverages in the appliance can result in delayed eruptive boiling, therefore extreme care must be taken when handling the container. Always allow beverages to stand for at least 20 seconds before handling. If necessary, stir during heating. Always stir after heating.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy – children should be supervised to ensure that they do not play with the appliance.

When heating food in plastic or paper containers, keep an eye on the appliance due to possibility of ignition.

The appliance is intended only for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar items may lead to risk of injury, ignition or fire.

If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

The contents of feeding bottles and baby food jars should be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

Eggs in their shell and whole hard-boiled eggs should not be heated in the appliance since they may explode, even after microwave heating has ended.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances. Failure to maintain the appliance in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

Care should be taken not to displace the turntable when removing containers from the appliance.

Do not use metallic containers for food and beverages during microwave cooking.

Do not immerse the appliance in water or any other liquid.

Do not immerse the turntable in cold water directly after use – wait at least 20 minutes to avoid the risk of cracking.

Do not operate the appliance with wet hands.

Do not clean the appliance with a steam cleaner or water jet.
Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

CAUTION: Hot surface – do not touch any sections or surfaces of the appliance that may become hot or the heating components of the appliance.

WARNING: Keep the appliance away from flammable materials.

Product Group Definition

This product is a Group 2 Class B appliance.

Group 2 ISM equipment: Group 2 contains all ISM equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, EDM and arc welding equipment.

Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

Internal LED light < 60 lm.

Installing the Digital 20 Litre Microwave

The appliance is intended to be used on the countertop only;

it should not be placed in a cabinet.

The appliance should be installed away from sources of heat and humidity.

To ensure sufficient ventilation, the appliance should have at least 10 cm of free space between its back and the wall, 5 cm of free space between its sides and the wall and 20 cm of free space above it. The appliance should be at least 85 cm above floor level on a flat, stable, heat-resistant surface.

The appliance should be at least 5 m away from any TVs, radios or other appliances with antennas, as picture disturbance or noise may occur.

The appliance must be positioned so that the plug is accessible.

Care and Maintenance

Switch off and unplug the microwave from the mains power supply and allow it to cool fully before attempting any cleaning or maintenance.

STEP 1: Wipe the exterior of the microwave with a soft, damp cloth and dry thoroughly.

STEP 2: Using a soft, damp cloth, wipe the microwave door and window, door seals and control panel to remove any spill or spatter.

STEP 3: Wipe the interior surfaces, including the waveguide cover, with a soft, damp cloth, to remove any built-up grease, as this may begin to smoke or catch fire.

Do not use harsh or abrasive cleaning detergents or scourers to clean the microwave or its accessories, as this could cause damage.

NOTE: The microwave should be cleaned after each use.

CAUTION: The microwave should be cleaned regularly and any food deposits removed.

WARNING: Do not remove the waveguide cover.

Failure to maintain the microwave in a clean condition could lead to deterioration of the surface that could adversely affect the life of the microwave and possibly result in a hazardous situation.

Description of Parts



- | | |
|---|-------------------------------|
| 1. Digital 20 Litre Microwave main unit | 10. Control panel |
| 2. Door handle | 10a. Micro Power button |
| 3. Door lock | 10b. Express button |
| 4. Viewing window | 10c. Time/Weight control dial |
| 5. Roller ring | 10d. Defrost/Clock button |
| 6. Rotating coupler | 10e. Auto Cooking button |
| 7. Turntable | 10f. Pause/Cancel button |
| 8. Waveguide cover | 10g. Instant/Start button |
| 9. LED display | |

Instructions for Use

Before First Use

Clean the microwave following the instructions in the section entitled 'Care and Maintenance'.

Place the microwave onto a flat, stable, heat-resistant surface at a height that is comfortable for the user.

STEP 1: Place the roller ring in the centre of the microwave and place the turntable on top. Ensure that it is engaged in the rotating coupler and the turntable moves freely.

NOTE: When using the microwave for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the microwave. It is advised to heat a small cup of water in the microwave before first use as this will help to remove residue from manufacturing inside the cavity and will prevent the initial smoke or odour from affecting the taste of the food.

ALWAYS ALLOW BEVERAGES/ LIQUIDS TO STAND FOR AT LEAST 20 SECONDS BEFORE HANDLING TO AVOID ERUPTIVE BOILING.

Using the Digital 20 Litre Microwave

STEP 1: Plug in and switch on the microwave at the mains power supply.

STEP 2: Place the food to be microwaved onto the glass turntable and close the door. Make sure to use microwave-safe plates or containers.

Setting the Time

When the microwave is plugged into the mains power supply, the LED display will illuminate and the ':' on the clock will flash.

Example: to set 12:30

STEP 1: Once the microwave is plugged in, the LED display will show '1:00' and ':' will flash.

STEP 2: Press and hold 'Defrost/Clock' for approx. 3 seconds. The LED display will show '1:00' and '1' will flash.

STEP 3: Turn the 'Time/Weight' control dial to set the hour. The LED display will show '12:00'.

STEP 4: Press 'Defrost/Clock' again. The LED display will show '12:00' and '00' will flash.

STEP 5: Turn the 'Time/Weight' control dial to set the minute. The LED display will show '12:30'.

STEP 6: Press 'Defrost/Clock' or wait for approx. 60 seconds to confirm and set the time.

Micro Power Button

High power	100 % power. Ideal for quick and thorough cooking.
Medium/high power	80 % power. Ideal for medium express cooking.
Medium power	60 % power. Ideal for steaming food.
Medium/low power	40 % power. Ideal for defrosting food.
Low power	20 % power. Ideal for keeping food warm.

CAUTION: The maximum time that can be set is 60 minutes. When using the maximum power setting, the microwave will automatically lower the power after a length of time to increase lifespan.

Close the door and press 'Instant/Start' after turning food to resume the cooking process.

If the food needs to be removed before the end of the preset time, press 'Pause/Cancel' once to clear the preset to avoid unintended operation.

Example: to cook at 80 % power for 10 minutes

STEP 1: Select the desired power setting by pressing 'Micro Power' to cycle through the presets. The LED display will show '80P'.

STEP 2: Turn the 'Time/Weight' control dial to set the cooking time. The display will show '10:00'.

STEP 3: Press 'Instant/Start' to start cooking. The LED display will show the remaining cooking time.

CAUTION: It is recommended to wear heat-resistant oven gloves when removing cooked food from the microwave. Avoid touching the heating element on the roof of the cooking cavity.

Express Function

This function is ideal for heating beverages. Press 'Express' repeatedly to cycle through 0:30, 1:00 or 1:30; larger beverages will require more heating time.

Example: to express cook for 1 minute

STEP 1: Press 'Express' to cycle through the options and select the desired time. The LED display will show '1:00'.

STEP 2: Press 'Instant/Start' to start heating.

Defrost Function

This function is ideal for defrosting food. Press '**Defrost/Clock**' repeatedly to cycle through **d.1**, **d.2** and **d.3**.

d.1	Ideal for defrosting meat (0.1–2.0 kg).
d.2	Ideal for defrosting poultry (0.2–3.0 kg).
d.3	Ideal for defrosting seafood (0.1–0.9 kg).

Example: to defrost 0.4 kg of poultry

STEP 1: Press '**Defrost/Clock**' twice to select the poultry defrost mode. The LED display will show '**d.2**'.

STEP 2: Turn the 'Time/Weight' control dial to set the defrost weight. The LED display will show '**0.4**'.

STEP 3: Press '**Instant/Start**' to start defrosting.

STEP 4: When the microwave beeps, turn the food. Close the door and press '**Instant/Start**' to continue defrosting.

NOTE: Turn food halfway through defrosting for better results.

CAUTION: Do not put thawed food back in the freezer.

Auto Cooking Function

The microwave has a built-in setting for common food items. With the LED display flashing, turn the '**Auto Cooking**' control dial to cycle through '**A.1**'–'**A.8**'.

Display	Food Type	Method
A.1	Popcorn	Ideal for bags weighing 0.1 kg.
A.2	Reheat	5 options. (0.2, 0.4, 0.6, 0.8, 1.0 kg).
A.3	Beverage	3 options. (1, 2, 3 cup – 1 cup is approx. 250 ml).
A.4	Pizza	2 options. (1, 2 piece).
A.5	Potato	Cut the potato into 5 mm cubes. The total weight should be 0.45–0.65 kg. Place the chips on a large dish and cover with a thin film to prevent water loss.
A.6	Vegetable	5 options. (0.1, 0.2, 0.3, 0.4, 0.5 kg).
A.7	Meat	5 options. (0.1, 0.2, 0.3, 0.4, 0.5 kg).
A.8	Fish	5 options.(0.1, 0.2, 0.3, 0.4, 0.5 kg).

CAUTION: The starting temperature of the food should be 20–25 °C. Higher or lower temperatures will require an increase or decrease in cooking time.

The temperature, weight and shape of food will largely influence the cooking process. If ingredients used differ from the options above, adjust the cooking time.

Example: to steam 0.5 kg of fish

STEP 1: Once the microwave is plugged in, the LED display will show '1:00'.

STEP 2: Press 'Auto Cooking' to select the cooking function. The LED display will show 'A.8'.

STEP 3: Turn the 'Time/Weight' control dial to set the weight. The LED display will show '0.5'.

STEP 4: Press 'Instant/Start' to start cooking. The LED display will show the remaining cooking time.

Automatic Starting (Delayed Function)

This function is ideal for presetting the cooking process. To use this function, the cooking programme and time need to be set.

Example: it is currently 12:30. The user wants to cook with 100 % power for 9 minutes and 30 seconds, starting at 14:20

STEP 1: Once the microwave is plugged in, the LED display will show '1:00'.

STEP 2: Press and hold 'Defrost/Clock' for approx. 3 seconds. The LED display will show '1:00'.

STEP 3: Turn the 'Time/Weight' control dial to set the current time. The LED display will show '12:00'. Press 'Defrost/Clock' to confirm.

STEP 4: Turn the 'Time/Weight' control dial to set the minutes. The LED display will show '12:30'. Press 'Defrost/Clock' to confirm.

STEP 5: Select the desired power by pressing 'Micro Power' to cycle through the settings. The LED display will show '100P'.

STEP 6: Turn the 'Time/Weight' control dial to set the cooking time. The LED display will show '9:30'.

STEP 7: Press and hold 'Defrost/Clock' for approx. 3 seconds to return to the current time.

STEP 8: Repeat steps 1–4 to set the time the food needs to start cooking.

NOTE: The preset time can be checked by pressing 'Defrost/Clock'.

Multi-sequence Cooking Function

Settings can be customised in order to achieve the best cooking results.

Example: to set a cooking programme with 100P for 3 minutes, then 20P for 9 minutes

STEP 1: Select the desired power by pressing 'Micro Power' to cycle through the settings. The LED display will show '100P'.

STEP 2: Turn the 'Time/Weight' control dial to set the cooking time. The LED display will show '3:00'.

STEP 3: Select the desired power by pressing 'Micro Power' to cycle through the settings. The LED display will show '20P'.

STEP 4: Turn the 'Time/Weight' control dial to set the cooking time. The LED display will show '9:00'.

STEP 5: Press 'Instant/Start' to start cooking. When the first cooking programme has finished, the next one will start automatically.

NOTE: A maximum of 4 cooking sequences can be set at one time.

Child Lock Function

This feature is ideal for locking the control panel when cleaning or to prevent children from using the microwave unsupervised. All buttons are rendered inoperable when the child lock function is used.

STEP 1: Press and hold 'Pause/Cancel' for approx. 3 seconds to lock.

STEP 2: Press and hold 'Pause/Cancel' for approx. 3 seconds again to unlock.

Storage

Check that the microwave is cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the microwave; wrap it loosely to avoid causing damage.

Specifications

Product code: EK5653

Capacity: 20 L

Input: 220–240 V ~ 50 Hz

Rated input power: 1150–1280 W

Output power: 800 W

Frequency: 2450 MHz

SERVICING SAFEGUARDS FOR QUALIFIED ELECTRICIANS ONLY

CAUTION: MICROWAVE RADIATION.

1. The high voltage capacitor remains charged after disconnection; short the negative terminal of the H.V capacitor to the oven chassis using a screwdriver to discharge before touching.
2. During servicing, the below listed parts are liable to be removed and give access to potentials above 250 V to earth.
 - Magnetron
 - High voltage transformer
 - High voltage capacitor
 - High voltage diode
 - High voltage fuse
3. The following conditions may cause undue microwave exposure during servicing:
 - Improper fitting of magnetron
 - Improper matching of door interlock, door hinge and door
 - Improper fitting of switch support
 - The door, door seal or enclosure has been damaged

Notes:

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (⏏)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked **⏏**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (⏏).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt, consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

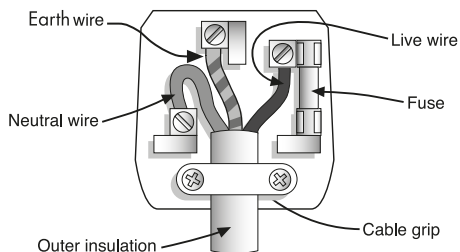

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Edmund-Rumpler Straße 5, 51149 Köln. Germany.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **salter.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

To be eligible for the extended guarantee, go to guarantee.upgs.com/salter and register your product within 30 days of purchase.

Find us on 

www.facebook.com/SalterUK

SALTER®

Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**

Made in China.

©Salter trademark. All rights reserved.






Manchester
OL9 0DD
United Kingdom
www.upgs.com

**ULTIMATE PRODUCTS
HOME OF BRANDS**

Artworker:	Darcy Owen-Towe
Date:	3/04/2022
Project Name:	EEK230221 UPG EK5653
Type of Artwork:	Instruction Manual
Size:	A5 16 PP
Software Used:	InDesign CC23
Typefaces:	ITC Avant Garde Gothic Pro

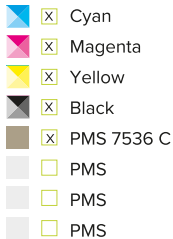

Artwork Version 1

Artwork Scale 1:1

©2023 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE
ARTWORK REFERENCE ONLY