 
 
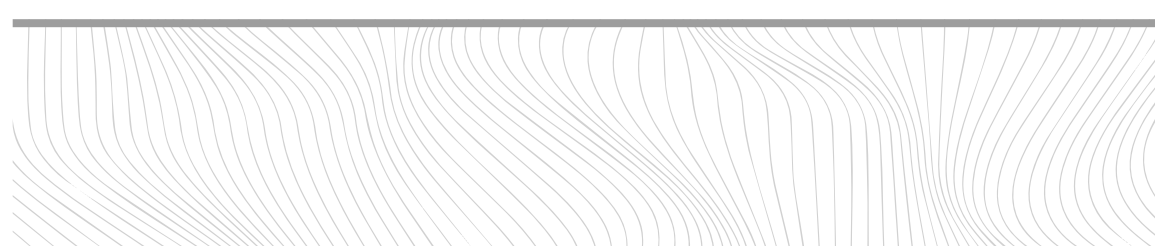 


User manual

Manual microwave

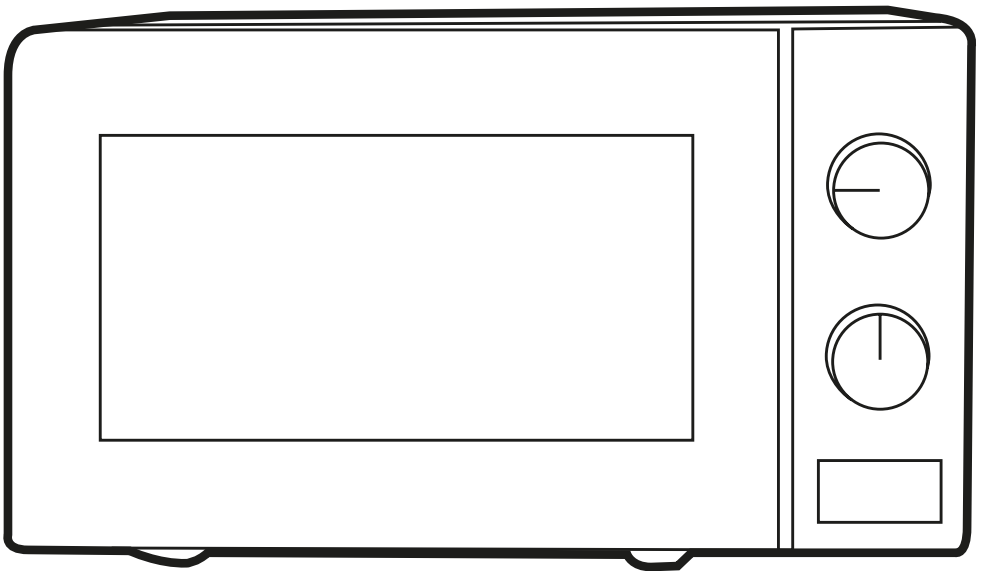

Description of parts

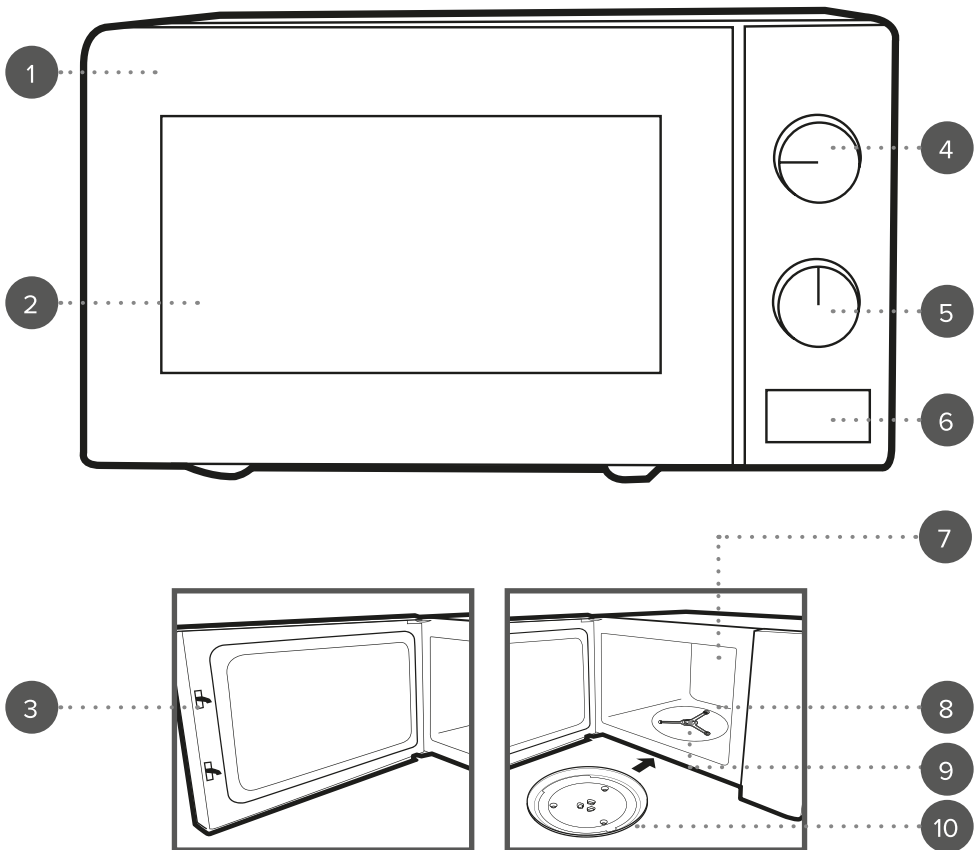

- 1. Microwave main unit
- 2. Viewing window
- 3. Door lock
- 4. Power dial
- 5. Timer dial

- 6. Door release button
- 7. Waveguide cover
- 8. Roller ring
- 9. Rotating coupler
- 10. Glass turntable



WARNING – READ BEFORE USE

Do not use the appliance with an extension cord. If the door or door seals are damaged, the appliance must not be operated until it has been repaired by a competent person. It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury. This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm. Liquids and other foods must not be heated in sealed containers since they are liable to explode. The heating of beverages in the appliance can result in delayed eruptive boiling, therefore extreme care must be taken when handling the container. Always allow beverages to stand for at least 20 seconds before handling. If necessary, stir during heating. Always stir after heating.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.
- This appliance is not a toy – children should be supervised to ensure that they do not play with the appliance.
- When heating food in plastic or paper containers, keep an eye on the appliance due to possibility of ignition.
- The appliance is intended only for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar items may lead to risk of injury, ignition or fire.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- The contents of feeding bottles and baby food jars should be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in the appliance since they may explode, even after microwave heating has ended.
- Keep the appliance and its power supply cord away from heat or sharp

edges that could cause damage.

- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Failure to maintain the appliance in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Care should be taken not to displace the turntable when removing containers from the appliance.
- Do not use metallic containers for food and beverages during microwave cooking.
- Do not immerse the appliance in water or any other liquid.
- Do not immerse the turntable in cold water directly after use – wait at least 20 minutes to avoid the risk of cracking.
- Do not operate the appliance with wet hands.
- Do not clean the appliance with a steam cleaner or water jet.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not use the appliance for anything other than its intended use.
- Do not move the appliance whilst it is in use.
- Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Hot surface – do not touch any sections or surfaces of the appliance that may become hot or the heating components of the appliance.



WARNING: Keep the appliance away from flammable materials.

Product group definition

This product is a Group 2 Class B appliance.

Group 2 ISM equipment: Group 2 contains all ISM equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, EDM and arc welding equipment.

Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

Installing the microwave

The appliance is intended to be used on the countertop only; it should not be placed in a cabinet. The appliance should be installed away from sources of heat and humidity.

To ensure sufficient ventilation, the appliance should have at least 10 cm of free space between its back and the wall, 5 cm of free space between its sides and the wall and 20 cm of free space above it. The appliance should be at least 85 cm above floor level on a flat, stable, heat-resistant surface. The appliance should be at least 5 m away from any TVs, radios or other appliances with antennas, as picture disturbance or noise may occur.

The appliance must be positioned so that the plug is accessible.

Do not remove the legs from the bottom of the appliance.

Blocking the intake and/or outlet openings can damage the appliance.

Care and maintenance

Switch off and unplug the microwave from the mains power supply and allow it to cool fully before attempting any cleaning or maintenance.

STEP 1: Wipe the exterior of the microwave with a soft, damp cloth and dry thoroughly.

STEP 2: Using a soft, damp cloth, wipe the microwave door and window, door seals and control panel to remove any spill or spatter.

STEP 3: Wipe the interior surfaces, including the waveguide cover, with a soft, damp cloth, to remove any built-up grease, as this may begin to smoke or catch fire.

Do not use harsh or abrasive cleaning detergents or scourers to clean the microwave or its accessories, as this could cause damage.



NOTE: The microwave should be cleaned after each use.



CAUTION: The microwave should be cleaned regularly and any food deposits removed.

WARNING: Do not remove the waveguide cover. Failure to maintain the microwave in a clean condition could lead to deterioration of the surface that could adversely affect the life of the microwave and possibly result in a hazardous situation.

Instructions for use

Before first use

Clean the microwave following the instructions outlined in the section entitled 'Care and maintenance'. Place the microwave main unit onto a stable, heat-resistant surface, at a height that is comfortable for the user.

Ensure the roller ring is installed in the centre of the microwave and place the glass turntable on top, ensuring it is engaged in the rotating coupler. Ensure the glass turntable moves freely.



NOTE: When using the microwave for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the microwave during use. It is advised to heat a small cup of water in the microwave before first use as this will help to remove residue from manufacturing inside the cavity and will prevent the initial smoke or odour from affecting the taste of the food.

ALWAYS ALLOW BEVERAGES/ LIQUIDS TO STAND AT LEAST 20 SECONDS BEFORE HANDLING TO AVOID ERUPTIVE BOILING.

Using the microwave

Dial setting	Microwave power	Microwave output ratio
1	Low	17 % microwave power
2	Medium low/Defrost	33 % microwave power.
3	Med	55 % microwave power
4	M.High	77 % microwave power
5	High	100 % microwave power

STEP 1: Plug in and switch on the microwave at the mains power supply.

STEP 2: Place the food to be microwaved on the glass turntable and close the door, please ensure to use microwave safe plates or containers.

STEP 3: Select the desired power level using the power dial.

STEP 4: Turn the timer dial to the desired cooking time. If the desired time is less than two minutes, turn the timer dial to three minutes and turn back to the desired time.

STEP 5: Cooking will automatically begin once the desired time is set. To pause the microwave, open the door at any time. Operation will resume once the door is closed again.

STEP 6: When the cooking time has elapsed, a noise will sound and the light will switch off.



NOTE: If food is removed before the cooking time has elapsed, ensure the timer dial is set to '0' to avoid the microwave continuing to operate whilst empty.



CAUTION: It is recommended to wear gloves when removing cooked foods from the microwave, avoid touching the heating element on the roof of the cooking cavity.

Defrost function

To use the defrost function, turn the power dial to medium low/defrost then use the defrost weight markings on the timer dial to begin.



NOTE: Turn food halfway through defrosting for better results.



CAUTION: Do not put thawed food back in the freezer.

Storage

Check that the microwave is cool, clean and dry before storing in a cool, dry place.
Never wrap the cord tightly around the microwave wrap it loosely to avoid causing damage.

Specifications

Product code: EK5920

Capacity: 20 L

Input: 230–240 V ~ 50 Hz

Rated input power: 1100–1150 W

Output power: 650–700 W

Frequency: 2450 MHz

SERVICING SAFEGUARDS FOR QUALIFIED ELECTRICIANS ONLY



CAUTION: MICROWAVE RADIATION.

1. The high voltage capacitor remains charged after disconnection; short the negative terminal of the H.V capacitor to the oven chassis using a screwdriver to discharge before touching.
2. During servicing, the below listed parts are liable to be removed and give access to potentials above 250 V to earth.
 - Magnetron
 - High voltage transformer
 - High voltage capacitor
 - High voltage diode
 - High voltage fuse
3. The following conditions may cause undue microwave exposure during servicing:
 - Improper fitting of magnetron.
 - Improper matching of door interlock, door hinge and door.
 - Improper fitting of switch support.
 - The door, door seal or enclosure has been damaged.



Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD000000/MD000000/V1