

 


Speed setting guide

| Attachment | Speed Setting | Mixture | Operation Method & Timings |
|--|---------------|--|---|
|  | 1–3 | 585 g dry ingredients and 315 g wet ingredients. | Speed setting 1–2 for 30 seconds, followed by speed setting 3–4 for 30 seconds, then speed setting 5 for 2–4 mins, to form a cluster. |
|  | 2–6 | 400 g dry ingredients and 500 g wet ingredients. | Speed setting 2 for 20 seconds, followed by speed setting 6 for 2 mins 40 seconds. |
|  | 4–6 | Min. 3 egg whites. | Speed setting 6–8 for max. 3 mins. |

Storage

Check that the stand mixer is cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the stand mixer; wrap it loosely to avoid causing damage.

Troubleshooting

 
 
| Problem | Solution |
|--|---|
| The stand mixer is not working. | Check that the stand mixer is plugged in and switched on at the mains power supply. Switch off and unplug the stand mixer before checking whether all parts are correctly assembled. |
| It is not clear which speed setting to use. | Follow the instructions in the section entitled ' Speed setting guide '. |
| Egg whites are not whipping. | Make sure that the bowl and whisk are completely clean and dry before use; even the smallest amount of fat can affect whipping performance. |
| Bread dough will not combine. | Additional liquid may need to be added to the mixture. Do not use a high-speed setting to knead bread dough. |
| The mixture curdles after adding egg. | Add eggs one at a time and beat well. Check that the eggs are at room temperature. |
| Sugar is still visible after creaming the mixture. | Continue to cream the mixture until the sugar has completely dissolved or try using caster sugar. |
| There are lumps in the batter or dough. | Sift ingredients such as flour and sugar before mixing. |

Specifications

Product code: EK5620
Operates from 220–240 V ~ 50–60 Hz
Output: 1200 W

User manual

Stand mixer

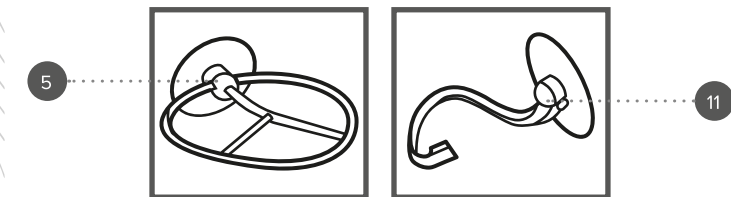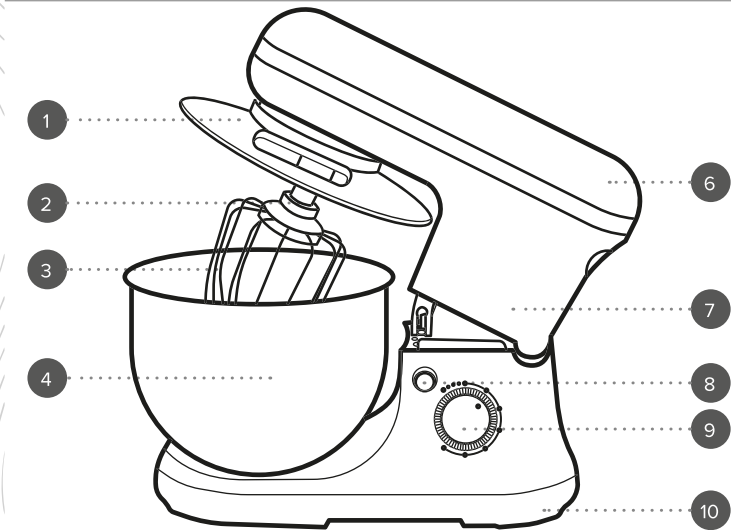


1. Splash guard
2. Attachment shaft
3. Whisk
4. Mixing bowl
5. Flat beater
6. Stand mixer head

7. Stand mixer main unit
8. Tilt release button
9. Speed control dial
10. Non-slip suction feet
11. Dough hook



Disposal of Waste Batteries and Electrical and Electronic Equipment

 This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD020323/MD040923/V3



SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.
- Do not immerse the electrical components of this appliance in water or any other liquid.
- Do not operate the appliance with wet hands.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.
- Do not use the appliance for anything other than its

intended use.

- Do not use any attachments other than those supplied.
- Do not use any damaged attachments.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not touch any moving parts on this appliance during use, as this could cause injury.
- Do not touch any sections of the appliance that may become hot during use, as this could cause injury.
- Do not cover the air vents during use, as this may cause the appliance to overheat.
- Do not use broken or loose attachments.
- Switch off the appliance and disconnect it from the mains power supply before changing or fitting attachments.
- Always place the appliance on a flat, stable surface at a height that is comfortable for the user.
- Always unplug the appliance after use and before any cleaning or user maintenance.
- Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.

Care and maintenance

STEP 1: Switch off and unplug the stand mixer from the mains power supply before performing any cleaning or user maintenance.

STEP 2: Wipe the stand mixer main unit with a soft, damp cloth and allow to dry thoroughly.

STEP 3: Wash all of the attachments and the mixing bowl in warm, soapy water, then rinse and dry thoroughly. Do not immerse the stand mixer main unit in water or any other liquid. Do not use harsh or abrasive detergents or scourers to clean the stand mixer, as this could cause damage.



NOTE: The stand mixer should be cleaned after each use. The stand mixer and accessories are not suitable for use in a dishwasher.

Instructions for use

Before first use

Before using the stand mixer for the first time, clean it following the instructions in the section entitled 'Care and maintenance'.



NOTE: When using the stand mixer for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the stand mixer.

Assembling and using the stand mixer

STEP 1: Before connecting to the mains power supply, place the stand mixer main unit onto a flat, stable surface, at a height that is comfortable for the user.

STEP 2: Place one hand on top of the stand mixer and use the other to press the tilt release button. Gently lift the stand mixer head until it locks in the open position.

STEP 3: Measure out the ingredients to be mixed and place them into the mixing bowl. Place the mixing bowl onto the stand mixer main unit and rotate it in a clockwise direction until it locks into position.

STEP 4: Select the required mixing tool:

Flat beater – perfect for making cakes, biscuits, pastry, icing, filling and mashed potatoes.

Whisk – designed to whisk eggs, cream, batter, low-fat sponges, meringues, cheesecakes, mousses and soufflés.

Dough hook – ideal for yeast mixtures such as bread, pizza bases and doughnuts.

Lock the mixing tool into place by pushing it onto the attachment shaft so the pins on the shaft align with the recesses on the mixing tool. Push the mixing tool upwards and twist in an anticlockwise direction until secure.

STEP 5: Carefully attach the splash guard.

STEP 6: Use one hand to press the tilt release button and the other to push the stand mixer head downwards until it locks in the closed position.

STEP 7: Plug in and switch on the stand mixer at the mains power supply.

STEP 8: To begin mixing, rotate the speed control dial in a clockwise direction, until the desired speed setting is selected.

STEP 9: If necessary, stop the stand mixer by rotating the speed control dial to position '0' and scrape any mixture from the sides of the mixing bowl with a wooden or silicone spatula. Resume mixing by rotating the speed control dial back to the desired speed setting.

STEP 10: Once mixing is complete, turn off the stand mixer by rotating the speed control dial to position '0'.

STEP 11: Switch off and unplug the stand mixer from the mains power supply.

STEP 12: Place one hand on top of the stand mixer and use the other to press the tilt release button. Gently lift the stand mixer head until it locks in the open position.

STEP 13: To remove the mixing tool, rotate it in a clockwise direction and gently pull away from the attachment shaft.

STEP 14: To remove the mixing bowl, rotate it in an anticlockwise direction and carefully lift up and away from the stand mixer main unit.



NOTE: Check that the mixing bowl and mixing tool are securely fitted before use; do not attempt to remove them until the stand mixer has stopped moving. Do not overfill the mixing bowl. It is recommended to always begin mixing on a low speed setting before gradually increasing to a high speed setting; this should prevent the ingredients from splattering.



WARNING: Never operate the stand mixer whilst the stand mixer head is raised. Do not operate the stand mixer when the mixing bowl is empty. To avoid overworking the motor and to prolong the life of the stand mixer, rest for at least 10 mins in between uses and always follow the timings displayed in the 'Speed setting guide'.