

Troubleshooting

Problem	Possible cause	Solution
The hand blender will not operate.	The hand blender is not connected to the mains power supply.	Plug in and switch on the hand blender at the mains power supply.
The blades will not move when in contact with ingredients.	The ingredients are hard vegetables such as potato, carrot and turnip, making it difficult for the hand blender to blend.	Only blend ingredients such as cooked vegetables or soft fruit.

Storage


Reassemble the hand blender.  
Check that the hand blender is cool, clean and dry before storing in a cool, dry place.  
Never wrap the cord tightly around the hand blender; wrap it loosely to avoid causing damage.

Specifications

Product code: EK5612  
Input: 220–240 V ~ 50/60 Hz  
Output: 500–700 W




**Disposal of Waste Batteries and Electrical and Electronic Equipment**

 This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

User manual

Hand Blender

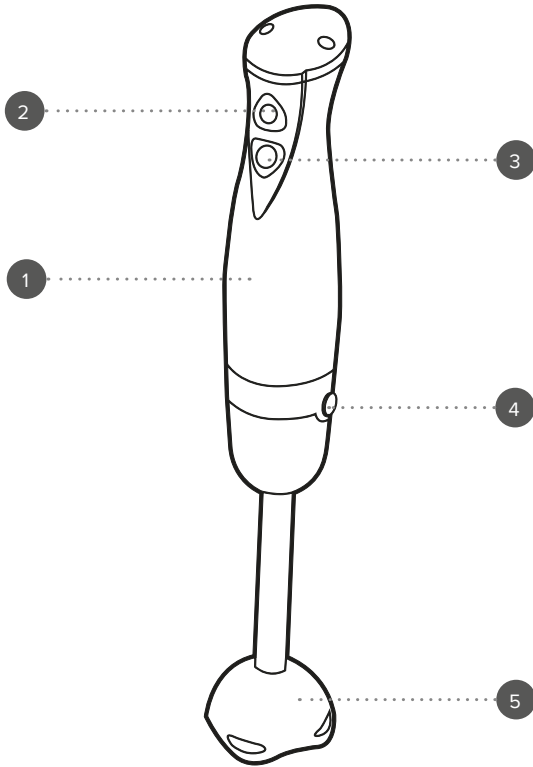

1. Hand blender unit  
2. Power button  
3. Turbo button
4. Attachment release buttons  
5. Blender attachment

Manufactured by:  
Ultimate Products UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Ultimate Products Europe Ltd.,  
19 Baggot Street Lower, Dublin D02 X658. **ROI.**  
**MADE IN CHINA.**

## SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.
- Do not immerse the electrical components of this appliance in water or any other liquid.
- Do not operate the appliance with wet hands.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance if it has been dropped, if there are visible signs of damage.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use any damaged accessories.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.

- Do not dry blend ingredients; always add a small amount of liquid.
- Do not touch any moving parts on this appliance during use, as this could cause injury.
- Do not touch any sections of the appliance that may become hot during use, as this could cause injury.
- Do not use broken or loose cutting or rotating blades.
- Switch off the appliance and disconnect from power supply before changing accessories or approaching parts that move in use.
- Always unplug the appliance after use and before any cleaning or user maintenance.
- Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



**WARNING:** Do not touch sharp blades.

### Care and maintenance

**STEP 1:** Switch off and unplug the hand blender from the mains power supply before performing any cleaning or user maintenance.

**STEP 2:** Wipe the hand blender unit with a soft, damp cloth and allow to dry thoroughly.

**STEP 3:** Wash the accessories in warm, soapy water, then rinse and dry thoroughly. Never touch the chopping blades; using extreme caution, clean the blades with a brush and dry carefully. Do not immerse the hand blender base unit in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the blender, as this could cause damage.

The hand blender is not suitable for use in a dishwasher.



**NOTE:** The hand blender should be cleaned after every use.



**WARNING:** Handle the attachments with care, as the blades are sharp. Exercise caution when attaching, removing, cleaning or storing the attachments.

## Instructions for use

### Before first use

Clean the hand blender and its accessories following the instructions in the section entitled '**Care and maintenance**'.



**NOTE:** When using the hand blender for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the hand blender.

### Using the hand blender

The attachment must be securely fitted before use; do not attempt to remove them until the attachment has stopped moving.



**WARNING:** MAXIMUM OPERATION TIME IS 1 MINUTE. ALLOW TO COOL FOR 2 MINUTES BEFORE USING THE HAND BLENDER AGAIN.

**STEP 1:** Before connecting the hand blender to the mains power supply, carefully attach the blender attachment to the hand blender unit by aligning the tabs and gently push until it clicks into place.

**STEP 2:** Place the food to be prepared into a suitable bowl.

**STEP 3:** Plug in and switch on the hand blender at the mains power supply.

**STEP 4:** Holding the bowl steady, put the blade of the blender attachment into the food and press and hold the desired function button on the hand blender unit.

**STEP 5:** Once the food has been blended to the required consistency, release the button press and wait for the blade to stop rotating before removing the hand blender from the bowl.

**STEP 6:** To remove the blender attachment from the hand blender, push the attachment release buttons and pull it away from the hand blender.



**CAUTION:** Switch off and unplug the hand blender from the mains power supply before adding or removing food from the bowl.

**WARNING:** Do not operate the hand blender without food, as this can cause damage. Switch off and unplug the hand blender from the mains power supply before attempting to remove the blender attachment and before cleaning.

UP<sup>®</sup>

ULTIMATE PRODUCTS  
HOME OF BRANDS

Manchester  
OL9 0DD  
United Kingdom  
www.upplc.com

Artworker:Matt Short

Date:03/01/2024

Project Name:EEK232485 ULT EK5612

Type of Artwork:Instruction Leaflet

Size:A4 Leaflet

Software Used:Indesign CC 24

Typefaces:Proxima Nova

Cyan

Magenta

Yellow

X

Black

PMS

PMS

PMS

PMS

Artwork Version 1

Artwork Scale 1:1

©2023 Ultimate Products UK Ltd. All designs, images and artwork are the copyright of Ultimate Products UK Ltd. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of Ultimate Products UK Ltd. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE  
ARTWORK REFERENCE ONLY