

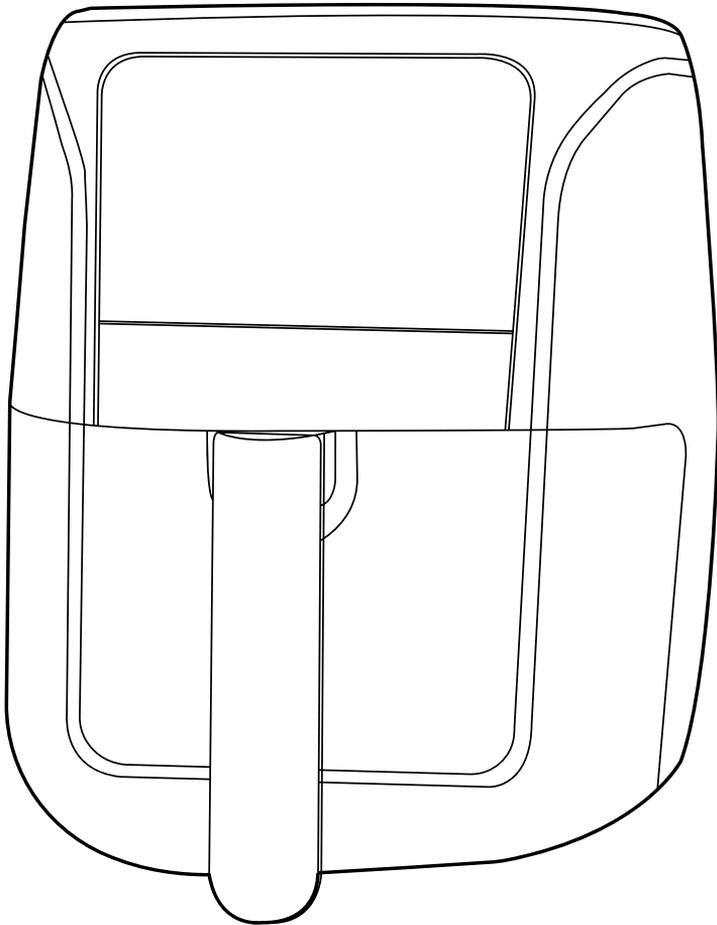
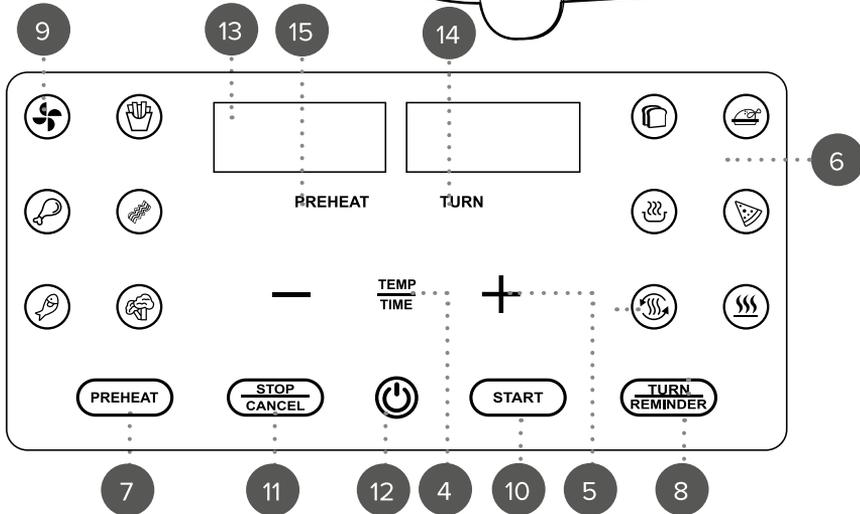


User manual

5.7 litre digital air fryer

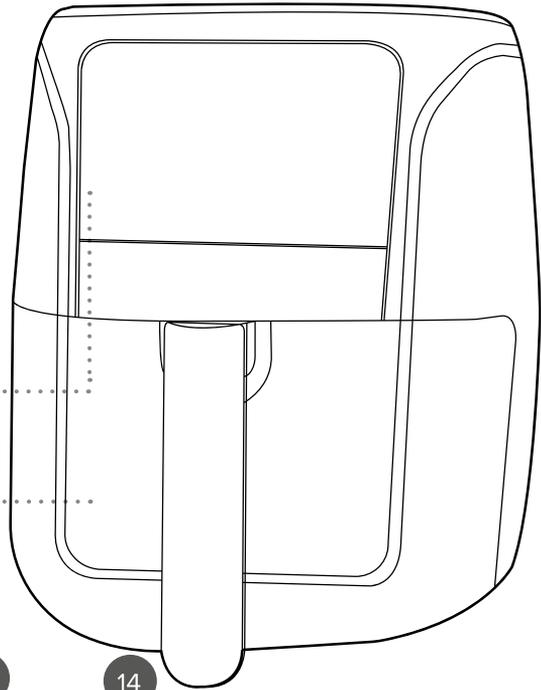

Description of parts

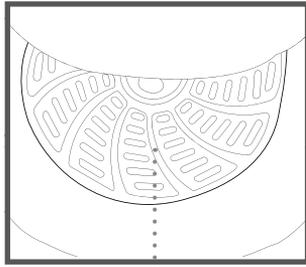

1. Cooking compartment
2. Non-stick coated cooking tray
3. Digital control panel
4. Time/temperature button
5. Control buttons +/-
6. Function buttons
7. Preheat button

8. Turn reminder button
9. Manual button
10. Start button
11. Stop/cancel button
12. Power button
13. LED display
14. Turnover icon
15. Preheat icon

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.

- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.
- Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.
- Do not use broken, damaged, or loose attachments.
- Switch off the appliance and disconnect it from the mains power supply before changing or fitting attachments.
- Always unplug the appliance after use and ensure it has cooled fully before performing any cleaning, user maintenance or storing away.
- Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.
- This appliance should not be operated by means of an external timer or separate remote-control system, other than that supplied with this appliance.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Hot surface – do not touch any sections or surfaces of the appliance that may become hot or the heating components of the appliance.



WARNING: Keep the appliance away from flammable materials.

Automatic switch-off

The air fryer is fitted with an automatic switch-off. This may activate if the set cooking time has elapsed, causing the timer to sound and the automatic switch-off to activate, turning off the air fryer.



NOTE: If the air fryer needs to be turned off before the set cooking time has elapsed, switch off and unplug it from the mains power supply.

Dos and don'ts

DO:

Check that the non-stick coated cooking tray is securely fitted before use.

Only hold the cooking compartment by the cooking handle.


Take care when removing the cooking compartment, as steam may be emitted.

DO NOT:

Invert the cooking compartment with the non-stick coated cooking tray still attached, as excess oil may collect at the bottom of the cooking compartment. Cover the air fryer or its air inlets, as this will disrupt the airflow and could affect the cooking results.

Fill the cooking compartment with oil or any other liquid.

Touch the cooking compartment during or straight after use, as it gets very hot.

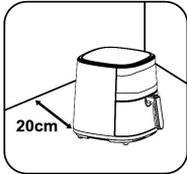

WARNING: ENSURE THAT THE AIR FRYER HAS AT LEAST 20 CM OF FREE SPACE IN ALL DIRECTIONS BEFORE USE.

Care and maintenance

Before attempting any cleaning or maintenance, switch off and unplug the air fryer from the mains power supply and allow it to fully cool.

STEP 1: Wipe the air fryer main unit with a soft, damp cloth and dry thoroughly.

STEP 2: Clean the non-stick coated cooking tray in warm, soapy water, then rinse and dry thoroughly.

Do not immerse the air fryer main unit in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the air fryer or its accessories, as this could cause damage.



NOTE: The air fryer should be cleaned after each use.

Instructions for use

Before first use

STEP 1: Before connecting the air fryer to the mains power supply, wipe the air fryer main unit with a soft, damp cloth and dry thoroughly.

STEP 2: Clean the non-stick coated cooking tray in warm, soapy water, then rinse and dry thoroughly.

STEP 3: Place the air fryer main unit onto a stable, heat-resistant surface, at a height that is comfortable for the user.



NOTE: When using the air fryer for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the air fryer during use.

It is advised to run the air fryer without food for approx. 10 minutes before first use; this will prevent the initial smoke or odour from affecting the taste of the food.

Assembling the air fryer


STEP 1: Fit the non-stick coated cooking tray into the cooking compartment, so that it is secure.

STEP 2: Slide the cooking compartment into the air fryer main unit to close it.



NOTE: The air fryer comes preassembled. The cooking compartment should be closed securely before use, as not doing so will prevent it from working.

Using the control panel

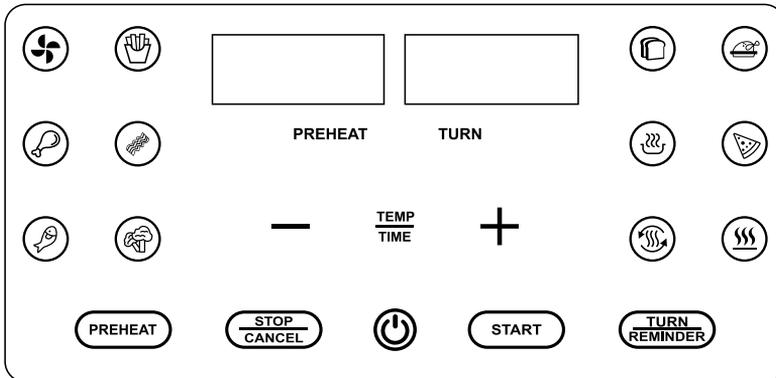

When the air fryer is plugged in and switched on at the mains power supply, the unit will beep and the power button will illuminate to indicate that it is being powered.

Tap the power button to switch on the air fryer. The LED display will show 'ON'.

Preset functions

Time and temperature settings can be set using the function buttons, which automatically cycle between time and temperature presets for cooking various foods. These presets can then be adjusted using the time/temperature button and control buttons as required.

The control buttons '+/-' may be held down in order to quickly adjust the time or temperature.

Once the time and temperature have been set, press 'START' to begin heating. Time and temperature can be changed during use.

Manual function

The time and temperature can be set manually by pressing 'MANUAL'. These settings can then be adjusted using the time/temperature button and control buttons '+/-' as required.

The control buttons may be held down in order to quickly adjust the time or temperature.

Once time and temperature have been set, press the start/pause button to begin heating. Time and temperature can be changed during use.

Cooking functions

Icon	Function	Default temperature	Default time
	Manual	200 °C	20 mins
	Chips	200 °C	15 mins
	Chicken wings	200 °C	25 mins
	Bacon	190 °C	6 mins
	Fish	190 °C	10 mins
	Vegetables	200 °C	20min
	Pizza	180 °C	15 mins
	Bake	160 °C	25 mins
	Roast	200 °C	25 mins
	Grill	200 °C	12 mins
	Reheat	150 °C	15 mins
	Keep warm	94 °C	30 mins

Preheat mode

To preheat before cooking:

STEP 1: Set the time and temperature.

STEP 2: Press 'PREHEAT', the preheat icon will flash to show this has been selected.

STEP 3: Press start to begin the preheating. The LED display will show 'PREHEAT'.

STEP 4: Once preheated the air fryer will beep and the display will show 'ADD FOOD'.

STEP 5: Add the food to the compartment and close it to begin the programmed function.

Turn reminder mode

To set a reminder to turn food over whilst cooking, press 'TURN'. The icon will flash to show it has been selected. Once the time has reached the halfway point, the air fryer will beep and the LED display will show 'TURN FOOD', indicating it is time to turn the food over.

Using the air fryer

STEP 1: Plug in and switch on the air fryer at the mains power supply; the air fryer will beep and the power button will illuminate to indicate that the unit is plugged in.

STEP 2: Tap the power button to switch on the air fryer; the LED display will show 'ON', indicating the air fryer is ready to be programmed.

STEP 3: To preheat before cooking, follow the instructions in the section entitled 'Preheat mode'. Once preheated, remove the cooking compartment by pulling it out of the air fryer using the handle. Position the cooking compartment onto a flat, stable, heat-resistant surface.

STEP 4: Place the ingredients into the non-stick coated cooking tray and then slide the cooking compartment back into the air fryer main unit to close it.

STEP 5: Use the digital control panel to select a function or adjust the time and temperature using the control buttons '+/-' for the ingredients as required.

STEP 6: Some ingredients may require turning over or shaking halfway through the cooking time. If the turn reminder function has been selected, the air fryer will beep indicating that it is time to turn over. Remove the cooking compartment from the air fryer main unit using the cooking compartment handle. Turn over or shake the contents gently, then slide the cooking compartment back into the air fryer main unit to continue cooking.

STEP 7: Once cooking is complete and the preset time has elapsed, the air fryer will beep several times, the LED display will show 'END' and switch off. Check whether the ingredients are ready; if the ingredients are not cooked, close the cooking compartment and replace back into the air fryer main unit. Use the digital control panel to adjust the cooking time accordingly. If the food is cooked, empty the contents into a bowl or onto a plate. Use a pair of heat-resistant tongs (not included) if the food is large or fragile.



NOTE: If the cooking time or temperature setting needs to be changed during use, simply use the timer or temperature control buttons '+/-' as required and the air fryer will automatically adjust the settings.



CAUTION: Do not tip the food directly into a bowl or onto a plate, as excess oil may collect at the bottom of the cooking compartment and leak onto the ingredients or serving bowl.

Exercise caution when opening and closing the cooking compartment during use, as it will become very hot.



WARNING: Nominal voltage is still present even when the air fryer is switched off. To permanently switch off the air fryer, turn it off at the mains power supply.

Storage

Check that the air fryer is cool, clean and dry before storing in a cool, dry place.
Never wrap the cord tightly around the air fryer; wrap it loosely to avoid causing damage.

Specifications

Product code: EK6179

Input: 220–240 V ~ 50/60 Hz

Output: 1500 W



Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD190224/MD000000/V1