

STEP 8: Switch off and unplug the blender from the mains power supply.

STEP 9: Detach the plastic jug from the blender base unit by twisting and pulling it away from blender base unit.



NOTE: Ingredients can be added whilst the blender is in operation via the filler cap. Twist the filler cap and pull away from the plastic jug to remove. The blender will not operate if the blender and plastic jug lid are not correctly locked into place. Ensure all tabs are aligned and locked before use.



WARNING: Maximum operation time is 1 minute. Allow to cool for approx. 3 minutes before using the blender again.

Troubleshooting

Symptom	Solution
The blender will not operate.	Ensure the blender is plugged into the mains power supply. Ensure the plastic jug and plastic jug lid are fully secured in place.
The drink still contains lumps or has not blended well.	Reduce the amount of solid ingredients in the plastic jug or add more liquid. Use the pulse function in short burst for harder ingredients and ice.
The drink is watery and lacking flavour.	Use the pulse function in short bursts to ensure the ingredients are not over-blended.

Storage

Reassemble the blender.

Check that the blender is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the blender; wrap it loosely to avoid causing damage.

Specifications

Product code: EK6145

Input: 220–240 V ~ 50–60 Hz

Output: 600 W




Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

User manual

Jug blender

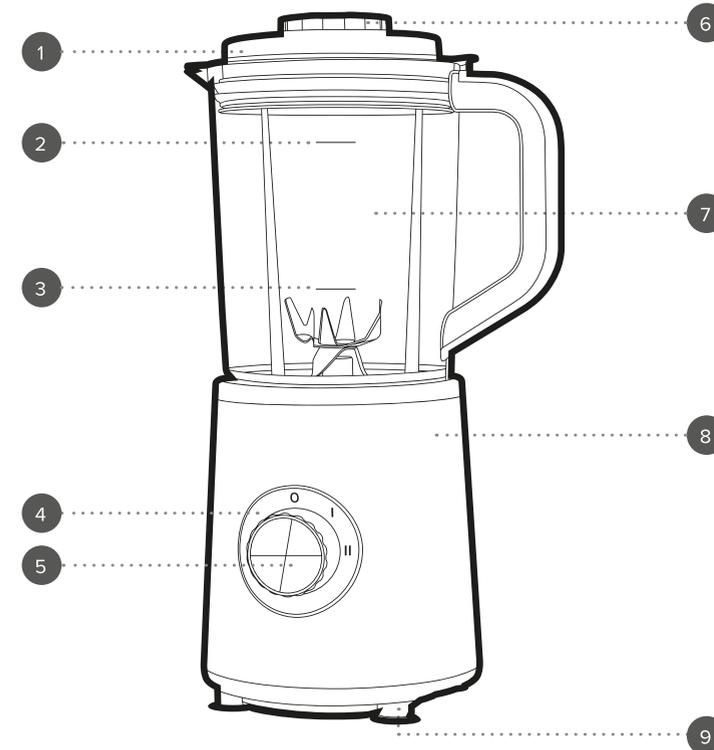

1. Plastic jug lid
2. Max fill mark (1.5 L)
3. Min fill mark (0.4 L)
4. Pulse function button
5. Speed control dial

6. Filler cap
7. Plastic jug
8. Blender base unit
9. Suction feet



Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD060324/MD000000/V1

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of this appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.



CAUTION: Do not touch any moving parts on this appliance during use, as this could cause injury. Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Dos and don'ts

DO:

Switch off the appliance and disconnect it from the mains power supply before changing or fitting attachments. Chop all ingredients into approx. 2 cm pieces before blending. Add a small amount of cold liquid or reduce the quantity of the ingredients in the plastic jug if the blades are not running smoothly. If the ingredients do not blend evenly, remove the plastic jug from the blender base unit. Shake the plastic jug to redistribute the ingredients and then blend once more.



CAUTION: Exercise caution when handling the blade attachment, as the blades may get hot during use.

DO NOT:

Use attachments if they are loose, damaged or broken. Attempt to remove the plastic jug until the blades have fully stopped moving. Blend dry ingredients for more than 60 seconds at a time. Blend ice cubes.



WARNING: Do not blend hot liquid or food. Never exceed the max. fill mark when adding ingredients to the plastic jug, as this could cause spillage and may damage the blender. The blender must not be operated when the plastic jug is empty, cracked or broken. Do not clean the plastic jug with boiling water.

Care and maintenance

STEP 1: Switch off and unplug the blender from the mains power supply before performing any cleaning or user maintenance.

STEP 2: Wipe the blender base unit with a soft, damp cloth and allow to dry thoroughly.

STEP 3: Wash the plastic jug and attachments in warm, soapy water, then rinse and dry thoroughly.

Never touch the blades; using extreme caution, clean the blade attachment with a brush or sponge under a running tap and allow to air dry.

Do not immerse the blender base unit in water or any other liquid.

Never use harsh or abrasive detergents or scourers to clean the blender, as this could cause damage.



NOTE: Always clean the blender immediately after each use. The blender is not suitable for use in a dishwasher.



WARNING: Handle the plastic jug with care, as the blades are extremely sharp.

Instructions for use

Before first use

Before connecting to the mains power supply, clean the blender following the instructions in the section entitled '**Care and maintenance**'.



NOTE: When using the blender for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the blender.

Using the blender

STEP 1: Position the blender base unit onto a flat, stable surface at a height that is comfortable for the user.

STEP 2: Place the plastic jug on top of the blender base unit and lock into place by twisting until secure.

STEP 3: Add the required amount of liquid into the plastic jug before adding solid ingredients. Do not exceed the max. fill mark.

STEP 4: Chop the ingredients to be blended into approx. 2 cm pieces and then place them into the plastic jug. The filler cap can be used as a small measuring cup.

STEP 5: Fit the plastic jug lid and filler cap on to the plastic jug. Turn the lid until it locks into place. Plug in and switch on the blender at the mains power supply.

STEP 6: To blend the ingredients, turn the control dial to the desired speed setting. Turn the dial to 'P' to activate pulse function and release to stop it. The pulse function provides quick bursts of speed, useful for more solid foods.

STEP 7: Stop the blending process by turning the control dial to the '0' position.