



WARNING: Do not use if the chopping bowl is cracked or broken. Do not operate the food chopper when the chopping bowl is empty, as this will cause damage to the appliance. Max. operation time is 1 ½ minutes. Allow to cool for 1 minute before using the chopper again.

Troubleshooting

Problem	Possible cause	Solution
The food chopper will not operate.	The food chopper is not connected to the mains power supply.	Plug in and switch on the food chopper at the mains power supply.
	The food chopper is not correctly assembled.	Check that the food chopper has been properly assembled and that the lid and bowl are properly locked into place.
Dry ingredients are clumping together.	The food chopper is wet.	Dry the chopping bowl thoroughly before adding ingredients.
There are large chunks of ingredients after chopping.	The chopping has been overfilled.	Remove some of the ingredients and chop in batches.

Storage

Check that the food chopper is cool, clean and dry before storing in a cool, dry place.
Never wrap the cord tightly around the food chopper; wrap it loosely to avoid causing damage.

Specifications

Product code: EK5114
Input: 220–240 V ~ 50/60 Hz
Output: 300–400 W




Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

User manual

Food chopper

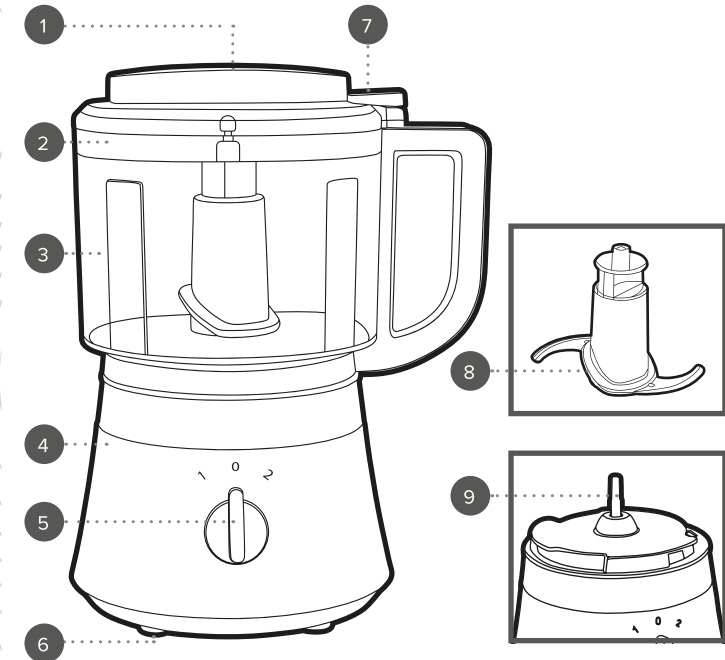

- | | |
|---------------------------|-----------------------|
| 1. Feeding chute | 6. Rubber feet |
| 2. Chopper lid | 7. Safety lock button |
| 3. Chopping bowl | 8. Chopper blade |
| 4. Food chopper base unit | 9. Pin |
| 5. Variable speed dial | |

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD130422/MD130524/V3

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of this appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove

the plug by hand.

- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use any damaged accessories.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Do not touch any moving parts on this appliance during use, as this could cause injury.
- Do not touch any sections of the appliance that may become hot during use, as this could cause injury.
- Always unplug the appliance after use and ensure it has cooled fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.



WARNING: Do not touch sharp blades.

Care and maintenance

Before attempting any cleaning or maintenance, switch off and unplug the food chopper from the mains power supply and allow it to cool fully. Make sure the control dial is at position '0'.

STEP 1: Wipe the food chopper base unit with a soft, damp cloth and allow to dry thoroughly.

STEP 2: Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Do not use harsh or abrasive detergents or scourers to clean the food chopper, as this could cause damage.

The food chopper is not safe for dishwasher use.



NOTE: The food chopper should be cleaned after each use.



WARNING: Handle the chopper blades with care, as they are extremely sharp. Exercise caution when attaching, removing, cleaning or storing the chopper blades.

Instructions for use

Before first use

Before connecting to the mains power supply, clean the food chopper following the instructions in the section entitled 'Care and maintenance'.



NOTE: When using the chopper for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the food chopper.

Using the food chopper

The chopper blades must be securely fitted before use; do not attempt to remove them until the blades have stopped moving.

STEP 1: Place the chopping bowl onto the base unit, aligning the tabs and rotating the chopping bowl clockwise until it locks into place.

STEP 2: Insert the chopping blade into the chopping bowl and carefully twist in a clockwise direction to secure it until it locks into position.

STEP 3: Add the food to be chopped to the chopping bowl.

STEP 4: Place the lid onto the chopping bowl and secure by aligning the tabs and then twisting it in a clockwise direction until it locks into position.

STEP 5: Plug in and switch on the food chopper at the mains power supply.

STEP 6: Holding the chopping bowl steady, turn the speed dial to the desired setting and press and hold the safety lock button until the food is chopped to the required size. Release the safety lock button and wait for the chopping blade to stop rotating before removing the chopper lid.

STEP 7: Additional food may be added to the chopped ingredients by removing the chopper lid, adding the ingredients, replacing the lid and repeating the chopping process. Alternatively, oil and seasoning can be added using the feeding chute. Oil and seasoning can be added using the feeding chute.

STEP 8: To remove the chopping bowl, remove the lid and carefully remove chopping blade, taking extreme caution not to touch the blades. Twist the bowl anticlockwise and pull away from the main unit.



CAUTION: Ensure that the food chopper is switched off and unplugged from the mains power supply before attempting to remove any food from the chopping bowl.