

# SALTER



## 28 Litre Oven with Hobs

Compact and perfect for everyday use

 OVER 250 YEARS OF GREAT BRITISH  
DESIGN & INNOVATION



# SALTER

## 28 Litre Oven with Hobs

Compact and perfect for everyday use

*"I love make quick meals everyday  
with my Salter toaster oven"*

CONTENTS	PAGE
Safety Instructions	4-5
Getting Started	6
In the Box	6
Features	6
Description of Parts	6
Introduction	7
Instructions for Use	7
Before First Use	7
Using the 28 Litre Oven with Hobs	7
Using the Oven	8
Using the Grill	8
Using the Hobs	8-9
Care and Maintenance	9
Specifications	9
Wiring Page	10
Guarantee	11

Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The door or the outer surface of the appliance may get hot during operation.

**Warning:** Keep the appliance away from flammable materials.



**Caution:** Hot Surface - Do not touch the hot section or heating components of the appliance.

**Caution:** Take care not to pour water on the heating element.

## Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

28 Litre Oven with Hobs

Wire rack

Baking tray

Baking tray handle

Instruction manual

## Features

1000 W and 600 W hobs

Variable temperature control from 100 °C to 230 °C

60-minute timer

Indicator lights

Cool-touch handle

Stainless steel interior

Large viewing window

Included a wire rack, baking tray and baking tray handle

## Description of Parts



## Introduction

Compact and perfect for everyday use, this 28 Litre Oven with Hobs is a great addition to any kitchen. Ideal for creating delicious meals quickly and efficiently, it comes complete with a wire rack, baking tray and variable temperature control up to 230 °C.

## Instructions for Use

### Before First Use

Ensure that the 28 Litre Oven with Hobs is switched off and unplugged from the mains power supply.

Wipe the 28 Litre Oven with Hobs with a soft, damp cloth and dry thoroughly. Clean the baking tray, baking tray handle and wire rack in warm, soapy water, then rinse and dry thoroughly.

Do not immerse the 28 Litre Oven with Hobs in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the 28 Litre Oven with Hobs or its accessories, as this could cause damage.

Place the 28 Litre Oven with Hobs onto a stable, heat-resistant surface, at a height that is comfortable for the user.

Plug in and switch on the 28 Litre Oven with Hobs at the mains power supply, turn it on and run for approximately 15 minutes at the highest temperature, using both the upper and lower heat settings. This will help to eliminate any odour and burn away any protective substances used during the manufacturing process.

**Note:** When using the 28 Litre Oven with Hobs for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Ensure that there is sufficient ventilation around the 28 Litre Oven with Hobs.

### Using the 28 Litre Oven with Hobs

The temperatures shown on the variable temperature control are comparable with those of a standard electric oven. However, as the 28 Litre Oven with Hobs is small, cooking times will be slightly shorter than those of a conventional oven. Always check that food is thoroughly cooked according to the guidelines before serving.

**Note:** The power indicator light will remain lit whilst the 28 Litre Oven with Hobs is plugged in and the timer is in use. During use of the oven and grill, the heating control switch indicator lights will cycle on and off to signal that the 28 Litre Oven with Hobs is maintaining the selected temperature. Do not force the timer to '0'; allow it to run down naturally.

**Caution:** Always wear heat-resistant oven gloves when removing hot food from the 28 Litre Oven with Hobs. Use the baking tray handle to assist with removing the wire rack and baking tray, ensuring that it is securely hooked into position.



## Using the Oven

Check that the hob selection dial is set to the 'Off' position and then turn on both the upper and lower heating control switches.

Turn the variable control dial to the required heat setting for the food to be cooked.

Determine the cooking time for the food and use the timer to set it accordingly.

Both upper and lower heating control switch indicator lights will illuminate, signalling that the 28 Litre Oven with Hobs is heating up. These will go out once the correct temperature has been reached and will cycle on and off during use.

Place the food to be cooked onto the baking tray or wire rack and cook for the required time; the food must not exceed 3 kg in weight.

Once cooking is complete, turn off both the upper and lower heating control switches and check that the timer is set to the 'Off' position. If the timer is still running down, do not force it to '0'; allow it to run down naturally.

## Using the Grill

Check that the hob selection dial is set to the 'Off' position and then turn on the upper heating control switch.

Turn the variable control dial to maximum (230 °C).

Determine the cooking time for the food and use the timer to set it accordingly.

The heating control switch will illuminate, signalling that the 28 Litre Oven with Hobs is heating up. This will go out once the correct temperature has been reached.

Place the food to be cooked onto the wire rack and cook for the required time; the food must not exceed 3 kg in weight.

Once cooking is complete, turn off the upper heating control switch and check that the timer is set to the 'Off' position. If the timer is still running down, do not force it to '0'; allow it to run down naturally.

**Note:** The oven door must be left open when the grill is in use.

## Using the Hobs

Ensure that both of the heat control switches are set to the 'Off' position and then turn the hob selection dial to select one or both of the hobs.

Determine the cooking time for the food and use the timer to set it accordingly.

The heating control switch will illuminate, signalling that the 28 Litre Oven with Hobs is heating up. This will go out once the correct temperature has been reached.

Once cooking is complete, check that both the hob selection dial and timer are set to the 'Off' position. If the timer is still running down, do not force it to '0'; allow it to run down naturally.

**Note:** For efficient and effective heating, any pans used on the hobs should have a flat base that should be no larger than the chosen hob ring.



**Note:** The heating control switch indicator lights will not cycle on and off during use of the hobs.

## **Care and Maintenance**

Before attempting any cleaning or maintenance, ensure that the 28 Litre Oven with Hobs is unplugged from the mains power supply and has fully cooled.

Wipe the 28 Litre Oven with Hobs with a soft, damp cloth and dry thoroughly.

Clean the baking tray, baking tray handle and wire rack in warm, soapy water, then rinse and dry thoroughly.

Do not immerse the 28 Litre Oven with Hobs in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the 28 Litre Oven with Hobs or its accessories, as this could cause damage.

To remove stubborn stains, use a non-abrasive scouring pad or brush.

The 28 Litre Oven with Hobs should be cleaned after each use.

The 28 Litre Oven with Hobs and its accessories are not suitable for dishwasher use.

## **Specifications**

Product code: EK1749

Input: 220–240 V~50 Hz

Output:

Oven 1500 W

Large hob 1000 W

Small hob 600 W

## Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:  
The wires in the mains lead are coloured in accordance with the following code:

**Blue Neutral (N)**

**Brown Live (L)**

**Green/Yellow Earth ( $\perp$ )**

**FOR UK USE ONLY** - Plug fitting details  
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked  $\perp$ .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt, consult a qualified electrician who will be pleased to do this for you.

### Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

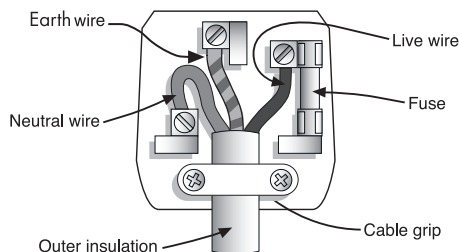

**UP Global Sourcing,  
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

**Telephone:** 0161 934 2240\*

\*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

**Email:** [customercare@upgs.com](mailto:customercare@upgs.com)

**Fax:** 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

**Guarantee**

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this products excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



MADE IN CHINA.

Distributed by:  
UP Global Sourcing,  
Victoria Street,  
Manchester OL9 0DD. UK.

**SALTER**

CD260615/MD080116/V3



**GLOBAL SOURCING**  
**THE ULTIMATE WAY**


Manchester  
OL9 0DD  
United Kingdom  
[www.upgs.com](http://www.upgs.com)

t: +44 (0) 161 627 1400  
f: +44 (0) 161 628 2126

hk: +852 6681 9752

cn: +86 1 3417586804

Artworker:	Rachel Hart
Date:	08/01/16
Project Name:	EEK151506 UPG EK1749
Type of Artwork:	Instruction Manual
Size:	A5 12 PP
Software Used:	Indesign CS6
Typefaces:	PR8 Charade, Century Gothic

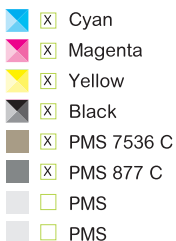

### Artwork Version 3

### Artwork Scale 1:1

©2016 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE  
ARTWORK REFERENCE ONLY