

SALTER[®]

S I N C E 1 7 6 0



1.8 Litre Rice Cooker

Cooks rice to delicious, fluffy perfection

SALTER®

1.8 Litre Rice Cooker

Cooks rice to delicious, fluffy perfection

"I love making perfect, fluffy rice with my Salter Rice Cooker"

CONTENTS	PAGE
Safety Instructions	4-5
Getting Started	6
In the Box	6
Features	6
Description of Parts	7
Instructions for Use	7
Before First Use	7
Assembling the Rice Cooker	8
Using the Rice Cooker	8-9
Care and Maintenance	9
Storage	9
Specifications	9
Wiring Page	10
Guarantee	11

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Do not use sharp or abrasive items with this appliance; use only plastic or wooden spatulas to avoid damaging the non-stick surface.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The door or the outer surface of the appliance may get hot during operation.

Warning: Keep the appliance away from flammable materials.



Caution: Hot Surface - Do not touch the hot section or heating components of the appliance.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Rice Cooker housing

Tempered glass lid with steam vent

Non-stick coated bowl

Plastic spatula

Measuring cup

Mains cable

Instruction manual

Features

700 W power

1.8 litre capacity or 10 cups of rice

'Cook' and 'Keep Warm' functions

Non-stick coated bowl

Tempered glass lid with steam vent

Stainless steel housing

Cool-touch handles

Description of Parts



Instructions for Use

Before First Use

Before using the Rice Cooker for the first time, clean all of the accessories in warm, soapy water, rinse and dry thoroughly.

Do not immerse the Rice Cooker or any of its electrical components in water; wipe it clean with a soft, damp cloth and dry thoroughly.

Note: When using the Rice Cooker for the first time, a slight odour may be emitted. This is normal and will soon subside. Ensure that there is sufficient ventilation around the Rice Cooker.

Assembling the Rice Cooker

Ensure that the Rice Cooker is switched off and unplugged from the mains power supply.

Position the Rice Cooker housing onto a flat, stable, heat-resistant surface, at a height that is comfortable for the user.

Fit the non-stick coated bowl into the Rice Cooker housing and using the lid handle, gently place the tempered glass lid on top.

Insert the mains cable into the power inlet then connect the plug to the mains power supply.

Using the Rice Cooker

Plug in and switch on the Rice Cooker at the mains power supply.

Measure out the required amount of rice using the measuring cup provided and then wash the rice under clean running tap water using a sieve.

Add the washed rice with the appropriate amount of water to the non-stick coated bowl. Check with the following table to see the advised amount.

Fit the non-stick coated bowl into the Rice Cooker housing and using the lid handle, gently place the tempered glass lid on top.

Switch on the Rice Cooker by flicking the 'On/Off' switch to the 'I' position.

Push the 'Keep Warm/Cook' switch downwards to begin cooking. The red 'Cook' light will illuminate.

Once the rice is cooked and all of the water has been absorbed, the switch will pop up and the orange 'Keep Warm' light will illuminate, indicating that the rice is cooked and ready to serve.

Flick the 'On/Off' switch to the 'O' position to switch off the Rice Cooker.

Note: The amount of cooked rice should be three times that of the one cup of uncooked rice.

Note: Before cooking, rinse the rice in a sieve until the water becomes clear.

Note: Do not leave the rice on the 'Keep Warm' function for a long period of time, as it will discolour and spoil. The 'Keep Warm' function is only intended for use during the meal.

Note: Always replace the tempered glass lid when not serving, in order to prevent the rice from drying out or discolouring.

Cups of Uncooked Rice Required	Cups of Water Required
10	10–10.5
8	8–8.5
6	6–6.5
4	4–4.5
2	2–2.5

Care and Maintenance

Always ensure that the Rice Cooker has fully cooled and is unplugged from the mains power supply before performing any cleaning or maintenance.
Clean the non-stick coated bowl and accessories in warm, soapy water, rinse and dry thoroughly.
Do not immerse the Rice Cooker housing in water or any other liquid; wipe it clean with a soft, damp cloth and dry thoroughly.
Do not use harsh or abrasive cleaning detergents or scourers to clean the Rice Cooker, as this could cause damage.
The Rice Cooker should be cleaned after every use.

Storage

Before storing, ensure that the Rice Cooker is cool, clean and dry.
Never store the Rice Cooker whilst it is wet.
Never wrap the cord tightly around the Rice Cooker; wrap it loosely to avoid causing damage.
Store in a cool, dry place.

Specifications

Product Code: EK1932
Voltage: 220–240 V 50/60 Hz
Power: 700 W

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.


The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked \perp .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

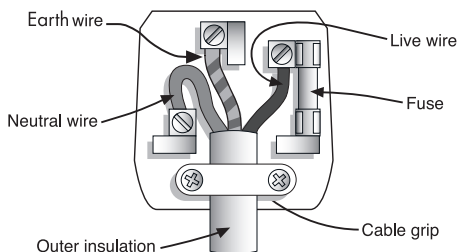

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing, Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2240*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this products excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



MADE IN CHINA.

Distributed by:
UP Global Sourcing,
Victoria Street,
Manchester OL9 0DD. UK.

SALTER®

CD050614/MD200516/V5