

SALTER

Deluxe Blender Set

Suitable for blending, mixing, grinding and chopping

✓ BLEND IT.
✓ JUICE IT.
✓ EXTRACT IT!



THE SUPER FOOD NUTRITION BLENDER!

SALTER

Deluxe Blender Set

Suitable for blending, mixing, grinding
and chopping

CONTENTS	PAGE
Safety Instructions	4–5
Getting Started	6
In the Box	6
Description of Parts	6
Instructions for Use	7
Introduction	7
Before First Use	7
Using the Blender Attachment and Filter	7–8
Using the Cups/Mugs with Coloured Comfort Rings	8–9
Care and Maintenance	9
Troubleshooting	10
Storage	10
Recipes	11–13
Wiring Page	14
Guarantee	16

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This appliance contains no user serviceable parts. If the supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not immerse the appliance in water or any other liquid.

Do not use broken or loose cutting blades.

Do not use if the jug is cracked or broken.

Do not operate when the jug is empty.
Do not overload the appliance; only fill up to the maximum level marked on the appliance as the mixture level may rise during blending.
Do not leave the appliance unattended whilst connected to the mains power supply.
Do not use the appliance for anything other than its intended use.
Do not use any accessories other than those supplied.
Do not use this appliance outdoors.
Do not blend hot liquid or food.
Do not move the appliance whilst in use.
Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.
Do not store the appliance in direct sunlight or in high humidity conditions.
Do not place boiling water or very hot liquid in the appliance.
When mixing liquids use a tall container or blend small quantities at a time to reduce spillage.
Always operate the appliance with the lid in place.
Use of an extension cord with this appliance is not recommended.
This appliance should not be operated by means of an external timer or separate remote control system.
This appliance is intended for domestic use only. It should not be used for commercial purposes.
Warning: Do not touch sharp blades.
Caution: Maximum operation time is 1 minute. Allow to cool for approximately 2 minutes before using again.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside of the box and either store or dispose of safely.

In the Box

Deluxe Blender Set base

Blender attachment with filter

Large blender cup

Small blender cup

Mugs with coloured comfort rings

Plunger

Shaker top

Storage lid

Flat blade attachment

Cross blade attachment

Description of Parts



Instructions for Use

Introduction

The Deluxe Blender Set is an extremely versatile blending and chopping set, which can be used for basic kitchen tasks such as chopping onions, garlic or grating cheese, whipping cream or making smoothies.

The cross blade attachment is ideal for chopping, grating or blending and the flat blade attachment for whipping cream or grinding coffee or sugar cubes.

Before First Use

Before using the Deluxe Blender Set for the first time, wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Wipe the base with a soft, damp cloth and allow to dry thoroughly.

Do not immerse the Deluxe Blender Set base in water or any other liquid.

Note: When using the Deluxe Blender Set for the first time, a slight odour may be emitted. This is normal and will soon subside. Ensure that there is sufficient ventilation around the Deluxe Blender Set.

Using the Blender Attachment and Filter

Ensure that the Deluxe Blender Set is unplugged from the mains power supply.

Place the Deluxe Blender Set base on a flat, stable surface, at a height that is comfortable for the user.

When using the blender attachment, select the required flat or cross blade attachment and twist it onto the bottom of the jug. Check that the rubber gasket located on the inside bottom edge of the blade assembly is in the correct position. Chop the ingredients to be blended into small pieces and then place them into the blender attachment. Use the plunger if necessary to push down the ingredients further into the blender attachment.

Fasten the blender attachment onto the Deluxe Blender Set base. To do this, align the three tabs on the outside of the blender attachment with the three guides on the inner edge of the Deluxe Blender Set base.

Screw on the blender attachment lid ensuring that all of the ingredients do not exceed the Max. fill line, as this will cause the Deluxe Blender Set to leak.

Plug in and switch on the Deluxe Blender Set at the mains power supply.

To blend the ingredients, press the blender attachment down and simultaneously twist it in an anticlockwise direction. The blender attachment has a mini lid so that ingredients can be added during blending; open the mini lid by turning it in a clockwise direction.

Once the ingredients have been blended to the desired consistency, push the blender attachment down and simultaneously twist in a clockwise direction.

Wait until the blade attachment has completely stopped before removing the blender attachment from the Deluxe Blender Set base.

Pour the blended ingredients into a separate storage container; the blender attachment lid has two pouring spouts, one for straining and one for pouring.

If using the filter, unscrew the blender attachment lid and fit the filter into the blender attachment. Replace the lid ensuring that it is securely closed, if not push down the filter so that it is sitting flush. Add the ingredients into the blender attachment through the mini lid and use the plunger if necessary to push down the ingredients further into the blender attachment. Once the ingredients have been blended to the desired consistency, pour them into a container/mug before removing the filter to clean after use.

Warning: The maximum blending operation time is 1 minute. Allow the Deluxe Blender Set to cool for 2 minutes before using the appliance again.

Warning: When blending warm liquid, unscrew the blender attachment lid slowly in order to release any pressure that may have built up during the blending process.

Warning: If blending liquid, do not fill the blender attachment to more than $\frac{3}{4}$ of the capacity; this will avoid spillage and/or damage to the Deluxe Blender Set.

Using the Cups/Mugs with Coloured Comfort Rings

Ensure that the Deluxe Blender Set is unplugged from the mains power supply. Place the Deluxe Blender Set base on a flat, stable surface, at a height that is comfortable for the user.

Select a cup/mug and remove the coloured comfort ring from the lip, if necessary. Chop the ingredients to be blended into small pieces and then place them into the cup/mug.

Use the plunger if necessary to push down ingredients further into the cup/mug. Select either the flat or cross blade attachment and screw it onto the cup/mug in a clockwise direction until it is secure.

With the blade attached, turn the cup/mug upside down so that the blade is facing downwards.

Attach the cup/mug to the Deluxe Blender Set base. To do this, align the three tabs on the outside of the cup/mug with the three guides on the inner edge of the Deluxe Blender Set base.

Switch on the Deluxe Blender Set at the mains power supply.

To blend the ingredients, press the cup/mug down and simultaneously twist it in an anticlockwise direction.

Once the ingredients have been blended to the desired consistency, push the cup/mug down and simultaneously twist it in a clockwise direction.

Wait until the blade attachment has completely stopped moving before removing

the cup/mug from the Deluxe Blender Set base.

Turn the cup/mug upright and then remove the blade.

If using a mug, select a coloured comfort ring and screw it onto the lip.

Warning: The maximum blending operation time is 1 minute. Allow the Deluxe Blender Set to cool for 2 minutes before using the appliance again.

Warning: When blending warm liquid, cover with a cloth or towel before removing the cup/mug from the Deluxe Blender Set base.

Warning: When blending warm liquid, unscrew the cup/mug slowly in order to release any pressure that may have built up during the blending process.

Warning: If blending liquid, do not fill the cup/mug to more than $\frac{3}{4}$ of the capacity; this will avoid spillage and/or damage to the Deluxe Blender Set.

Care and Maintenance

Always ensure that the Deluxe Blender Set is unplugged from the mains power supply before performing any cleaning or user maintenance.

Wash all of the parts, apart from the Deluxe Blender Set base, in warm, soapy water, then rinse and dry thoroughly.

Wipe the Deluxe Blender Set base with a soft, damp cloth and allow to dry thoroughly.

Never immerse the Deluxe Blender Set base in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the Deluxe Blender Set to avoid damaging it.

The Deluxe Blender Set is not suitable for use in a dishwasher.

Always clean the Deluxe Blender Set immediately after each use.

Warning: Handle the blade attachments with care, as they are extremely sharp.

Exercise caution when attaching, removing, cleaning or storing the blade attachments.

Troubleshooting

Problem	Solution
The Deluxe Blender Set has stopped working during use.	The lid is loose or has not been fitted properly. To fit the blender cup/mug, turn it upside down so that the blade attachment is facing downwards and then attach the cup to the Deluxe Blender Set base. To do this, align the three tabs on the outside of the cup/ mug with the three guides on the inner edge of the Deluxe Blender Set base. To blend, press the blender cup/mug down and simultaneously twist it in an anticlockwise direction.
The Deluxe Blender Set is not switching on.	This Deluxe Blender Set is fitted with a resettable fuse. If the Deluxe Blender Set stops blending or if there is a possibility that the fuse may have blown out. Disconnect it from the mains power supply and allow it to cool fully for 15 minutes. After 15 minutes, check to see if there is anything that may be blocking or jamming the Deluxe Blender Set; remove blockages or jams as necessary.

Storage

Reassemble the Deluxe Blender Set before storing.
Ensure that the Deluxe Blender Set is cool, clean and dry.
Store in a cool, dry place.

Specifications

Product code: EK1969
Input: 220–240 V ~ 50 Hz
Output: 300 W

Recipes

Raspberry Sparkle

Ingredients

Handful of raspberries
Frozen yoghurt or vanilla ice cream
Glass of sparkling wine or champagne



Method

Place all of the ingredients into a mug and blend until smooth.

Strawberry Smoothie

Ingredients

Handful of strawberries, chopped if large
1 small, ripe banana
1 small carton vanilla yoghurt
100 ml skimmed milk



Method

Place all of the ingredients into a mug and blend until smooth; garnish with a strawberry.

SALTER

Fresh Pineapple Juice

Ingredients

Approximately half a pineapple, chopped into chunks



Method

Place the pineapple into a mug and blend until smooth.

Omelette

Ingredients

2 medium eggs
50 g grated cheese (optional)
½ green pepper, finely chopped
2 tsp milk
Salt and pepper, to taste



Method

Place the eggs and the milk into the small cup and blend until smooth.

Pour into a greased frying pan, on a low heat.

Stir frequently.

Add the green pepper and season with salt, pepper and sprinkle with cheese, if desired.

Cold tomato Soup

Ingredients

225 g sweet cherry tomatoes
2 tbsp soured cream
1 garlic clove
100 ml hot water
Herbs, to season (e.g. basil or parsley)
Tabasco or any other chilli sauce (optional)
Salt and pepper, to taste

Method

Fill the large cup with the cherry tomatoes, add the hot water and blend until smooth. Add the garlic, herbs and soured cream and blend for another 10 seconds. Season with salt and pepper and Tabasco sauce if desired. Pour into a bowl and serve.



Salad Dressing

Ingredients

2 tsp French Dijon mustard
1 tsp white wine vinegar
2–3 tbsp olive oil
(or half olive oil and half sunflower oil)
Salt and pepper, to taste

Method

Place the mustard and white wine vinegar into the small cup and blend for approximately 10 seconds. Add the olive oil, salt and pepper and blend until smooth.



Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt, consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

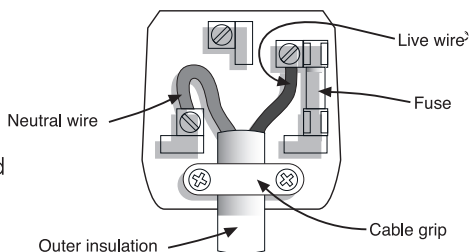

**UP Global Sourcing,
Victoria Street, Manchester, OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2240*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this products excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

Distributed By:

UP Global Sourcing,
Victoria Street, Manchester OL9 0DD. UK.

CD25062014/MD040814/V4



MADE IN CHINA.



GLOBAL SOURCING
YOUR JOURNEY STARTS HERE

Manchester
OL9 0DD
United Kingdom
www.upgs.com

t: +44 (0) 161 627 1400

f: +44 (0) 161 628 2126

hk: +852 6681 9752

cn: +86 1 3417586804

Artworker:

Donna Rothwell

Date:

07/08/14

Project Name:

EEK141393 UPG EK1969 IM

Type of Artwork:

Instruction Manual

Size:






 
A5 16PP

Software Used:

Indesign CS6

Typefaces:

Century Gothic

- | | |
|---|---|
|  | <input checked="" type="checkbox"/> Cyan |
|  | <input checked="" type="checkbox"/> Magenta |
|  | <input checked="" type="checkbox"/> Yellow |
|  | <input checked="" type="checkbox"/> Black |
|  | <input checked="" type="checkbox"/> PMS 375 C |
|  | <input type="checkbox"/> PMS |
|  | <input type="checkbox"/> PMS |
|  | <input type="checkbox"/> PMS |

Artwork Version 5

Artwork Scale 1:1

©2014 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE
ARTWORK REFERENCE ONLY