

SALTER



Cook & Serve Popcorn Maker

Makes perfect, delicious popcorn in minutes

 OVER 250 YEARS OF GREAT BRITISH
DESIGN & INNOVATION

SALTER

Cook & Serve Popcorn Maker

Makes perfect, delicious popcorn
in minutes

*"I love making delicious
popcorn with my
Salter popcorn maker"*

| CONTENTS | PAGE |
|---|-------|
| Safety Instructions | 4–5 |
| Getting Started | 6 |
| In the Box | 6 |
| Features | 6 |
| Description of Parts | 6 |
| Introduction | 7 |
| Instructions for Use | 7 |
| Before First Use | 7 |
| Using the Cook & Serve Popcorn Maker | 7–8 |
| Care and Maintenance | 8 |
| Storage | 9 |
| Specifications | 9 |
| Recipes | 10–12 |
| Wiring Page | 13 |
| Guarantee | 14 |

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Do not use sharp or abrasive items with this appliance.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface of the appliance may get hot during operation.



Caution: Hot Surface - Do not touch the hot section or heating components of the appliance.

Caution: Take care not to pour water on the heating element.

Warning: Keep the appliance away from flammable materials.

SALTER

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Cook & Serve Popcorn Maker

Integrated popping/serving bowl with bowl cap

Popcorn kernel measuring cup (60 g)

Oil measuring spoon (1 tbsp)

Instruction manual

Features

800 W power

Non-stick cooking plate

On/Off switch

Integrated serving bowl

Non-slip feet

Durable and easy to use

Includes popcorn kernel scoop (60 g) and oil measure (1 tbsp)

Description of Parts

Integrated popping/
serving bowl

Bowl cap

Red ready
indicator light

On/Off switch

Cook & Serve
Popcorn Maker

Aluminium
heat plate

Oil measuring
spoon (1 tbsp)

Popcorn kernel
measuring cup (60 g)

Introduction

Durable, quick and easy to use, the Cook & Serve Popcorn Maker is ideal for creating a tasty snack for cosy nights in. Fast and effective, it uses hot air circulation to make delicious popcorn in just 5–6 minutes, meaning more time for relaxing and less time spent waiting for that guilt-free treat.

Instructions for Use

Before First Use

STEP 1: Ensure that the Cook & Serve Popcorn Maker is switched off and unplugged from the mains power supply.

STEP 2: Wipe the Cook & Serve Popcorn Maker with a soft, damp cloth and dry thoroughly.

STEP 3: Clean the accessories in warm, soapy water, then rinse and dry thoroughly. Do not immerse the Cook & Serve Popcorn maker in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the Cook & Serve Popcorn Maker or its accessories, as this could cause damage.

Note: When using the Cook & Serve Popcorn Maker for the first time, a slight odour may be emitted. This is normal and will soon subside. Ensure that there is sufficient ventilation around the Cook & Serve Popcorn Maker.

Using the Cook & Serve Popcorn Maker

STEP 1: Ensure that the Cook & Serve Popcorn Maker is unplugged from the mains power supply.

STEP 2: Using the oil measuring spoon (1 tbsp), measure out one level spoon of cooking oil and pour it onto the aluminium heat plate.

STEP 3: Plug in and switch on the Cook & Serve Popcorn Maker at the mains power supply.

STEP 4: Turn on the Cook & Serve Popcorn Maker using the on/off switch; the red ready indicator light will illuminate.

STEP 5: Preheat the Cook & Serve Popcorn Maker for approximately 1½–2 minutes. The red ready indicator light will switch off once the required temperature has been reached.

STEP 6: Using the popcorn kernel measuring cup (60 g), measure out one level cup of popcorn kernels and pour them on to the lightly oiled aluminium heat plate. Do not use more than one level cup (60 g) of popcorn at a time, as this will overfill the Cook & Serve Popcorn Maker and could result in damage.

STEP 7: Add the integrated popping/serving bowl by aligning the tab with the arrow on the Cook & Serve Popcorn Maker and then twist it 90 ° in a clockwise direction, until it locks into position.

STEP 8: Immediately remove the bowl cap from the integrated popping/serving bowl to provide ventilation for steam.

STEP 9: If popcorn kernels begin to stick to the aluminium heat plate, use the handle to gently shake the Popcorn Maker. This will help to prevent the popcorn from burning.

STEP 10: It will take approximately 5–6 minutes for all of the popcorn kernels to pop.

STEP 11: Once cooking is complete, turn off the Cook & Serve Popcorn Maker using the on/off switch, unplug it from the mains power supply and then replace the bowl cap onto the integrated popping/serving bowl.

STEP 12: Holding the Cook & Serve Popcorn Maker by the handle, flip it 180 ° and then carefully twist the integrated popping/serving bowl 90 ° in an anticlockwise direction and remove it from the Cook & Serve Popcorn Maker.

STEP 13: The integrated popping/serving bowl can now be used to serve the delicious popcorn.

STEP 14: Allow the Cook & Serve Popcorn Maker to cool for approximately 10–12 minutes before using it again.

Note: During use the red ready indicator light will cycle on and off to indicate that the Cook & Serve Popcorn Maker is maintaining the temperature.

Caution: Exercise caution when removing the integrated popping/serving bowl from the aluminium heat plate, as it will get very hot during use.

Warning: Some popcorn kernels may not expand or puff properly during operation. Exercise caution and avoid immediate contact with the popcorn kernels, as they will be very hot.

Care and Maintenance

Always ensure that the Cook & Serve Popcorn Maker is unplugged from the mains power supply and has fully cooled before performing any cleaning or user maintenance.

Wash the bowl cap and measuring cups in warm, soapy water, then rinse and dry thoroughly.

Wipe the Cook & Serve Popcorn Maker with a soft, damp cloth and allow to dry thoroughly.

Never immerse the Cook & Serve Popcorn Maker in water or any other liquid. Do not use harsh or abrasive detergents or scourers to clean the Cook & Serve Popcorn Maker, as this could cause damage.

The Cook & Serve Popcorn Maker is not suitable for use in a dishwasher.

Always clean the Cook & Serve Popcorn Maker immediately after each use.

Storage

Ensure that the Cook & Serve Popcorn Maker is cool, clean and dry.

Never store the Cook & Serve Popcorn Maker whilst it is wet.

Never wrap the power supply cord tightly around the Cook & Serve Popcorn Maker; wrap it loosely to avoid causing damage.

Store in a cool, dry place.

Specifications

Product Code: EK2239

Input: 220–240 V~50/60 Hz

Output: 800 W

SALTER

Sweet

Ingredients

30 g butter

20 g sugar

1 tbsp water



Method

Combine the sugar, butter and water and heat gently until melted.

Leave to cool, then stir.

Pour the topping over the popcorn and coat thoroughly.

Toffee

Ingredients

40 g butter

40 g brown sugar

2 tbsp golden syrup



Method

Combine the sugar, butter and golden syrup and heat gently until melted.

Leave to cool, then stir.

Pour the topping over the popcorn and coat thoroughly.

Chocolate

Ingredients

90 g butter
40 g sugar
2 tbsp unsweetened
cocoa powder



Method

Combine the sugar, butter and cocoa powder and heat gently until melted.
Leave to cool, then stir.
Pour the topping over the popcorn and coat thoroughly.

Cinnamon

Ingredients

30 g butter
30 g light brown sugar
1 tsp ground cinnamon
Pinch of salt



Method

Combine the sugar, butter, cinnamon and salt and heat gently until melted.
Leave to cool, then stir.
Pour the topping over the popcorn and coat thoroughly.

SALTER

Chilli Lime

Ingredients

30 g butter
1 tsp chilli pepper
½ tsp salt
Zest of 2 limes



Method

Heat the butter gently until melted.
Combine the chilli pepper, lime zest and salt.
Pour the melted butter over the popcorn, add the chilli lime mixture and coat thoroughly.

Indian Spiced

Ingredients

1 tbsp coconut oil
1 tsp ground cumin seeds
Pinch of curry powder
Pinch of turmeric
Pinch of garlic powder



Method

Heat the coconut oil gently until melted.
Pour the coconut oil over the popcorn, add the cumin seeds and mixed spices and coat thoroughly.

* Any recipe images used in this instruction manual are intended for illustrative purposes only.

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.


The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked \perp .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

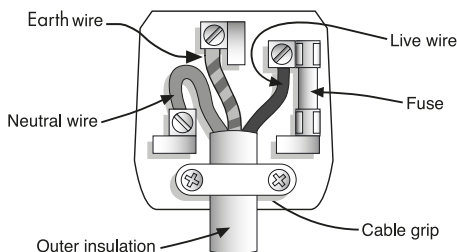

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2240*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this products excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



MADE IN CHINA.

Distributed by:
UP Global Sourcing,
Victoria Street,
Manchester OL9 0DD. UK.

SALTER

CD080216/MD070316/V2