

SALTER[®]

SINCE 1760



Blender to Go

Practical, powerful and easy to use

SALTER®

Blender to Go

Practical, powerful and easy to use

*"Easy to carry
and use design"*

CONTENTS	PAGE
Safety Instructions	4-5
Getting Started	6
In the Box	6
Features	6
Description of Parts	7
Introduction	8
Instructions for Use	8
Before First Use	8
Using the Blender to Go	8-9
Dos and Don'ts	9
Care and Maintenance	10
Troubleshooting	10
Storage	10
Specifications	10
Recipes	11-15
Notes	16
Wiring Page	17
Guarantee	18

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not use broken or loose cutting or rotating blades.

Do not overload the appliance; only fill up to the maximum level marked on the appliance as the mixture level may rise during blending.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not place boiling water or very hot liquid in the appliance.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: Do not touch sharp blades.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Blender to Go base unit

2 600 ml BPA-free blender bottles

2 sealable lids

Stainless steel cross blade attachment

Instruction manual with recipes

Features

350 W power

One-touch blending with LED light

Stainless steel cross blade

Easy to carry and use design

2 x 600 ml capacity BPA-free diamond patterned bottles

2 sealable lids

Description of Parts



Introduction

Versatile and compact, the Blender to Go is perfect for those that lead a hectic lifestyle. Featuring one-touch blending, it is a great addition to any home and creates individual portions of delicious fruit smoothies and nutritious juices at the push of a button. Whether it is for breakfast on the go, a quick and healthy lunch or even just a nutrient boost, the Blender to Go can be used at any time of the day.

Instructions for Use

Before First Use

STEP 1: Ensure that the Blender to Go is switched off and unplugged from the mains power supply.

STEP 2: Wipe the Blender to Go unit with a soft, damp cloth and dry thoroughly.

STEP 3: Clean the accessories in warm, soapy water, then rinse and dry thoroughly. Do not immerse the Blender to Go unit in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the Blender to Go unit or its accessories, as this could cause damage.

Note: When using the Blender to Go for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Ensure that there is sufficient ventilation around the Blender to Go.

Using the Blender to Go

STEP 1: Ensure that the Blender to Go is unplugged from the mains power supply.

STEP 2: Place the Blender to Go onto a flat, stable surface at a height that is comfortable for the user.

STEP 3: Chop the ingredients to be blended into small pieces and then place them into the blender bottle, ensuring that they do not exceed the maximum fill mark.

STEP 4: Pour the required amount of liquid into the blender bottle, ensuring that the maximum fill mark is not exceeded.

STEP 5: Fasten the stainless steel cross blade attachment onto the blender bottle by twisting it in a clockwise direction, until secure.

STEP 6: Invert the blender bottle so that the stainless steel cross blade attachment is at the bottom, align the arrows with the Blender to Go base unit and then twist the blender bottle in a clockwise direction to secure it.

STEP 7: Plug in and switch on the Blender to Go at the mains power supply.

STEP 8: To blend the ingredients, press and hold the 'On/Off' button.

STEP 9: Stop the blending process by releasing the 'On/Off' button.

STEP 10: Switch off and unplug the Blender to Go from the mains power supply.

STEP 11: Detach the blender bottle from the Blender to Go base unit by twisting it in an anticlockwise direction.

STEP 12: Remove the stainless steel cross blade attachment by twisting it in an anticlockwise direction and then replace it with the sealable lid.

Note: Always ensure that the rubber gasket, located on the inside bottom edge of the stainless steel cross blade attachment, is in place.

When mixing liquid, use a tall container or blend small quantities at a time to reduce spillage and splattering.

Warning: Maximum operation time is 1 minute. Allow to cool for 1 minute before using the Blender to Go again.

Dos and Don'ts

Do:

Check that the stainless steel cross blade attachment is securely fitted before use. Ensure that all of the ingredients added to the Blender to Go have been cut up into small pieces.

Add a small amount of cold liquid or reduce the quantity of the ingredients in the blender bottle if the blades are not running smoothly.

If the ingredients do not blend evenly, remove the blender bottle from the Blender to Go base unit. Shake the blender bottle to redistribute the ingredients and then blend once more.

Caution: Exercise caution when handling the stainless steel cross blade attachment, as the blades may get hot during use. If blending warm ingredients, take care when removing the stainless steel cross blade attachment, as there may be a pressure build-up from blending, which could cause the blended ingredients to spout from the lid.

Do not:

Do not attempt to remove the stainless steel cross blade attachment until the blades have fully stopped moving.

To prevent the Blender to Go from overheating, do not blend dry ingredients for more than 60 seconds at a time.

Warning: Do not blend hot liquid or food. Never exceed the maximum fill mark when adding ingredients to the blender bottle, as this could cause spillage and may damage the Blender to Go. The Blender to Go must not be operated when the blender bottle is empty, cracked or broken.

Care and Maintenance

STEP 1: Before attempting any cleaning or maintenance, ensure that the Blender to Go is switched off and unplugged from the mains power supply.

STEP 2: Wipe the Blender to Go base unit with a soft, damp cloth and allow to dry thoroughly.

STEP 3: Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly. Do not immerse the Blender to Go base unit in water or any other liquid. Never use harsh or abrasive detergents or scourers to clean the Blender to Go, as this could cause damage.

Note: Always clean the Blender to Go immediately after each use. The Blender to Go is not suitable for use in a dishwasher.

Warning: Handle the stainless steel cross blade attachment with care, as the blades are extremely sharp. Exercise caution when attaching, removing, cleaning or storing the stainless steel cross blade attachment.

Troubleshooting

Problem	Solution
The Blender to Go is not working.	Check the 3 amp fuse by replacement. Ensure that the blender bottle is fully secured onto the Blender to Go base unit.

Storage

Reassemble the Blender to Go before storing.
Ensure that the Blender to Go is cool, clean and dry.
Store in a cool, dry place.

Specifications

Product code: EK2312
Input: 220–240 V~50/60 Hz
Output: 350 W
Maximum operation time: 1 minute, cool for 1 minute

Muesli Breakfast Smoothie

Ingredients

60 g muesli
1 small banana, halved
1 tsp dry chia seeds
1 tsp peanut butter
Chilled soya or semi-skimmed milk



Method

Add the muesli, chia seeds, banana halves and peanut butter to the blender bottle. Top-up to the maximum fill mark with milk and blend until smooth.

Mango and Banana Smoothie

Ingredients

1 small mango
1 small banana
200 ml orange juice
4 ice cubes



Method

Cut the mango in half, remove the stone, then peel off the skin and cut the mango into small chunks.
Peel and chop the banana.
Put all of the ingredients into the blender bottle and blend until thick and smooth.

Avocado Pinch Smoothie

Ingredients

3 whole strawberries, frozen
1 small avocado, skin and stone removed
1 tbsp honey
1 tbsp Greek style yoghurt
200 ml milk



Method

Add all of the ingredients to the blender bottle and blend until thick and smooth.

Blueberry Health Smoothie

Ingredients

100 g blueberries
2 tbsp natural yoghurt
1 tsp green tea
Chilled water or pure juice
6 Ice cubes



Method

Add the blueberries, green tea, natural yoghurt and ice cubes to the blender bottle. Top-up to the maximum fill mark with chilled water or juice and blend until smooth.

Fruit Boost Smoothie

Ingredients

100 g strawberries
1 slice of honeydew melon
1 slice of watermelon, de-seeded
150 ml fresh orange juice
90 ml pineapple juice
6 ice cubes



Method

Place all of the ingredients into the blender bottle and blend until smooth.

Peach Mango Smoothie

Ingredients

3 peaches
2 mangos
½ lemon, juiced
150 ml white grape juice
Handful ice cubes



Method

Cut the mango and peaches in half and remove the stones. Remove the skin and chop into chunks.

Add the mango, peach, white grape juice and lemon juice to the blender bottle and blend until smooth.

Add the ice cubes and then blend the mixture again, until the ice cubes are crushed and the mixture is slushy.

Berry Protein Blast

Ingredients

1 large handful of frozen or fresh berries
30 g vanilla or banana protein powder
300 ml skimmed milk
6 ice cubes



Method

Add all of the ingredients to the blender bottle and blend until thick and smooth.

Thick Berry Smoothie

Ingredients

1 handful of selected berries
125 ml of a berry flavoured yoghurt
250 ml chilled milk of your choice



Method

Add all of the ingredients to the blender bottle and blend until thick and smooth.

Honeydew and Kiwi Fruit Smoothie

Ingredients

1 small honeydew melon, cubed
1 kiwi fruit, peeled and cut up
1 small green apple, peeled, cored and cut up
1 tbsp sugar
1 tbsp lemon juice
50 ml water
Handful ice cubes

Method

Add the honeydew melon, apple, kiwi fruit, sugar, water and lemon juice to the blender bottle and blend until smooth.

Add the ice cubes and then blend the mixture again, until the ice cubes are crushed and the mixture is slushy.

* Any recipe images used in this instruction manual are intended for illustrative purposes only.

This image shows a full page of blank, lined paper. It features approximately 20 horizontal blue or grey lines spaced evenly apart, typical of notebook paper. The lines extend across the entire width of the page, leaving small margins at the top and bottom. There are no vertical lines, text, or other markings on the page.

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.


The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

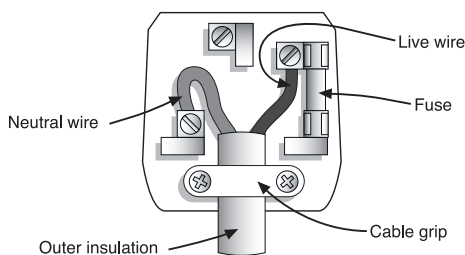

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing, Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2240*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this products excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



MADE IN CHINA.

Distributed by:
UP Global Sourcing,
Victoria Street,
Manchester OL9 0DD. UK.

SALTER®

CD100516/MD000000/V1