

SALTER®

SINCE 1760

Deluxe Blender Set

All-in-one blend, chop, slice
and shred

Let's
GO
healthy



Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not use broken or loose cutting or rotating blades.

Do not overload the appliance as the mixture level may rise during blending.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not place boiling water or very hot liquid in the appliance.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: Do not touch sharp blades.

Care and Maintenance

Before attempting any cleaning or maintenance, switch off and unplug the appliance from the mains power supply and allow it to cool fully.

Wipe the main unit with a soft, damp cloth and allow to dry thoroughly.

Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Never touch the chopping blades; using extreme caution, clean the blades with a brush and dry carefully.

Do not immerse the blender base unit in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the blender, as this could cause damage.

Note: The blender should be cleaned after each use.

Warning: Handle the chopping attachments with care, as the blades are sharp. Exercise caution when attaching, removing, cleaning or storing any attachments.

Description of Parts



- | | | | |
|----|------------------------|-----|--------------------------------|
| 1. | Blender base unit | 10. | Measuring cap |
| 2. | Food processor bowl | 11. | Travel bottle |
| 3. | Food processor lid | 12. | Travel bottle lid |
| 4. | Pin | 13. | Travel bottle blade attachment |
| 5. | Slicing/shredding disc | 14. | Safety lock |
| 6. | Feeding chute | 15. | Variable speed dial |
| 7. | Food pusher | 16. | Rubber feet |
| 8. | Blending jug | 17. | Chopping blade |
| 9. | Blending jug lid | | |

Before First Use

Wash all of the attachments in warm, soapy water, then rinse and dry thoroughly. Wipe the blender base unit with a soft, damp cloth and allow to dry thoroughly.

Note: When using the blender for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the blender.

Instructions for Use

Using the Deluxe Blender Set

All attachments must be securely fitted before use; do not attempt to remove them until the blades have stopped moving.

STEP 1: Switch off and unplug the blender from the mains power supply.

STEP 2: Position the blender base unit onto a flat, stable surface, at a height that is comfortable for the user. Check that the rubber feet are firmly planted so that the blender does not wobble during use.

STEP 3: Make sure that the variable speed dial is set to the off position '0'.

Warning: Max. continuous operation time is 30 seconds. Leave to cool down for at least 3 minutes before using again.

With the Food Processor Bowl

STEP 1: Place the food processor bowl on the blender base unit. Gently twist the food processor bowl in a clockwise direction until the arrow mark on the bowl is pointing to the 'locked' icon on the blender base unit.

STEP 2: Select the chosen attachment.

- For the chopper blade, place directly on the pin.
- For the slicing/shredding disc, place directly on the pin, with the blade of your choice facing up.

STEP 3: If using the chopping blade, add the food to be chopped into the food processor bowl. Place the lid onto the bowl and secure by aligning the tabs, pressing down firmly and twisting it in a clockwise direction until it locks into position.

STEP 4: If using the slicing/shredding disc, insert the food into the feeding chute, followed by the food pusher.

STEP 5: Plug in and switch on the blender at the mains power supply.

STEP 6: Holding the processor bowl steady, rotate the control dial to the required setting until the food is chopped to the preferred size. Turn the control dial back to '0' and wait for the blades to stop rotating before removing the processor bowl lid.

STEP 7: Additional food may be added to the chopped ingredients by removing the processor bowl lid, adding the ingredients and then replacing the processor bowl lid before repeating the chopping process. Alternatively, ingredients can be added using the feeding chute. Push down the chosen foods using the food pusher.

STEP 8: To remove the processor bowl from the blender base unit, first remove the lid by pressing down firmly in the centre of the lid and twisting in an anticlockwise direction. Carefully remove the chopping attachment without touching the blade itself. Twist the processor bowl in an anticlockwise direction and pull it away from the blender base unit.

With the Blender Jug

STEP 1: Place the jug on the blender base unit, making sure that there is a secure fit. The blending jug handle should be positioned to the right.

STEP 2: Gently twist the blending jug in a clockwise direction until the arrow mark on the blending jug is pointing to the 'locked' icon on the blender base unit.

STEP 3: Cut all of the ingredients for blending into small pieces and add them into the blending jug, along with some liquid.

STEP 4: Secure the blending jug lid by aligning it with the top of the blending jug and gently twisting it in a clockwise direction, so that it locks into place.

STEP 5: Place the measuring cap into the hole on the blending jug lid.

STEP 6: Rotate the control dial to the required setting until the food is chopped to the preferred size. Turn the control dial back to '0' and wait for the blades to stop rotating before removing the jug lid.

Note: Be careful not to overfill the blender as this can cause damage and the ingredients will spill out. The food or liquid should not reach above the maximum capacity of 1.5 L.

With the Travel Bottle

STEP 1: Place the ingredients into the travel bottle.

STEP 2: Pour a small amount of liquid into the bottle; this will help to blend the ingredients.

STEP 3: Secure the travel bottle blade attachment onto the bottle by twisting it in a clockwise direction.

STEP 4: Invert the bottle so that the blade attachment is facing downwards. Align the arrow mark on the attachment with the locking symbols on the blender base unit and twist in a clockwise direction to secure in place.

STEP 5: Rotate the control dial to the required setting until the food is chopped to the preferred size. Turn the control dial back to '0' and wait for the blades to stop rotating before removing the travel bottle.

STEP 6: Remove the blade attachment by twisting it in an anticlockwise direction and then replace it with the travel bottle lid.

Note: The blade and seal can be removed for easy cleaning by lifting away from the blade attachment base. Before using again, ensure that the blade and the seal are completely dry and securely fitted.

Using the Speed Settings

Holding the unit steady, turn the variable speed dial clockwise to the required speed setting (1–2) or anticlockwise to activate the pulse (P) setting, until the food is chopped to the preferred size.

The pulse setting provides quick bursts of speed; hold the variable speed dial in place to activate the motor and release to stop it.

Turn the speed dial back to '0' and wait for the blades to stop rotating before removing any attachments.

Warning: Do not operate the blender whilst empty, as this can cause damage.
Do not blend warm or hot liquid or food.

Storage

Check that the blender and its accessories are cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the blender; wrap it loosely to avoid causing damage.

Troubleshooting

| Problem | Possible Cause | Solution |
|---|--|---|
| The blender will not operate. | The mini food processor is not connected to the mains power supply. The blender is not correctly assembled. | Plug in and switch on the blender at the mains power supply. Check that the blender has been properly assembled and that the attachments are fully secured into place. |
| There are large, un-chopped chunks of ingredients after processing. | The processor bowl/jug/bottle has been overfilled. | Remove some of the ingredients and chop in batches. |
| The travel bottle is leaking. | The lid is not correctly secured to the bottle. | Checking that the threads are correctly aligned, twist the lid in a clockwise direction until it is secure. |

Specifications

Product code: EK4246

Input: 220–240 V~ 50/60 Hz

Output: 400 W

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.


The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked \perp .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

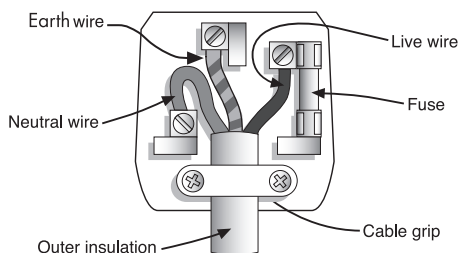

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.saltercookshop.com**.

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



*To be eligible for the extended guarantee, go to **www.saltercookshop.com** and register your product within 30 days of purchase.



Find us on 

www.facebook.com/SalterCookshop

SALTER[®]

Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester OL9 0DD. UK.

Made in China.



CD040820/MD000000/V1