SALTER®

SINCE 1760



SALTER®

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use, and clean this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.



Caution: Hot surface – do not touch the hot section or heating components of the appliance.

Do not use this product to cook or defrost frozen food.

Take care not to pour water on the heating element.

Warning: Keep the appliance away from flammable materials.

Care and Maintenance

STEP 1: Before attempting any cleaning or maintenance, unplug the health grill from the mains power supply and check that it has fully cooled.

STEP 2: Wipe the health grill housing with a soft, damp cloth and dry thoroughly.

STEP 3: Clean the accessories in warm, soapy water, then rinse and dry thoroughly.

STEP 4: Remove baked-on food by applying a small amount of warm water mixed with a mild detergent to the non-stick coated cooking plates, then wipe them clean with a paper towel or nonabrasive scourer.

Never use harsh or abrasive cleaning detergents or scourers to clean the health grill or its accessories, as this could damage the surface.

Note: The health grill should be cleaned after every use. Warning: The drip tray will gather oil and fat, which may still be hot after use. Allow it to cool fully before carefully removing the drip tray for cleaning.

SALTER®

Description of Parts



- 1. Cosmos Health Grill
- 2. Upper housing
- 3. Lower housing
- 4. Non-stick coated cooking plates
- 5. Handle

- 6. Red power indicator light
- 7. Green ready indicator light
- 8. Drip tray
- 9. Oil channel
- 10. Floating hinge

Instructions for Use

Before First Use

STEP 1: Before connecting to the mains power supply, wipe the health grill housing with a soft, damp cloth and dry thoroughly.

STEP 2: Clean the accessories in warm, soapy water, then rinse and dry thoroughly. **Note:** When using the health grill for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the health grill.

Using the Health Grill & Panini Maker

STEP 1: Prepare the ingredients that are to be grilled. Align the drip tray under the oil channel and slide into place. The drip tray should sit freely, directly under the oil channel.

STEP 2: Plug in and switch on the health grill at the mains power supply. The red power indicator light will illuminate, indicating that the health grill has been switched on and is heating up.

STEP 3: Preheat the health grill for approx. 3 minutes. The green ready indicator light will illuminate once the required temperature has been reached.

STEP 4: Place the prepared ingredients onto the lower non-stick coated cooking plate and then close the lid.

STEP 5: Cook the food for approx. 3–8 minutes, depending upon the type of ingredients.

STEP 6: Once cooking is complete, carefully open the lid and remove the food with a heat-resistant plastic or wooden spatula.

STEP 7: Switch off and unplug the health grill from the mains power supply. Leave the lid open and allow to cool.

STEP 8: Carefully pull the drip tray away from the health grill main unit and dispose of the contents

Note: Always preheat the non-stick coated cooking plates before starting to cook. Carefully apply a thin coat of cooking oil to the non-stick coated cooking plates, rubbing it in carefully with a paper towel. This will help to prolong the life of the non-stick coating.

During use the green ready indicator will cycle on and off to indicate that the health grill is maintaining the temperature.

Caution: The non-stick coated cooking plates get very hot during use; always use heat-resistant gloves to avoid injury.

Warning: Exercise caution during cooking; the health grill will emit steam.

Storage

Check that the health grill is cool, clean and dry before storing in a cool, dry place. Never store the health grill whilst it is wet.

Never wrap the cord tightly around the health grill; wrap it loosely to avoid causing damage.

Specifications

Product code: EK4366 Output: 1000 W

Input: 220-240 V ~ 50/60 Hz



Rosemary Shrimp Skewers with Arugula-White Bean Salad

Skewers are required for this recipe.

680 g large shrimps, shelled and cleaned with tails on Skewers

For the Marinade

3 garlic cloves, crushed 3 tbsp extra virgin olive oil 3 tbsp lemon juice 2 tsp fresh rosemary, finely chopped Salt and pepper, to taste

For the Salad

425 g cannellini beans, rinsed and drained
142 g baby arugula
1 garlic clove, minced
½ small red onion, thinly sliced
2 tsp lemon juice
1 tsp extra virgin olive oil
Pinch of sugar
Salt and pepper, to taste

Method

Combine the olive oil, lemon juice, crushed garlic cloves and rosemary in a large bowl or sealable container; season to taste with the salt and pepper.

Add the shrimps to the mixture and coat thoroughly in the marinade. Seal the bowl with shrink wrap or the lid of the container and refrigerate for approx. 15 minutes.

Turn the temperature control dial to heat setting 3 and preheat the health grill once the shrimps are marinated. Thread the shrimps onto the skewers.

Place the loaded skewers onto the health grill, close the lid and cook for approx. 3 minutes, until the shrimps are pink.

Whilst the shrimps are cooking, create the salad by mixing the minced garlic, sugar, olive oil, lemon juice, salt and pepper in a large bowl. Add the arugula, cannellini beans and onion; toss to combine.

Serve the salad on one side of a large platter and arrange the shrimp skewers alongside to serve.

Tikka-style Fish

Ingredients

2 x 900 g whole sea bream, red snapper or 6 fish steaks, tuna or similar 4 garlic cloves, finely grated

or crushed

6 tbsp plain yoghurt

2 tbsp finely grated fresh root ginger

2 tbsp olive oil

3 tsp cumin seeds

2 tsp turmeric

2 tsp mild chilli powder

Salt, to taste

Method

If using whole fish, score the skin on each side.

Combine the ginger and garlic, season with salt and then rub all over the fish.

Mix the yoghurt with the oil, spices and seasoning. Coat the fish inside and out with the mixture, then refrigerate until ready to cook.

Turn the temperature control dial to heat setting 4 and preheat the health grill before cooking. Place the fish onto the health grill, close the lid and cook for approx. 4–5 minutes, until the fish is cooked (cooking times will be reduced to approx. 3–4 minutes for tuna or similar fish). Serve with a fresh, crispy salad.



Grilled Chicken with Mozzarella Cheese

Ingredients

4 boneless chicken breasts 3 tbsp olive oil 1/4 tsp salt

8 slices Mozzarella cheese 2 tsp fresh rosemary, chopped ¼ tsp black pepper 4 tomatoes, sliced ½ tsp garlic powder Basil to garnish

Method

Turn the temperature control dial to heat setting 3 and preheat the health grill.

Slit each of the chicken breasts horizontally to make a pocket and then fill with the sliced tomato and mozzarella cheese.

Brush the chicken breasts with olive oil and season with salt, pepper, rosemary and garlic powder.

Place the chicken breasts onto the lightly oiled griddle plate and cook for approx. 9 minutes per side or until the juices run clear and the chicken is no longer pink.

Remove from the health grill and arrange on serving plates.

Garnish with basil.

Chicken Quesadillas

Ingredients

2 flour tortillas 4 spring onions, finely chopped 80 g cooked chicken, shredded 1 small finely chopped red

(or turkey can be used if preferred) chilli pepper

10 g butter, melted 2 tbsp grated cheddar cheese

1 tbsp pitted black olives,

finely chopped Salt and pepper

Method

Coat one side of each tortilla with a little melted butter.

Turn the temperature control dial to heat setting 4 and preheat the health grill.

Place all of the other ingredients into a bowl and mix well.

Season with salt and pepper and divide the mixture equally between the 2 tortillas.

Fold each tortilla in half and lightly brush with the remaining butter.

Place the tortillas onto the health grill, close the lid and cook for approx. 6 minutes or until the chicken is hot,

the cheese has melted and the tortillas are lightly golden brown and crispy.

Serve warm with salsa or salad.

Home-made Beef Burgers

Ingredients

350 g freshly ground beef 1 tsp dried mixed herbs Salt and freshly ground

1 egg (thyme and oregano) black pepper

Method

Turn the temperature control dial to heat setting 3 and preheat the health grill.

Mix the beef and herbs together in a mixing bowl, add the egg and season well.

Divide into 2 portions and shape into burgers.

Place the burgers onto the health grill, close the lid and cook for approx. 7–9 minutes or until thoroughly cooked and browned.

Serve in burger buns with a green salad.

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ($\frac{\bot}{-}$)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked

N or coloured BLACK.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked $\stackrel{\bot}{=}$.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal $(\stackrel{\bot}{=})$.

Always ensure that the cord grip is fastened correctly.


The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you. If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

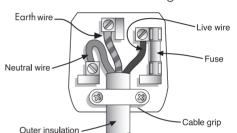

SALTER°

UP Global Sourcing UK Ltd., UK. Manchester OL9 0DD. Germany. 51149 Köln.

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.saltercookshop.com

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



*To be eligible for the extended guarantee, go to www.saltercookshop.com and register your product within 30 days of purchase.





Find us on f
www.facebook.com/SalterCookshop





Manufactured by:

UP Global Sourcing UK Ltd., UK. Manchester OL9 0DD. Germany. 51149 Köln.

Made in China.

CD031220/MD000000/V1