

SALTER®

SINCE 1760

cosmos

800 W Glass Jug Blender

Elegantly designed for all kitchens

cosmos

REFINED
AND
MODERN



Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not place boiling water or very hot liquid in the appliance.

Do not dry blend ingredients; always add a small amount of liquid.

Do not overload the appliance as the mixture level may rise during blending.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not use broken or loose cutting or rotating blades.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: Do not touch sharp blades.

Dos and Don'ts

Do:

Check that the blade attachment is securely fitted before use.

Chop all ingredients into small pieces before blending.

Add a small amount of cold liquid or reduce the quantity of the ingredients in the glass jug if the blades are not running smoothly.

If the ingredients do not blend evenly, remove the glass jug from the blender base unit. Shake the glass jug to redistribute the ingredients and then blend once more.

Note: A small amount of liquid must always be added to the blending jug before blending.

Caution: Exercise caution when handling the blade attachment, as the blades may get hot during use. If blending warm ingredients, take care when removing the blade attachment, as pressure-build up could cause the contents of the blender to spill.

Do not:

Attempt to remove the blade attachment until the blades have fully stopped moving.

Warning: Do not dry blend.

Do not blend hot liquid or food. Never exceed the max. fill mark when adding ingredients to the glass jug, as this could cause spillage and may damage the blender. The blender must not be operated when the glass jug is empty, cracked or broken.

Care and Maintenance

STEP 1: Switch off and unplug the blender from the mains power supply before performing any cleaning or user maintenance.

STEP 2: Wipe the blender base unit with a soft, damp cloth and allow to dry thoroughly.

STEP 3: To disassemble the blade attachment for cleaning, first remove the rubber gasket and then carefully remove the stainless steel blade by pulling it away from the blade attachment.

STEP 4: Wash all of the accessories, except the blade attachment, in warm, soapy water, then rinse and dry thoroughly.

Never touch the blades; using extreme caution, clean the blades with a brush and dry carefully.

Do not immerse the blender base unit in water or any other liquid. Never use harsh or abrasive detergents or scourers to clean the blender, as this could cause damage.

The blade attachment comes fully assembled. To reassemble after cleaning, place the stainless steel blade back into the blade attachment before replacing the rubber gasket on top.

Note: Always clean the blender immediately after each use. The blender is not suitable for use in a dishwasher.

Warning: Handle the blade attachment with care, as the blades are extremely sharp. Exercise caution when attaching, removing, cleaning or storing the blade attachment.

Description of Parts



1. 800 W Glass Jug Blender base unit
2. Glass jug
3. Blade attachment
4. Stainless steel blade
5. Rubber gasket
6. Jug lid
7. Filler cap
8. Control dial

Instructions for Use

Before First Use

STEP 1: Before connecting to the mains power supply clean the blender following the instructions in the section entitled 'Care and Maintenance'.

STEP 2: Place the blender base unit onto a stable, heat-resistant surface, at a height that is comfortable for the user.

Note: When using the blender for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the blender.

Warning: Do not immerse the blender base unit in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the blender or its accessories, as this could cause damage.

Using the 800 W Glass Jug Blender

STEP 1: Position the blender base unit onto a flat, stable surface at a height that is comfortable for the user.

STEP 2: Invert the glass jug. Slide the assembled blade attachment into the glass jug and twist it in a clockwise direction until secure.

STEP 3: Revert the glass jug so that the blade attachment is at the bottom.

Place the glass jug on top of the blender base unit, checking that the rims on both are aligned.

STEP 4: Chop the ingredients to be blended into small pieces and then place them into the glass jug. Make sure not to exceed the max. fill mark. The filler cap can be used as a small measuring cup.

STEP 5: Pour the required amount of liquid into the glass jug. Make sure not to exceed the max. fill mark.

STEP 6: Fit the jug lid and filler cap onto the glass jug. Plug in and switch on the blender at the mains power supply.

STEP 7: To blend the ingredients, turn the control dial to the desired speed setting (1, 2). Turn the control dial to the 'P' position to activate the pulse function; release to stop it. The pulse function provides quick bursts of speed useful for more solid foods.

STEP 8: Stop the blending process by turning the control dial to position '0'.

STEP 9: Switch off and unplug the blender from the mains power supply.

STEP 10: Detach the glass jug from the blender base unit by lifting it up and away from blender base unit.

STEP 11: To remove the blade attachment, invert the glass jug, and carefully twist the blade attachment in an anticlockwise direction and pull away.

Note: Always check that the rubber gasket, located on the inside bottom edge of the blade attachment, is in place. Ingredients can be added whilst the blender is in operation via the filler cap. Twist the filler cap in an anticlockwise direction to remove.

When mixing liquid, blend small quantities at a time to reduce spillage and splattering.

Warning: Max. operation time is 1 minute. Allow to cool for 3 minutes before using the blender again, in order to prolong the life of the blender.

Troubleshooting

Problem	Solution
The blender is not working.	Check the fuse is in working order and does not need to be replaced. Make sure that the glass jug is fully secured onto the blender base unit.

Storage

Reassemble the blender.

Check that the blender is cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the blender; wrap it loosely to avoid causing damage.

Specifications

Product code: EK4383

Input: 220–240 V~ 50/60 Hz

Output: 800 W

Maximum operation time: 1 minute, cool for 3 minutes

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked \perp .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt, consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

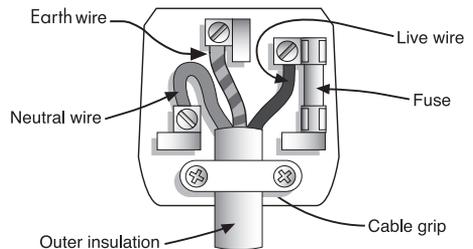

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.saltercookshop.com

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



*To be eligible for the extended guarantee, go to www.saltercookshop.com and register your product within 30 days of purchase.

3
YEAR
GUARANTEE*



Find us on 

www.facebook.com/SalterCookshop





SALTER®

Manufactured by:

UP Global Sourcing UK Ltd.,

UK. Manchester OL9 0DD.

Germany. 51149 Köln.

Made in China.

CD200121/MD000000/V1