

# SALTER®

SINCE 1760

## cosmos

### Milk Frother

Elegantly designed for all kitchens

cosmos

REFINED  
AND  
MODERN



Please read all of the instructions carefully and retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Keep hands, fingers, hair and loose clothing away from the rotating tools of the appliance.

Do not immerse the appliance in water or any other liquid.  
Do not operate the appliance with wet hands.  
Do not leave the appliance unattended whilst connected to the mains power supply.  
Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.  
Do not pull or carry the appliance by its power supply cord.  
Do not use the appliance for anything other than its intended use.  
Do not use any accessories other than those supplied.  
Do not use this appliance outdoors.  
Do not store the appliance in direct sunlight or in high humidity conditions.  
Do not move the appliance whilst it is in use.  
Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.  
Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.  
Always unplug the appliance after use and before any cleaning or user maintenance.  
Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.  
Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.  
Use of an extension cord with the appliance is not recommended.  
This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.  
This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface or door may get hot during operation.



**Caution:** Hot surface – do not touch the hot section or heating components of the appliance.

**Warning:** Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance.

The appliance will become very hot during use; do not touch the appliance and always take care when handling.

## Important

1. Check that the base of the Milk Frother is clean before each cycle.
2. Always fill the Milk Frother cup above the min. fill mark, whilst making sure not to exceed the max. fill mark for the warming function.
3. Never connect the Milk Frother to the mains power supply before milk has been added.
4. Do not operate the Milk Frother whilst empty.
5. Never allow any liquid to come into contact with the base.
6. Take care that the correct max. fill mark is followed for the relevant function; do not use the frothing function when milk is over the max. fill mark for frothing.

**Note:** The Milk Frother has a boil-dry protection feature. If the Milk Frother is switched on when empty, it will switch off.

**Warning:** Do not remove the lid until the whisk has stopped rotating.

## Care and Maintenance

Switch off and unplug the Milk Frother from the mains power supply and allow it to cool fully before attempting any cleaning or maintenance.

**STEP 1:** Wipe the Milk Frother with a soft, damp cloth and dry thoroughly.

Do not immerse the Milk Frother in water or any other liquid.

**STEP 2:** Clean the interior of the Milk Frother with warm, soapy water, then rinse and dry thoroughly.

**Note:** The Milk Frother should be cleaned after each use.

**Warning:** The Milk Frother is not safe for dishwasher use.

Never immerse the electrical components in water or any other liquids.

Do not use harsh or abrasive cleaning detergents or scourers to clean the Milk Frother, as this could cause damage.

## Description of Parts



- |  |                              |
|--|------------------------------|
| 1. Milk Frother base                         | 7. Whisk spindle             |
| 2. Milk Frother cup                          | 8. Whisk holder              |
| 3. Milk Frother lid                          | 9. Stirring whisk            |
| 4. Min. fill mark                            | 10. Frothing whisk           |
| 5. Max. fill mark for frothing ('MAX FROTH') | 11. Frothing function button |
| 6. Max. fill mark for heating ('MAX HEAT')   | 12. Heating function button  |

## Instructions for Use

### Before First Use

Clean the Milk Frother following the instructions in the sections entitled Care and Maintenance.

### Using the Milk Frother

To froth milk, the frothing whisk should be attached to the whisk spindle.

To heat milk without froth, the stirring whisk should be attached to the whisk spindle.

**STEP 1:** Check that the Milk Frother is switched off and unplugged from the mains power supply.

**STEP 2:** Remove the Milk Frother lid.



**STEP 3:** Attach the desired attachment to the whisk spindle by placing it onto the end and pushing down gently until it is fixed into place. If the attachment will not fit over the whisk spindle rotate the stirrer 90 ° in a clockwise direction and try again.

**STEP 4:** Remove attachments by carefully pulling them up and away from the whisk spindle. Store attachments in the whisk holder on the underside of the lid for safekeeping.

## Frothing Milk

**STEP 1:** Switch off and unplug the Milk Frother from the mains power supply.

**STEP 2:** Position the Milk Frother base onto a flat, stable, heat-resistant surface at a height that is comfortable for the user.

**STEP 3:** Attach the frothing whisk to the whisk spindle, checking that it is secure.

**STEP 4:** Fill the Milk Frother with milk. The milk should be over the min. fill mark but under the max. fill mark for frothing ('**MAX FROTH**').

**STEP 5:** Attach the Milk Frother lid then plug in and switch on the Milk Frother at the mains power supply.

**STEP 6:** Turn on the Milk Frother by pressing the frothing function button. A blue light will turn on, indicating the start of the cycle. When the cycle is complete, the Milk Frother will turn off automatically.

**STEP 7:** Switch off and unplug the Milk Frother at the mains power supply. Using heatproof gloves, remove the Milk Frother lid and pour out the milk.

**Caution:** The Milk Frother is not designed to reheat milk that has already been frothed. Reheating can damage the heating element.

**Warning:** The Milk Frother and lid will get hot during use; take care when touching these components.

When moving the appliance or pouring milk, allow the Milk Frother to cool sufficiently or wear heat-resistant oven gloves.

## Heating Milk

**STEP 1:** Switch off and unplug the Milk Frother from the mains power supply.

**STEP 2:** Position the Milk Frother base onto a flat, stable, heat-resistant surface at a height that is comfortable for the user.

**STEP 3:** Attach the stirring whisk to the whisk spindle, checking that it is secure.

**STEP 4:** Fill the Milk Frother with milk. The milk should be over the min. fill mark but under the max. fill mark for frothing ('**MAX HEAT**').

**STEP 5:** Attach the Milk Frother lid then plug in and switch on the Milk Frother at the mains power supply.

**STEP 6:** Turn on the Milk Frother by pressing the heat function button. A red light will turn on, indicating the start of the cycle. When the cycle is complete, the Milk Frother will turn off automatically.

**STEP 7:** Switch off and unplug the Milk Frother at the mains power supply. Using heatproof gloves, remove the Milk Frother lid and pour out the milk.

**Note:** A small amount of froth may still be formed while heating up milk.

**Caution:** The Milk Frother is not designed to reheat milk once it has been frothed. Reheating can damage the heating element.

**Warning:** The Milk Frother and lid will get hot during use; take care when touching these components.

When moving the appliance or pouring milk, allow the Milk Frother to cool sufficiently or wear heat-resistant oven gloves.

## Boil-dry Protection

If there is insufficient milk in the Milk Frother, it will automatically shut off. If this happens, switch off and unplug the Milk Frother from the mains power supply. Allow to cool fully for at least 10 minutes before using again.

## Storage

Check that the Milk Frother is cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the Milk Frother; wrap it loosely to avoid causing damage.

Do not store the cord inside the Milk Frother.

## Specifications

Product code: EK4444GUNMETAL

Input: 220–240 V ~ 50 Hz

Output: 450–550 W



## Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

**Blue Neutral (N)**

**Brown Live (L)**

**Green/Yellow Earth ( $\perp$ )**

**FOR UK USE ONLY** - Plug fitting details  
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.


The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked  $\perp$ .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

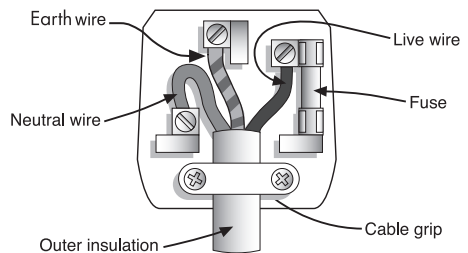

### Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,  
UK. Manchester OL9 0DD.  
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **[www.saltercookshop.com](http://www.saltercookshop.com)**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



\*To be eligible for the extended guarantee, go to [www.saltercookshop.com](http://www.saltercookshop.com) and register your product within 30 days of purchase.



Find us on 

[www.facebook.com/SalterCookshop](http://www.facebook.com/SalterCookshop)





**SALTER®**

Manufactured by:

UP Global Sourcing UK Ltd.,

**UK.** Manchester OL9 0DD.

**Germany.** 51149 Köln.

Made in China.

CD280121/MD000000/V1