

Function	Recommended drinks	Max. measurements
Hot milk/ hot chocolate	Hot chocolate or mocha	240 ml

STEP 1: Pour the required amount of milk into the hot chocolate maker according to the guidelines above.

STEP 2: If making hot chocolate, add 35 g of chocolate shavings to the milk. If simply frothing milk, skip to step 3.

STEP 3: Press '⏻' once for thick hot froth, twice for light hot froth, three times for hot milk/hot chocolate and four times for cold froth.

STEP 4: Wait until the cycle is complete.



NOTE: When using the hot chocolate maker for several cycles, rinse the inside of the hot chocolate maker with cold water between cycles for best results.

Heating milk in the hot chocolate maker

To heat milk without frothing:

STEP 1: Remove the frothing ring from the cup and replace with the heating ring located in the cup lid.

STEP 2: Pour the required amount of milk into the hot chocolate maker according to the guidelines for 'Hot milk'.

STEP 3: Press '⏻' three times and wait until the cycle is complete.

Boil-dry protection

If there is insufficient milk in the hot chocolate maker, it will automatically shut off. If this happens, switch off and unplug the hot chocolate maker from the mains power supply. Allow to cool fully for at least 10 minutes before using again.

Storage

Check that the hot chocolate maker is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the hot chocolate maker; wrap it loosely to avoid causing damage.

Do not store the cord inside the hot chocolate maker.

Specifications

Product code: EK5134

Input: 220–240 V ~ 50/60 Hz

Output: 500 W




Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

User manual

Chocolatier

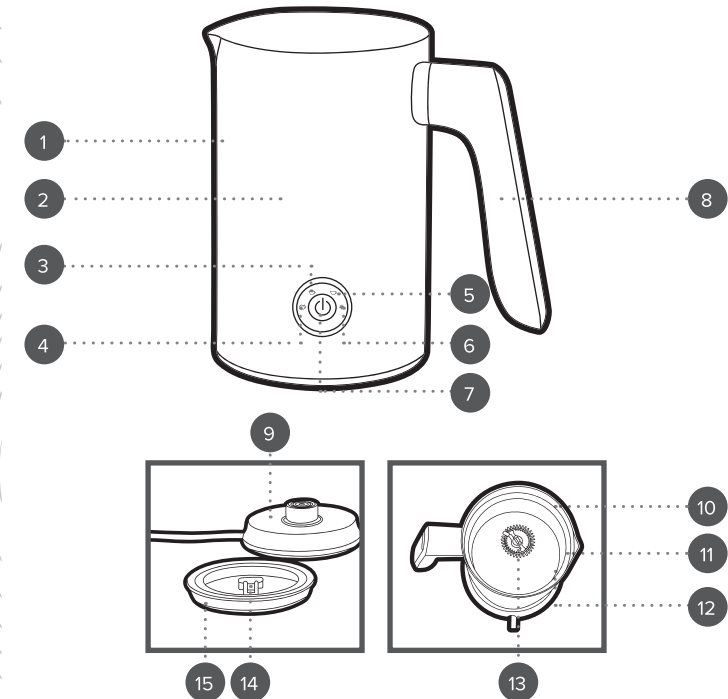

- Hot chocolate maker main unit
- Cup
- Light warm froth indicator light
- Thick warm froth indicator light
- Hot milk indicator light
- Cold froth indicator light
- Function button (⏻)
- Handle
- Base
- 240 ml max. fill mark for heating function
- 115 ml max. fill mark for frothing function
- Min. fill mark
- Frothing ring
- Heating ring
- Cup lid

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD060422/MD070824/V4

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.

- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance should not be operated by means of an external timer or separate remote control system.
- Use of an extension cord with the appliance is not recommended.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Hot surface – do not touch hot sections or heating components of the appliance.



WARNING: Keep the appliance away from flammable materials.

Dos and don'ts

DO:

Check that the base of the hot chocolate maker is clean before each cycle.
Always fill the hot chocolate maker cup above the min. fill mark,

whilst making sure not to exceed the max. fill mark for the heating function.

DON'T:

Connect the hot chocolate maker to the mains power supply before milk has been added.
Operate the hot chocolate maker whilst empty.

Care and maintenance

Switch off and unplug the hot chocolate maker from the mains power supply and allow it to cool fully before attempting any cleaning or maintenance.

STEP 1: Wipe the hot chocolate maker with a soft, damp cloth and dry thoroughly.

STEP 2: Clean the interior of the hot chocolate maker with warm, soapy water, then rinse and dry thoroughly.



NOTE: The hot chocolate maker should be cleaned after each use. The foaming stirrer can be removed and rinsed.



WARNING: The hot chocolate maker is not safe for dishwasher use. Do not use harsh or abrasive cleaning detergents or scourers to clean the hot chocolate maker, as this could cause damage.

Instructions for use

Before first use

Clean the hot chocolate maker and stirrer following the instructions in the sections entitled '**Care and maintenance**'.

Using the hot chocolate maker

The hot chocolate maker has four functions which can be used to create:

1. Thick hot froth
2. Light hot froth
3. Hot milk/hot chocolate
4. Cold froth

Function	Recommended drinks	Max. measurements
Thick hot froth	Cappuccino or macchiato	115 ml
Light hot froth	Latte or matcha latte	115 ml
Cold milk froth	Frappé or iced coffee	115 ml