 
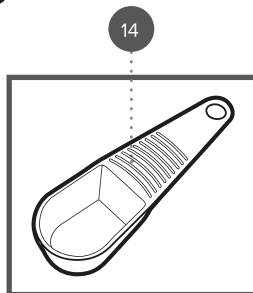 
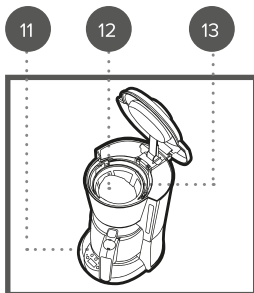 


User manual

Coffee machine

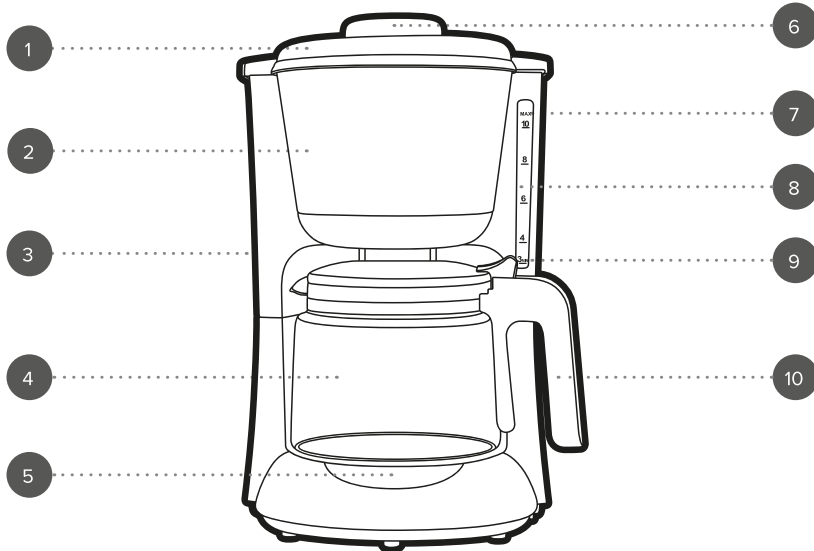

1. Water tank/funnel cover
2. Brewing chamber
3. Coffee machine main unit
4. Carafe
5. Digital display
6. Coffee strength dial
7. Max. fill mark (1.25 L)
8. Water tank
9. Min. fill mark (400 ml)
10. Carafe handle
11. Power button
12. Reusable filter
13. Funnel
14. Measuring spoon

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of this appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.

- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance should not be operated by means of an external timer or separate remote control system.
- Use of an extension cord with the appliance is not recommended.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Hot surface – do not touch hot sections or heating components of the appliance.



WARNING: Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance.

Care and maintenance

Before attempting any cleaning or maintenance, unplug the coffee machine from the mains power supply and allow it to cool fully.

STEP 1: Wipe the coffee machine main unit with a soft, damp cloth and allow to dry thoroughly.

Never use harsh or abrasive cleaning detergents or scourers to clean the coffee machine as this could cause damage.

STEP 2: Wash the reusable filter, funnel, carafe in warm, soapy water, then rinse and dry thoroughly.



NOTE: The coffee machine should be cleaned after each use.

Removing limescale

Limescale can develop over time and may affect the performance and lifespan of the coffee machine. It is recommended to descale the coffee machine regularly, at least once every 6–8 weeks, especially if the coffee machine is used in a hard water area. Frequent descaling will improve the performance and lifespan of the coffee machine.

STEP 1: Fill the water tank to the max. fill mark with cold water.

STEP 2: Add a commercial descaling agent, adhering to the manufacturer's instructions. It is not recommended to use vinegar to descale the coffee machine.

STEP 3: Run the coffee machine until it has cycled one carafe of water. Turn the coffee machine off, leave to soak for approx. 15 minutes, and then switch on again. Repeat until all the water has been cycled.

STEP 4: Empty the carafe. Refill the water tank to the max. fill mark with clean water. Run the coffee machine at least twice more and pour the water away once it has cooled. The coffee machine should now be descaled, clean, and ready for use. If any traces of descaling product residue remain, run more clean water through the coffee machine until it is completely clean.



NOTE: If the coffee machine switches off before it has boiled or a white deposit is noticed on the inside of the water tank, it needs to be descaled.

Instructions for use

Before first use

Before using the coffee machine for the first time, clean the water tank and accessories following the instructions in the section entitled '**Care and maintenance**'.

STEP 1: Before connecting to the mains power supply, position the coffee machine onto a flat, stable, heat-resistant surface at a height that is comfortable for the user. Check that all accessories are in place.

STEP 2: The coffee machine should be used first with water only. Remove the reusable filter from inside the machine.

STEP 3: Follow the instructions in the section entitled '**Filling the water tank**' and take care not to exceed the max. fill mark.

STEP 4: Place the carafe in the brewing chamber.

STEP 5: Press the power button to switch on the coffee machine and start the brewing process.

STEP 6: Once all the water has been brewed, switch off the coffee machine and discard the water from the carafe.



NOTE: When using the coffee machine for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the coffee machine.

Filling the water tank

Lift open the water tank/funnel cover to fill the water tank with cold water, ensuring that the water level is above the min. fill mark and below the max. fill mark.

Once the water tank is filled, lower the water tank/funnel cover down to close the water tank.



NOTE: For the best results use cool distilled water when filling the water tank.



CAUTION: Do not overfill the water tank, as this could damage to the coffee machine.



WARNING: Never fill the water tank directly from a tap. Always use the carafe or a jug to fill the water tank.

Using the coffee machine

STEP 1: Make sure the coffee machine is switched off and unplugged from the mains power supply and that all the accessories are in place.

STEP 2: Pour a minimum of 400 ml of cold water into the water tank following the instructions in the section titled '**Filling the water tank**'.

STEP 3: Remove the reusable filter from the brewing chamber. Add a minimum of 2 spoons (12–14 g) of medium-fine coffee to the reusable filter using the measuring spoon.

STEP 4: Gently shake the reusable filter to evenly distribute the fine-ground coffee. Ensure that the fine-ground coffee does not exceed the max. fill mark on the reusable filter.

STEP 5: Place the reusable filter back into the brewing chamber and close the water tank/funnel cover.

STEP 6: Place the carafe into the brewing chamber.

STEP 7: Plug in and switch on the coffee machine at the mains power supply.

STEP 8: Set the time following the instructions in the section entitled '**Setting the time**'.

STEP 9: Turn the coffee strength dial to adjust the brew strength of the coffee (mild, medium, strong).

STEP 10: Press the power button, a red indicator light will illuminate on the digital display and the brewing process will start.

STEP 11: Once all the coffee has dripped from the brewing chamber into the carafe and the brewing cycle is complete (approx. 3 mins for the min. level water), the coffee machine will activate the keep warm function for approx. 45 minutes or the coffee machine can be switched off by pressing the power button.

STEP 12: Remove the carafe from the brewing chamber.



NOTE: Once the brewing cycle button has been pressed, the coffee maker will start the brewing cycle and will remain on until the brewing cycle is complete. To interrupt or stop the brewing cycle, switch off the coffee maker at the mains power supply and unplug it or remove the carafe from the brewing chamber.



CAUTION: Do not switch on the coffee maker without any water in the water tank. Do not open the water tank cover during the brewing cycle, as this will cause steam to escape and could cause scalding or burns. Take care when handling, as the carafe will become hot during operation.



WARNING: Allow the coffee maker to cool for approx. 3 minutes before making a second carafe of coffee. If the coffee maker does not cool completely before use, water placed in the water tank may overheat. This will cause hot steam to escape which could injure the user.

Setting the time

STEP 1: Switch on the coffee machine. The digital display will flash '**12:00**'. Press any button on the digital display to stop the flashing, then a clock symbol will appear.

STEP 2: To set the time, press '**PRO**' once. The digital display will show '**SET TIME**' and '**12:00**'.

STEP 3: Press '**HR**' to set the hour. The hour displayed on the digital display will increase by one hour for each press. If '**HR**' is held for more than 1 second, the hours will increase quicker.

STEP 4: Press '**MIN**' to set the minute. The minute displayed on the LCD will increase by one minute for each press. If '**MIN**' is held for more than 1 second, the minutes will increase quicker.

STEP 5: To set the time, wait approx. 8 seconds and the selected time will set and be displayed. Press '**PRO**' to set the time again.



NOTE: The time will reset every time the coffee machine is switched off.

Using the auto function

Pre-set brewing times on the coffee machine allow users to schedule the brewing process to start automatically at a specific time. This feature is particularly convenient for those who want to wake up to freshly brewed coffee in the morning or have coffee ready at a specific time without having to manually start the machine.

STEP 1: Fill the water tank with water and the reusable filter with fine-ground coffee following the instructions in the section entitled '**Using the coffee machine**'.

STEP 2: Press '**PRO**' twice. The digital display will show '**SET TIMER**' and '**12:00**'. This mode allows users to set a specific time for brewing.

STEP 3: To set the pre-set time, follow the instructions in the section entitled '**Setting the time**'.

STEP 4: Once set, press '**AUTO**' once. A green indicator light on digital display will illuminate.

STEP 5: At the programmed brewing time, the green indicator light on the digital display will automatically turn off and a red indicator light will illuminate showing that the brewing process has started.



NOTE: Once the cycle is complete, the auto function will have to be reprogrammed to brew coffee. Pre-set time can be checked at any time by pressing '**PRO**' twice. Pre-set time can be cancelled at any time by pressing '**AUTO**' once. The green indicator light will switch off to indicate this.

Anti-drip feature

The coffee machine has an anti-drip feature to prevent coffee leaking out from the brewing chamber when the carafe is removed from its base during the brewing process. This is an automatic feature that is permanently activated.

Hints and tips

1. Always use fresh, cold water to fill the water reservoir.
2. The quantity of ground coffee can be adapted to suit taste. For stronger coffee, increase the amount of coffee, or use less for weaker coffee.
3. After using packaged ground coffee, tightly reseal it and store the unused ground coffee in a cool, dry place.
4. To achieve optimum coffee taste, use whole coffee beans and finely grind them before brewing.
5. Do not reuse ground coffee that has already been used in the coffee maker, as this will greatly reduce the flavour of the coffee.
6. Reheating coffee is not recommended, as it interferes with the taste.

Storage

The coffee maker must be cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the coffee maker; wrap it loosely to avoid causing damage.

Specifications

Product code: EK6161

Operating voltage: 220–240 V ~ 50/60 Hz

Power: 1000 W



Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD270324/MD130624/V3