 
 
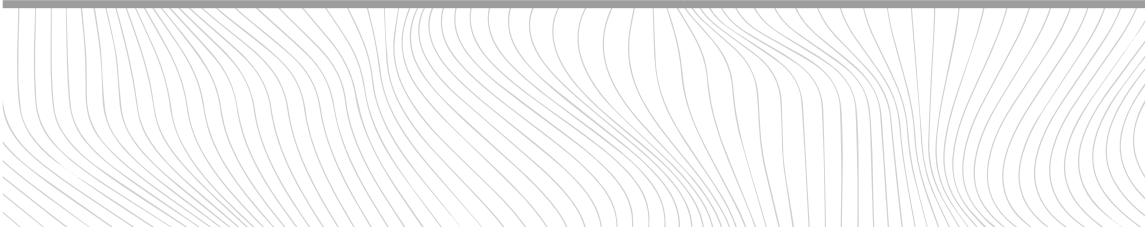 


User manual

Egg steamer

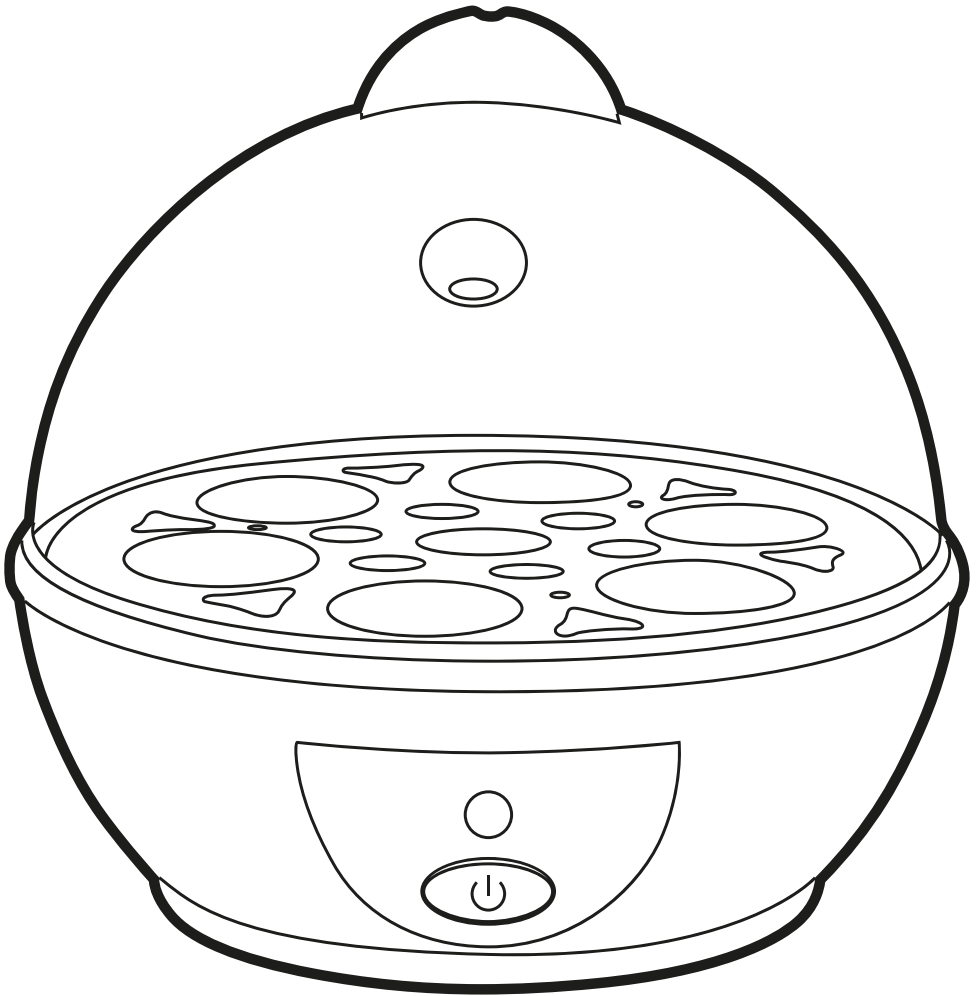

Description of parts

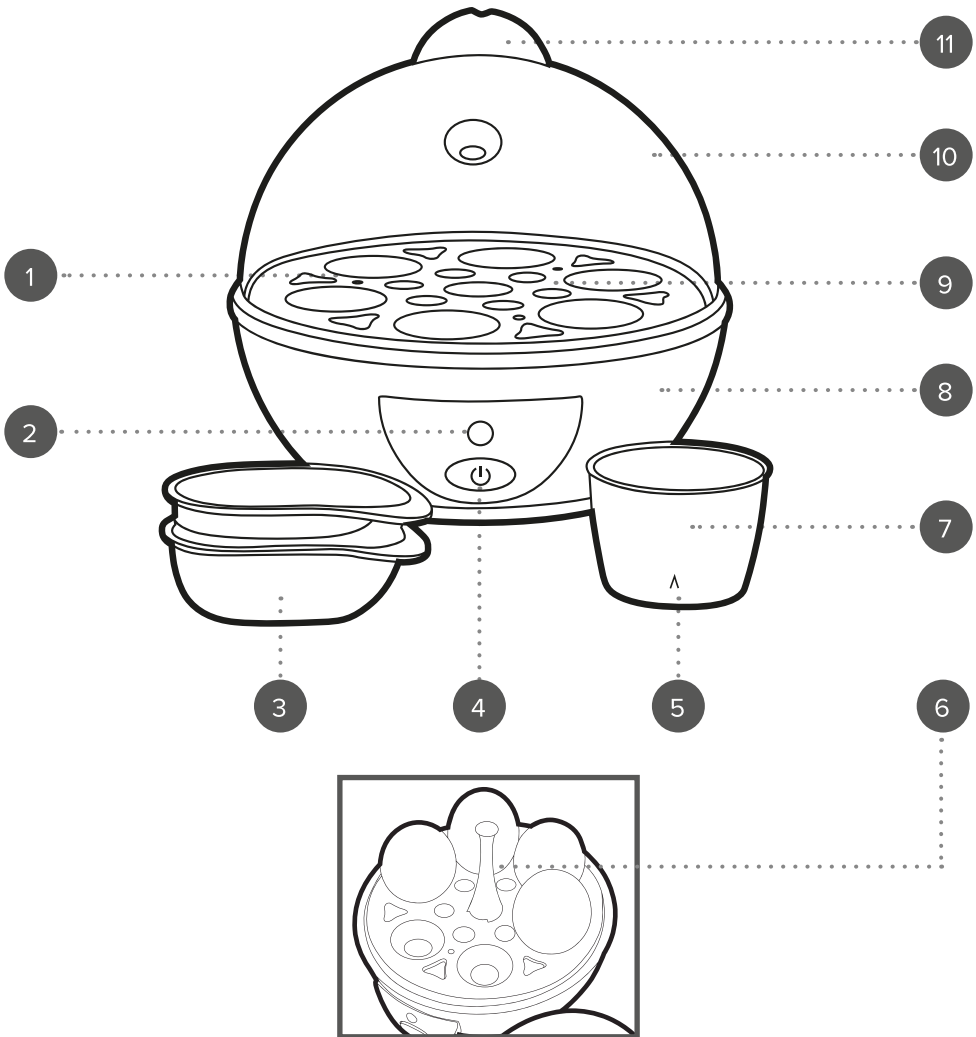

- | | |
|------------------------------|-------------------------|
| 1. Removable egg tray | 7. Measuring cup |
| 2. Indicator light | 8. Egg cooker main body |
| 3. Egg poachers (qty. 2) | 9. Heating plate |
| 4. Power button | 10. Lid with steam vent |
| 5. Egg piercer | 11. Lid handle |
| 6. Removable egg tray handle | |

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from heat emitting appliances.
- Do not immerse the appliance in water or any other liquid.
- Do not operate the appliance with wet hands.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Do not place boiling water or very hot liquid in the appliance.
- Do not overload the appliance; only fill up to the maximum level marked on the appliance.
- Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

- Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.
- Always unplug the appliance after use and before any cleaning or user maintenance.
- Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.
- Always use the appliance on a stable, heat resistant surface, at a height that is comfortable for the user.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.
- The outer surface of the appliance may get hot during operation.



CAUTION: Hot surface – do not touch the hot section or heating components of the appliance. The heating element will remain hot after use.



WARNING: Keep the appliance away from flammable materials. Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance.

Care and maintenance

STEP 1: Switch off and unplug the egg cooker from the mains power supply. Allow the egg cooker to cool fully before performing any cleaning or maintenance.

STEP 2: Wipe the egg cooker main body with a soft, damp cloth and allow to dry thoroughly.

STEP 3: Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Do not use harsh or abrasive scourers to clean the egg cooker, as this could cause damage.



NOTE: The egg cooker should be cleaned after each use.

Removing limescale/scorch marks

Limescale/scorch marks can develop over time around the heating plate, affecting the performance and lifespan of the egg cooker. It is recommended to use a commercial descaling agent to remove limescale from the egg cooker regularly, at least once a month.

STEP 1: Add the descaling solution to the heating plate, following the manufacturer's instructions.

STEP 2: Plug in and switch on the egg cooker at the mains power supply, then press the power button to turn on the egg cooker.

STEP 3: After approx. 15 minutes, press the power button to turn off the egg cooker. Allow it to cool before emptying the heating plate and wiping it several times with a soft, damp cloth. Leave to dry thoroughly.



CAUTION: This process will cause steam to escape which could cause scalding. Allow for sufficient ventilation around the egg cooker during this process.



WARNING: Do not leave the egg cooker unattended whilst removing limescale.

Instructions for use

Before first use

Wipe the egg cooker main body with a soft, damp cloth and allow to dry thoroughly before connecting to the mains power supply.

Remove all of the accessories and wash them in warm, soapy water, then rinse and dry thoroughly. Place the egg cooker onto a stable, heat-resistant surface at a height that is comfortable for the user.



NOTE: When using the egg cooker for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the egg cooker.

Using the egg cooker

To make boiled eggs

STEP 1: Check that the egg cooker is switched off and unplugged from the mains power supply and place it onto a clean, dry, stable surface, at a height that is comfortable for the user.

STEP 2: Remove the lid and take out the removable egg tray and egg poachers from the egg cooker.

STEP 3: Determine the desired consistency of the eggs to be cooked (soft, medium or hard-boiled), then fill the measuring cup with water by following the table in the section entitled 'Water volume requirements'.

STEP 4: Pour the cold water onto the heating plate and then place the removable egg tray on top.

STEP 5: Prepare the number of eggs to be cooked (up to 6 eggs at once). Use the egg piercer to create a small hole in the larger end of each egg and then place them securely into the holes in the removable egg tray. This will prevent the eggs from breaking during the cooking process.

STEP 6: Place the lid back onto the egg cooker.

STEP 7: Plug in and switch on the egg cooker at the mains power supply.

STEP 8: Press the power button on the front of the egg cooker main body; the indicator light will illuminate and the cooking process will begin.

STEP 9: Once the water has completely evaporated and the eggs are cooked, the indicator light and egg cooker will automatically switch off.

STEP 10: Remove the lid with caution as steam will be emitted from the egg cooker. Carefully remove the eggs; they will have become hot during the cooking process.



CAUTION: Do not touch the lid during the cooking process, as it will become extremely hot.

Water volume requirements

Egg type	Approx. water	
	1 egg	Up to 6 eggs
Soft-boiled	40 ml	20 ml
Medium-boiled	60 ml	40 ml
Hard-boiled	80 ml	60 ml

Cooking times for boiled eggs

Consistency of egg	Approx. cooking time
Soft-boiled	8 mins
Medium-boiled	10 mins
Hard-boiled	12 mins

Cooking times will vary depending upon the desired result. For best results use distilled water, as tap water contains minerals which can cause discoloration of the eggs.

To make poached eggs

STEP 1: Check that the egg cooker is switched off and unplugged from the mains power supply and place it onto a clean, dry, stable surface, at a height that is comfortable for the user.

STEP 2: Remove the lid and then take out the removable egg tray and egg poachers from the egg cooker.

STEP 3: Fill the measuring cup with 60 ml cold water. Pour the cold water onto the heating plate.

STEP 4: Lightly coat the egg poachers with oil or butter. Break one egg into each egg poacher.

STEP 5: Place the removable egg tray onto the egg cooker, place the egg poacher on top of the egg tray and then close the lid.

STEP 6: Plug in and switch on the egg cooker at the mains power supply.

STEP 7: Press the power button on the front of the egg cooker main body; the indicator light will illuminate and the cooking process will begin.

STEP 8: Once the water has completely evaporated and the eggs are cooked, the indicator light will turn off and the egg cooker will automatically switch off.

STEP 9: Using a small heat-resistant plastic or wooden spatula, carefully remove the poached eggs from the egg poachers. Remove the eggs immediately to prevent over-poaching.



NOTE: Cooking time is approx. 10 minutes to poach 2 eggs.

Storage

Check that the egg cooker is cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the egg cooker; wrap it loosely to avoid causing damage.

Specifications

Product code: EK6353

Operating voltage: 220–240 V ~ 50–60 Hz

Power: 360–430 W



Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD301023/MD120624/V3