

STEP 6: Once the food has been chopped to the required size, release the button and wait for the blade to stop rotating before removing the hand blender from the beaker/bowl.

STEP 7: To remove the blender attachment from the hand blender, twist clockwise and pull away from the hand blender.



CAUTION: Switch off and unplug the hand blender from the mains power supply before adding or removing food from the beaker/bowl.



WARNING: The variable speed selector is ineffective when the turbo button is pressed. Maximum operation time is approx. 1 minute. Allow to cool for approx. 2 minutes before using the hand blender again.

Troubleshooting

Problem	Possible cause	Solution
The hand blender will not operate.	The hand blender is not connected to the mains power supply.	Plug in and switch on the hand blender at the mains power supply.
The blades will not move when in contact with ingredients.	The ingredients are hard vegetables such as potato, carrot and turnip, making it difficult for the hand blender to blend.	Only blend ingredients such as cooked vegetables or soft fruit.

Storage

Check that the hand blender is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the hand blender; wrap it loosely to avoid causing damage.

Specifications

Product code: EK6519

Input: 220–240 V ~ 50/60 Hz

Output: 1500 W




Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

User manual

Hand blender

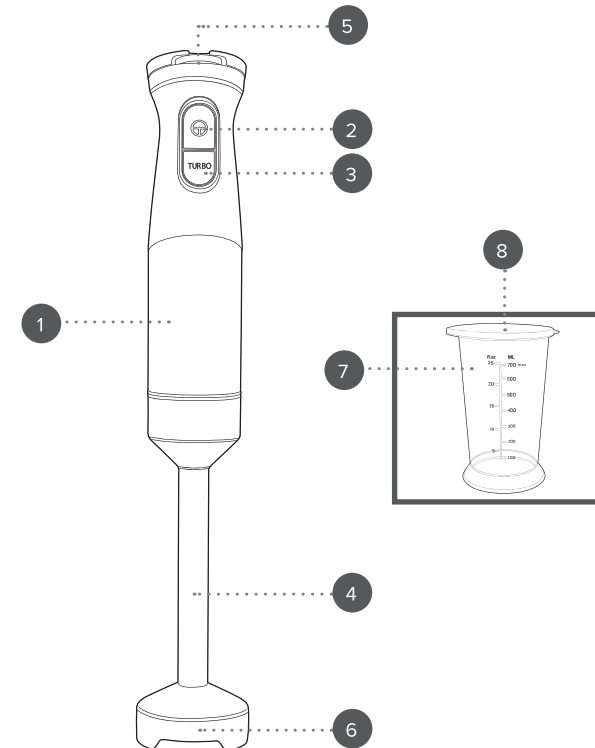

- | | |
|---------------------------|----------------------------|
| 1. Hand blender main unit | 5. Variable speed selector |
| 2. Power button | 6. Blade |
| 3. Turbo button | 7. 700 ml beaker |
| 4. Blender attachment | 8. Storage lid |

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD071024/MD000000/V1

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of this appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Do not leave the appliance unattended whilst connected to the mains power supply.

- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use any damaged accessories.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Do not touch any moving parts on this appliance during use, as this could cause injury.
- Do not touch any sections of the appliance that may become hot during use, as this could cause injury.
- Always unplug the appliance after use and ensure it has cooled fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.



WARNING: Do not touch sharp blades.

Dos and don'ts

DO:

Switch off the hand blender and disconnect it from the mains power supply before changing or fitting attachments.

DON'T:

Dry blend ingredients; always add a small amount of liquid.

Use attachments or cutting/rotating blades if they are loose, damaged or broken.

Use the hand blender to blend very hard or dry foods.

Allow food/liquid to get above the join between the blender attachment and hand blender main unit.

Operate the hand blender without food as this can cause damage.

Care and maintenance

Before attempting any cleaning or maintenance, switch off and unplug the hand blender from the mains power supply and allow it to cool fully.

STEP 1: Wipe the hand blender main unit with a soft, damp cloth and allow to dry thoroughly.

STEP 2: Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Never touch the chopping blades; using extreme caution, clean the blades with a brush and dry carefully.

Do not use harsh or abrasive detergents or scourers to clean the hand blender, as this could cause damage.

The hand blender and accessories is not suitable for use in a dishwasher.



NOTE: The hand blender should be cleaned after each use.



WARNING: Handle the attachments with care, as the blades are sharp. Exercise caution when attaching, removing, cleaning or storing attachments.

Instructions for use

Before first use

Clean the blender and its accessories following the instructions in the section entitled '**Care and maintenance**'.



NOTE: When using the hand blender for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the hand blender.

Using the hand blender

The attachment must be securely fitted before use; do not attempt to remove them until the attachment has stopped moving.

STEP 1: Before connecting the hand blender to the mains power supply, carefully attach the blender attachment to the hand blender main unit by aligning the tabs and twisting anticlockwise until it clicks into place.

STEP 2: Place the food to be chopped into the 700 ml beaker provided, or a suitable bowl.

STEP 3: Plug in and switch on the hand blender at the mains power supply.

STEP 4: Holding the beaker/bowl steady, insert the hand blender into the food and press and hold the desired function button on the hand blender main unit.

STEP 5: When the power button is pressed, the variable speed selector can be used to adjust the speed. Turn the variable speed selector from left to right to increase the speed.