

## Making hot chocolate

**STEP 1:** Pour the required amount of milk into the hot chocolate maker according to the guidelines above.

**STEP 2:** Add a maximum of 55 g of chocolate flakes to the milk, based on 500 ml milk.

**STEP 3:** Press the **power/function** button three times to start the cycle.

**STEP 4:** Press the variable temperature control icon immediately after to select the required temperature. There are four temperatures to choose from: 45 °C, 60 °C, 70 °C, 80 °C.

**STEP 5:** The temperature display will show the temperature of the thermostat and will increase until it has reached the required temperature. The hot chocolate maker will beep three times and temperature display will return to '00' indicating the cycle has been completed.

**STEP 6:** Switch off and unplug the hot chocolate maker at the mains power supply. Carefully remove the lid and pour out the hot chocolate.



**NOTE:** The variable temperature can only be used on the hot milk/hot chocolate setting.



**WARNING:** Do not fill the hot chocolate maker past the max. fill mark, as it will leak and overflow.

## Boil-dry protection

If there is insufficient milk in the hot chocolate maker, the indicator lights will flash and the temperature display will show an 'E3' error code before automatically shutting off. If this happens, switch off and unplug the hot chocolate maker from the mains power supply. Allow to cool fully for at least 10 minutes before using again.

## Storage

Check that the hot chocolate maker is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the unit; wrap it loosely to avoid causing damage.

Do not store the cord inside the hot chocolate maker.

## Specifications

Product code: EK6527

Input: 220–240 V ~ 50/60 Hz

Output: 500 W




### Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

# User manual

Chocolatier to share

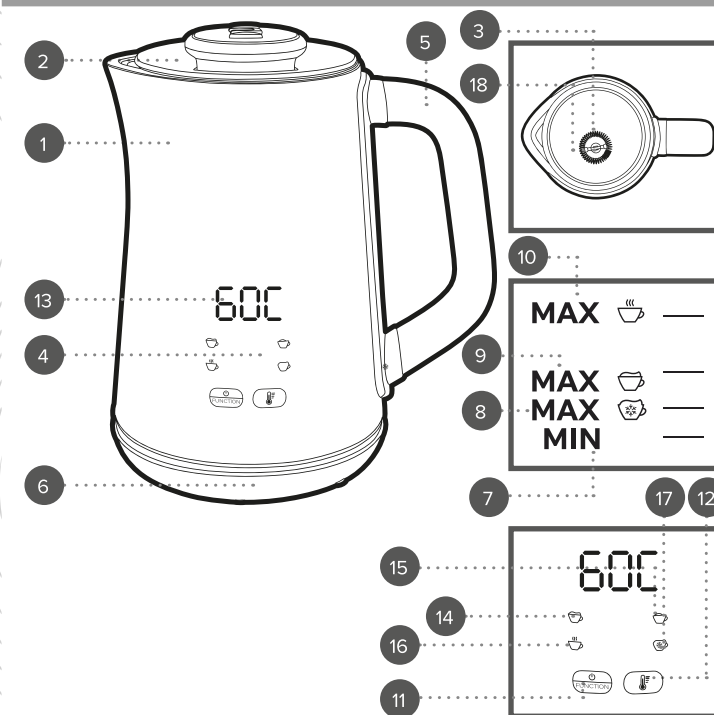

- Hot chocolate maker main unit
- Lid
- Frothing whisk
- Function panel
- Handle
- Base
- Min. fill mark (190 ml)
- Cold foam milk capacity (250 ml)
- Hot foam milk capacity (290 ml)
- Heating milk capacity (500 ml)
- Power/function button
- Variable temperature control button
- Temperature display
- Full foam indicator light
- Part foam indicator light
- Hot milk indicator light
- Cold foam indicator light
- Spindle

Manufactured by:  
Ultimate Products UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Ultimate Products Europe Ltd.,  
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

**MADE IN CHINA.**

CD/011024/MD000000/V1

Please retain instructions for future reference.

## SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of this appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.

- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance should not be operated by means of an external timer or separate remote control system.
- Use of an extension cord with the appliance is not recommended.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



**CAUTION:** Hot surface – do not touch hot sections or heating components of the appliance.



**WARNING:** Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance.

### Dos and don'ts

#### DO:

Check that the base of the hot chocolate maker is clean before each cycle.

Always fill the hot chocolate maker above the min. fill mark, whilst making sure not to exceed the max. measurements.

#### DON'T:

Connect the hot chocolate maker to the mains power supply before milk has been added.

Operate the hot chocolate maker whilst empty.

Allow any liquid to come into contact with the base.

### Care and maintenance

Switch off and unplug the hot chocolate maker from the mains power supply and allow it to cool fully before attempting any cleaning or maintenance.

**STEP 1:** Wipe the hot chocolate maker with a soft, damp cloth and dry thoroughly.

Do not immerse the hot chocolate maker in water or any other liquid.

**STEP 2:** Clean the interior of the hot chocolate maker with warm, soapy water, then rinse and dry thoroughly.



**NOTE:** The hot chocolate maker should be cleaned after each use.



**WARNING:** The hot chocolate maker is not safe for dishwasher use. Never immerse the electrical components in water or any other liquids. Do not use harsh or abrasive cleaning detergents or scourers to clean the hot chocolate maker, as this could cause damage.

### Instructions for use

#### Before first use

Clean the hot chocolate maker following the instructions in the sections entitled '**Care and maintenance**'.

#### Using the hot chocolate maker

The hot chocolate maker has four functions which can be used to create:

1. Full foam
2. Part foam
3. Hot milk/hot chocolate
4. Cold foam

Function	Recommended drinks	Max. measurements
Full foam	Latte or matcha latte	290 ml
Part foam	Cappuccino or macchiato	290 ml
Hot milk/hot chocolate	Hot chocolate or mocha	500 ml
Cold foam	Frappé or iced cappuccino	250 ml

**STEP 1:** Place the hot chocolate maker base onto a flat, stable, heat-resistant surface at a height that is comfortable for the user.

**STEP 2:** Insert the frothing whisk onto the spindle at the bottom of the hot chocolate maker ensuring it is securely fitted.

**STEP 3:** Pour the required amount of milk into the hot chocolate maker according to the guidelines above.

**STEP 4:** Attach the lid and place the hot chocolate maker main unit on to its base. Then plug in and switch on the hot chocolate maker main unit at the mains power supply, the display will show '**00**' indicating the unit is on.

**STEP 5:** Press the **power/function** button once for full foam, twice for part foam, three times for hot milk/hot chocolate and four times for cold foam.

**STEP 6:** The temperature display will show the temperature of the thermostat and will increase/decrease until it has completed its cycle. The hot chocolate maker will beep three times and temperature display will return to '**00**' indicating the cycle has been completed.



**NOTE:** When using the hot chocolate maker for several cycles, rinse the inside of the hot chocolate maker with cold water between cycles for best results.