

Troubleshooting


Problem	Possible cause	Solution
The chopper will not operate.	The chopper is not connected to the mains power supply.	Plug in and switch on the chopper at the mains power supply.
	The chopper is not correctly assembled.	Check that the chopper has been properly assembled and that the chopping bowl and lid are secured into place.
Dry ingredients are clumping together.	The chopping bowl is wet.	Dry the chopping bowl thoroughly before adding ingredients.
There are large chunks of ingredients after chopping.	The chopping bowl has been overfilled.	Remove some of the ingredients and chop in batches.

Specifications

Product code: EK2182  
Input: 220–240 V ~ 50–60 Hz  
Output: 150 W

User manual


Chopper

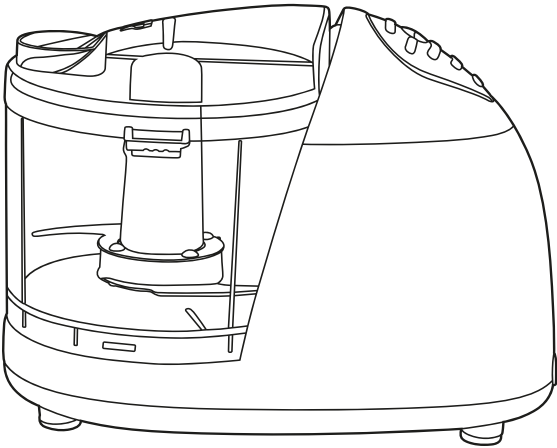

Manufactured by:  
Ultimate Products UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Ultimate Products Europe Ltd.,  
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

**MADE IN CHINA.**

Description of parts

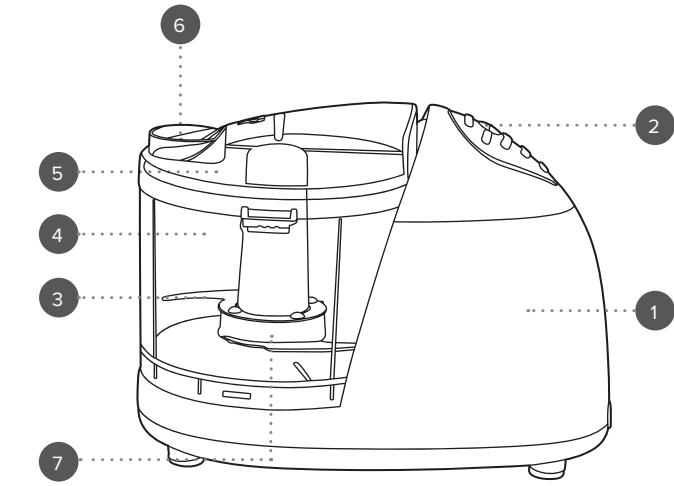

- |                        |                      |
|------------------------|----------------------|
| 1. Chopper main unit   | 5. Chopping bowl lid |
| 2. On/off button       | 6. Feeding chute     |
| 3. Chopping attachment | 7. Pin               |
| 4. Chopping bowl       |                      |

Please retain instructions for future reference.

Dos and don'ts

- DO:**  
Switch off the chopper and disconnect it from the mains power supply before changing or fitting attachments.
- DON'T:**  
Use attachments or cutting/rotating blades if they are loose, damaged or broken.

Care and maintenance

- Before attempting any cleaning or maintenance, switch off and unplug the chopper from the mains power supply and allow it to cool fully.
- STEP 1:** Wipe the chopper main unit with a soft, damp cloth and allow to dry thoroughly.
- STEP 2:** Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.
- Never touch the blades; using extreme caution, clean the blades with a brush and dry carefully.

Do not use harsh or abrasive detergents or scourers to clean the chopper, as this could cause damage.  
The chopper is not safe for dishwasher use.



**NOTE:** The chopper should be cleaned after each use.



**WARNING:** Handle the chopping attachment with care as the blades are sharp. Exercise caution when attaching, removing, cleaning or storing any attachments.

Instructions for use

Before first use

Before connecting to the mains power supply, clean the chopper following the instructions in the section entitled 'Care and maintenance'.



**NOTE:** When using the chopper for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the chopper.

Using the chopper

- All attachments must be securely fitted before use; do not attempt to remove them until the blades have stopped moving.
- STEP 1:** Place the chopping bowl onto the chopper main unit, aligning the tabs and rotating the chopping bowl in a clockwise direction until it locks into place.
- STEP 2:** Insert the chopping attachment into the chopping bowl. Carefully twist in a clockwise direction until it is fixed securely in place.
- STEP 3:** Add the food to be chopped to the chopping bowl.
- STEP 4:** Place the lid onto the chopping bowl and secure by aligning the tabs and then twisting it in a clockwise direction until it locks into position.
- STEP 5:** Plug in and switch on the chopper at the mains power supply.
- STEP 6:** Holding the chopping bowl steady, press and hold the on/off button until the food is chopped to the required size. Release the on/off button and wait for the blades to stop rotating before removing the chopping bowl lid.

**STEP 7:** Additional food may be added to the chopped ingredients by removing the chopping bowl lid, adding the ingredients, replacing the lid and repeating the chopping process. Oil and seasoning can be added using the feeding chute.

**STEP 8:** To remove the chopping bowl from the chopper main unit, remove the lid and carefully remove the chopping attachment without touching the blade itself. Twist the chopping bowl in an anticlockwise direction and pull it away from the chopper main unit.



**CAUTION:** Switch off and unplug the chopper from the mains power supply before adding or removing food from the chopping bowl.



**WARNING:** Do not operate the chopper without food, as this can cause damage. Switch off and unplug the chopper from the mains power supply before attempting to remove the chopping attachment and before cleaning. Max. operation time is 1 minute. Allow to cool for approx. 1 minute before using the chopper again.

Storage

Check that the chopper is cool, clean and dry before storing in a cool, dry place.  
Never wrap the cord tightly around the chopper; wrap it loosely to avoid causing damage.