

**SALTER®**

SINCE 1760

**PROFESSIONAL**



# 15 Litre Smart Air Cooler

Take control and refresh your surroundings

Please retain instructions for future reference.

## **Safety Instructions**

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if it has been placed in its intended operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.

This is not a toy – children should be supervised to ensure they do not play with the product.

Always unplug the product and allow to cool fully after use and before any cleaning or maintenance. Nominal voltage is still present in this product as long as the product is connected to the electrical source.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children

Keep the product and its power supply cord away from heat or sharp edges that could cause damage.

Keep hands, fingers, hair and any loose clothing away from the rotating parts of the product.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not leave the product unattended whilst connected to

the mains power supply or when in use.  
Do not remove the product from the mains power supply by pulling the cord; switch it off and remove the plug by hand.  
Do not leave the product plugged in or operating overnight.  
Do not use the product for anything other than its intended use.  
Do not use this product outdoors.  
Do not move the product whilst it is in use.  
Do not shake the product.  
Do not cover the product.  
Do not put objects into any of the openings.  
Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage the product. This includes insecticide and chemical solvents.  
Always use the product on a flat, stable surface.  
Use of an extension cord with the product is not recommended.  
This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.  
This product is intended for domestic use only. It should not be used for commercial purposes.

## **Declaration of Conformity**

UP Global Sourcing UK Ltd. hereby declares that this product is in compliance with the essential requirements and other provisions of directive 2014/53/EU.

The declaration of conformity may be consulted at (UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD, UK, Edmund-Rumpler Straße 5, 51149 Köln, Germany.) or online at <https://salter.com/declaration-letters/> Model No.: EH3678

## **Battery Safety**

Do not short-circuit a cell or battery.  
Check that the battery compartment is secure.  
If the battery compartment does not close securely, stop using the product and keep it away from children.  
Batteries are to be inserted with the correct polarity.  
Remove any batteries from the product when it is not

being used for a long period of time to avoid leakage. In the event of the batteries leaking, do not allow any liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of the reach of children.

Remember to keep button cell batteries away from children at all times as they can easily be swallowed.

If you think batteries have been swallowed or placed inside any part of the body, seek immediate medical attention.

Exhausted batteries must be removed and disposed of safely.

 
Do not crush, puncture, dismantle or otherwise damage batteries.

Do not expose batteries to heat or fire as they may explode.

Do not subject batteries to mechanical shock.

To dispose of any batteries, take them to a local recycling station. Contact the local government offices for details.

This product requires a CR2025 button cell battery (included).

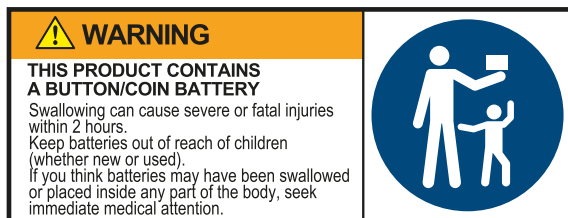

**CAUTION:** Vigilance must be maintained with “flat” or spare button or coin batteries in the home and the products that contain them.

There are no obvious specific symptoms when a button or coin battery is stuck in a child’s oesophagus (food pipe). However, the child might exhibit the following symptoms:

- Excessive coughing, gagging or drooling
- Appear to have a stomach upset or virus
- Vomiting
- Pointing to their throat or stomach
- Pain in their abdomen, chest or throat
- Tiredness and lethargy

- Be quieter or more clingy than usual
- Loss or reduction of appetite
- Refusal or inability to eat solid foods

A specific symptom of button or coin battery ingestion is vomiting fresh (bright red) blood. Seek immediate medical attention if this occurs.

## Care and Maintenance

**STEP 1:** Unplug the air cooler from the mains power supply before attempting any cleaning or user maintenance.

**STEP 2:** The water tank must be drained of water after each use. To do so, carefully pull the rubber stopper over a drain to release the water. Once the water tank has been drained, wipe away any excess water with a soft cloth.

**STEP 3:** To clean the honeycomb filter, remove the securing screw at the back of the air cooler and remove the dust-proof bracket. The honeycomb filter can be pulled away from the air cooler; remove any loose fibres by hand, taking care not to pierce the honeycomb filter. The honeycomb filter can be washed in warm water with a mild detergent and a soft brush; allow to dry thoroughly before use.

**STEP 4:** Wipe the air cooler with a soft, damp cloth and allow to dry thoroughly. Replace the honeycomb filter and dust-proof bracket, reinserting the securing screw.

 
 
**NOTE:** Clean the air cooler and all of its parts regularly to reduce the risk of limescale and bacteria forming.

**CAUTION:** Do not use flammable liquid, abrasive cleaning solvents, polishes or scouring pads to clean the air cooler, as this may cause damage.

Only lift the product with the carry handles provided.

**WARNING:** If a strong odour is emitted from the product, turn the product off and unplug it from the mains power supply. Should the product fall or be pushed over while there is water in the tank, unplug it from the mains power supply immediately. The product should be righted and dried thoroughly before it is used again.

## Description of Parts

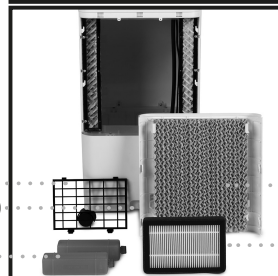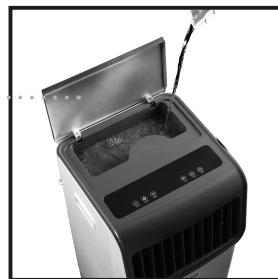

1. 15 L Smart Air Cooler main unit
2. Fan Speed button
3. Swing button
4. Cold button
5. Power button
6. Mode button
7. Timer button
8. Horizontal grill
9. Vertical grill
10. Water level window

11. Drain
12. 360 ° castor wheels
13. Honeycomb filter x 3
14. HEPA Filter
15. HEPA Filter Bracket
16. Water Tank Lid
17. Cable holder
18. Ice packs x 2
19. Carry handles

## Remote Control



20. Power button

21. Fan speed button

22. Swing button

23. Timer button

24. Cold button

25. Mode button

26. Battery compartment

## Instructions for Use

### Filling the Air Cooler

Before filling the air cooler, make sure that it is switched off and unplugged from the mains power supply.

**STEP 1:** Open the lid at the top of the air cooler. Using a suitable measuring vessel, fill the water tank with cold, clean water. The water should be gently poured into

the top of the unit. The water level should be no lower than the min. fill line and no higher than the max. fill line.

**STEP 2:** The two ice packs can be used to achieve quicker, additional cooling; they should not be filled past the max. fill line. Leave to freeze for approx. 8 hours before use. Place them into the top of the unit before adding water to the tank.

**NOTE:** To prolong the life of the HEPA filter, it must be removed prior to filling with water and whilst using the cooling function. Only fit the HEPA filter to purify the air when the cooling function is not in use.

**CAUTION:** Do not fill the air cooler with any liquid other than cold, clean water. Do not use any additives in the water.

### Using the 15 Litre Air Cooler

**STEP 1:** Plug in and switch on the air cooler at the mains power supply.

**STEP 2:** To turn on the air cooler, press 'POWER' once and select the desired cooling speed by pressing 'SPEED' for settings 1, 2 and 3.

**STEP 3:** Activate the swing function by pressing 'SWING'; the vertical grills of the air cooler will begin to turn left and right. To stop the vertical grills from turning, press 'SWING' once more.

**STEP 4:** To regulate the airflow up or down, manually adjust the horizontal grills on the front of the air cooler.

**STEP 5:** Cool and humidify air by pressing 'COLD'. The air cooler will begin to circulate water across the evaporation pad. To stop the function, press 'COLD' once more.

**STEP 6:** To change the wind mode, press 'MODE' and select the desired mode from normal, natural and sleep.

**STEP 7:** To set a timer for the air cooler, select 'TIMER' and select the desired time.

**STEP 8:** To turn off the air cooler, press 'POWER' once.

**NOTE:** The air cooler is not designed to significantly reduce the room temperature; it provides a cool breeze.

When positioning the air cooler, do not lift it by the front panel; move it using the handles and the 360 ° castor wheels.

**WARNING:** Do not use the 'COLD' function when the water tank is empty or if it is filled below the min. fill line.

The air cooler should not run continuously for more than 10–12 hours at any one time.


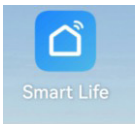 
Check the water level regularly.









Do not attempt to operate the 'COLD' function if there is no water in the tank, as this will cause damage to parts.

## Connecting to the 15 L Air Cooler

  15L Air Cooler Quick Set-Up Steps		
Stage:	Description:	Image:
1	Make sure the product is plugged in, switched on, and the router and mobile device are utilizing the 2.4 GHz network. The air cooler is only compatible with 2.4 GHz bandwidth. Please contact the internet service provider for instructions on splitting the 2.4 GHz and 5 GHz bandwidths.	
2	Leave the product on standby. The product will display a WiFi Signal Symbol in the middle of the screen.	
3	On your mobile device, ensure that the Smart Life App is set-up and ready to connect.	 

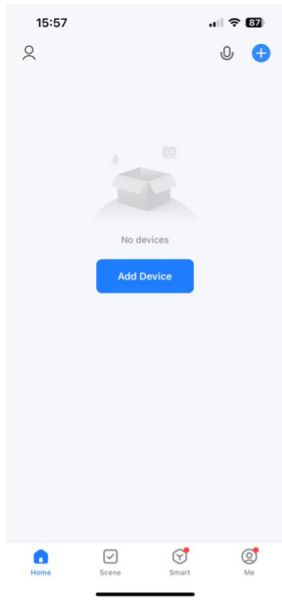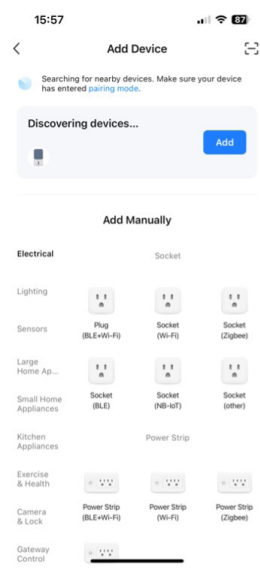4	Open the Smart Life App. Once signed into the app, select 'add device'.	
5	Once 'add device' has been selected, you will be taken to a screen where you should select 'Auto Scan' on the selection pane at the top of the app. A circle should begin to flash to signal the app is looking for a device to pair with.	

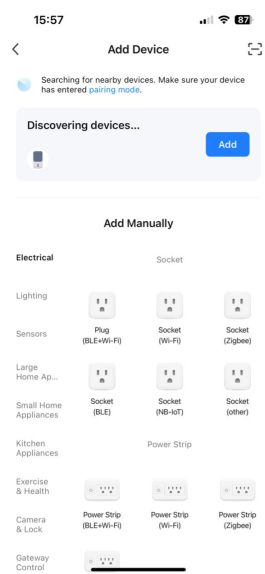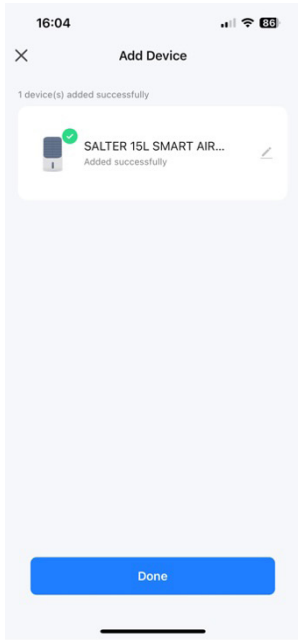  6	The device should then appear with the “add” button next to it.	
7	Select “Add” to pair to the device	
8	You may need to enter your network WiFi password at this point.	
9	The message “added successfully” will appear. Click on the icon of the device to begin controlling the device functions.	

## Storage

Drain the water tank before storing and allow it to dry thoroughly. Always leave the air cooler to cool before storing upright in a cool, dry place. Loosely wrap the cord around the cable holder; do not wrap it tightly, as this could cause damage.

## Troubleshooting

Problem	Possible Cause	Solution
The air cooler will not power on.	The air cooler is not connected to the mains power supply.  The fuse has blown.	Plug in and switch on the air cooler at the mains power supply.  Replace the fuse with one of the same rating.
No air is blowing from the air cooler.	The desired cooling speed has not been selected.	Press the speed buttons and select the desired setting, '3' being the strongest cooling speed.
The air blowing from the air cooler is not strong enough.	The cooling speed is set too low.  The honeycomb filter is blocked.	Select a higher cooling speed by pressing the relevant cooling speed button.  Clean the honeycomb filter or evaporation pad following the instructions in the section entitled 'Care and Maintenance'.
The vertical grills are not turning left and right.	The swing function has not been selected.	Activate the swing function by pressing 'SWING'.
The vertical grills are not facing forward.	The swing function has been stopped when the vertical grills were mid-movement.	Press 'SWING' and let the vertical grills move until they are facing forwards, then press 'SWING' once more to stop the swing function.

<p>The air cooler is not cooling the air.</p>	<p>The cold function has not been selected.</p> <p>The water tank has not been filled with enough water.</p> <p>The ice packs are not <math>\frac{2}{3}</math> full with water.</p> <p>Ambient humidity is high.</p>	<p>To activate the cold function, press 'COLD'.</p> <p>Fill the water tank to the max. fill mark.</p> <p>Fill the ice packs with water so that they are <math>\frac{2}{3}</math> full; allow to freeze for approx. 8 hours before use.</p> <p>The air cooler will not be able to cool due to the high humidity in the air.</p>
---	--	--

## Specifications

Product code: EH3678

Input: 220–240 V ~ 50/60 Hz

Output: 80 W

Water tank capacity: 15 L

Operating Frequency: 2.4 GHz

Max RF Output: <20 dBm

## Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

**Blue Neutral (N)**

**Brown Live (L)**

**Green/Yellow Earth ( $\perp$ )**

**FOR UK USE ONLY** - Plug fitting details  
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

 
The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked  $\perp$ .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

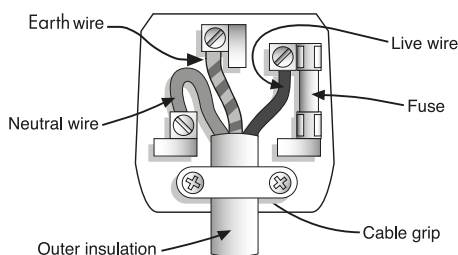

## Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK.  
Edmund-Rumpler Straße 5, 51149 Köln. Germany.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **[www.salter.com](http://www.salter.com)**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

## **Disposal of Waste Batteries and Electrical and Electronic Equipment**



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

To be eligible for the extended guarantee,  
go to **guarantee.upgs.com/salter** and register  
your product within 30 days of purchase.

Find us on 

[www.facebook.com/SalterUK](http://www.facebook.com/SalterUK)

**SALTER<sup>®</sup>**  
SINCE 1760  
**PROFESSIONAL**

Manufactured by:

UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**

Made in China.

©Salter trademark. All rights reserved.

