

SALTER®
SINCE 1760
PROFESSIONAL



Thermo Dome
Air circulation for the entire room.

Please retain instructions for future reference.

WARNING – READ BEFORE USE

When using the product for the first time, a slight odour and a small amount of smoke may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the product.

Before each use, check the product for damage. If there is any sign of damage or if the fan blades are not rotating, cease using immediately and dispose of the product.

Do not leave the product unattended while in use.

This product should be used for no longer than 4 hours at any time on the heating setting. Once used you must ensure that it has fully cooled down before its next use.

The product must be used on a stable, heat-resistant surface.

Ensure that the product has at least 1 m of free space in all directions before use; make sure that any flammable materials such as furniture are at least 1 m away from the product when in use.

Do not use heating appliances with an extension cable.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the power supply before connecting the product.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if it has been placed in its intended operating position

and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.

This product is not a toy.

It is imperative to unplug the product and allow it to fully cool after use and before any cleaning or maintenance. Nominal voltage is still present in this product as long as the product is connect to the electrical source.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children and away from heat or sharp edges that could cause damage. This includes any parts of the product that may become hot during use and other heat emitting products.

Keep furniture, curtains and other flammable material at least 1 metre away from the product.

Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not use this product in the immediate surroundings of a bath, a shower or swimming pool.

Do not leave the product unattended whilst connected to the power supply or when in use.

Do not remove the product from the power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use this product for extended periods of time.

Do not leave the product plugged in or operating overnight.

Do not use the product for anything other than its intended use.

Do not block the air intake of the product; place in an open, well-ventilated space.

Do not use the product outdoors.

Do not move the product whilst it is in use.

Do not put objects into any of the openings.

Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically, other than that supplied with the product, as there is a risk of fire if the heater is covered or positioned incorrectly.

Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage the product and impair future function. This includes insecticide and chemical solvents.

Only lift the product with the carry handles provided.

The product should be used on a stable, heat-resistant surface.

Do not use on carpets, rugs or other flammable floor-based textiles.

Do not place near or under flammable materials, such as curtains, shelves, loose wallpaper, furniture or combustible materials.

The product must not be located immediately below or next to a mains power supply.

Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the product.

Use of an extension cord with the product is not recommended.

This product is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present. Hot surface – do not touch the hot section or heating components of the product.

WARNING: In order to avoid overheating, do not cover the product.

Do not use this product in small rooms whilst occupied by persons incapable of leaving the room on their own, unless constant supervision is provided.

Battery Safety

Do not short-circuit a cell or battery.

Check that the battery compartment is secure.

If the battery compartment does not close securely, stop using the product and keep it away from children.

Batteries are to be inserted with the correct polarity.

Remove any batteries from the product when it is not being used for a long period of time to avoid leakage.

In the event of the batteries leaking, do not allow any liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Exhausted batteries must be removed and disposed of safely.

Do not crush, puncture, dismantle or otherwise damage batteries.



Do not expose batteries to heat or fire as they may explode.

Do not subject batteries to mechanical shock.

To dispose of any batteries, take them to a local recycling station. Contact the local government offices for details.

This product requires a 1 x CR2025 button cell battery (included).

Battery Safety Warning

<p> WARNING</p> <p>THIS PRODUCT CONTAINS A BUTTON/COIN BATTERY</p> <p>Swallowing can cause severe or fatal injuries within 2 hours. Keep batteries out of reach of children (whether new or used). If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention.</p>	
---	---

CAUTION: Vigilance must be maintained with “flat” or spare button or coin batteries in the home and the products that contain them.

There are no obvious specific symptoms when a button or coin battery is stuck in a child’s oesophagus (food pipe). However, the child might exhibit the following symptoms:

- Excessive coughing, gagging or drooling
- Appear to have a stomach upset or virus
- Vomiting
- Pointing to their throat or stomach
- Pain in their abdomen, chest or throat
- Tiredness and lethargy
- Be quieter or more clingy than usual
- Loss or reduction of appetite
- Refusal or inability to eat solid foods

A specific symptom of button or coin battery ingestion is vomiting fresh (bright red) blood. Seek immediate medical attention if this occurs.

Thermal Cut-out Device

The Thermo Dome is fitted with a thermal safety cut-out device, built in to prevent it from overheating. Should the Thermo Dome start to overheat, the thermal safety cut-out system will automatically operate and the heat settings will switch off. If this happens:

STEP 1: Switch off the Thermo Dome by pushing the power button.

STEP 2: Unplug the Thermo Dome from the mains power supply and allow it to cool for approx. 15 minutes.

STEP 3: Clear any blockages present in the grills, being careful not to cause damage.

STEP 4: Plug in and switch on the Thermo Dome at the mains power supply; the Thermo Dome can now be used again.

CAUTION: In order to avoid a hazard due to inadvertently tripping the thermal cut-out, the Thermo Dome must not be supplied through an external switching device, such as a timer. Nor should it be connected to a circuit this is regularly switched on and off by the utility.

Care and Maintenance

STEP 1: Unplug the Thermo Dome from the power supply before attempting any cleaning or user maintenance.

STEP 2: Wipe the Thermo Dome with a soft, damp, lint-free cloth and allow to dry thoroughly.

Do not use flammable liquid, abrasive cleaning solvents, polishes or scouring pads to clean the Thermo Dome, as this may cause damage.

Do not immerse the air circulator in water or any other liquid.

Description of Parts



1. Thermo Dome main unit
2. Front grill
3. Rear Grill
4. Aroma box
5. 3 x aroma diffuser pads
6. Control panel
7. Control panel indicator lights
8. Power button

9. Humidify button
10. Indicators button
11. Cooling speed button
12. Heating button
13. Oscillation button
14. Humidification tank
15. Humidification tank cap

Remote Control



- | | |
|-----------------------|---------------------------|
| 1. Power button | 4. Humidify button |
| 2. Oscillation button | 5. Cooling speed button |
| 3. Heating button | 6. Indicator Light button |

Before First Use

Position the Thermo Dome on a flat, stable, heat-resistant surface in an open space. Make sure the Thermo Dome is at least 1 metre away from furniture, curtains, or any other flammable materials. Do not block the air intake on the back of the Thermo Dome.

NOTE: When using the Thermo Dome for the first time, a slight odour may be emitted. This is normal and will soon subside.

Allow for sufficient ventilation around the Thermo Dome. Do not force the head to move, as this will break the oscillation feature.

To carry the Thermo Dome, turn it off and unplug it from the mains power supply. Carry the power cord in one hand and the Thermo Dome main unit in the other, this will reduce the chance of tripping during transport.

Using the Thermo Dome

STEP 1: Plug in and switch on the Thermo Dome at the mains power supply. Press the power button to turn the unit on.

STEP 2: The desired cooling speed can be selected by pressing the cooling speed button on the main unit or using the remote control. There are three speed settings available, 1 through 3. The selected level is indicated by the control panel indicator lights.

STEP 3: To turn all of the indicator lights off, press the indicators button on the remote control. To turn off the indicator lights using the control panel, press and hold the indicators button for 3 seconds.

STEP 4: To turn on the heat function, push the heating button on the main unit or using the remote control. Press once for heat function 1 or twice for the more powerful heat function 2. To deselect the heat function, push the heating button again until the heating control panel indicator lights are no longer visible.

STEP 5: To turn on the oscillation function, push the oscillation button on the main unit or using the remote control; the oscillation control panel indicator light will illuminate. The unit will slowly oscillate from left to right. To adjust the angle of the Thermo Dome, gently tilt the Thermo Dome main unit backwards or forwards until the desired angle is reached.

STEP 6: To use the aroma feature, twist the aroma box in an anticlockwise direction. This will cause the aroma box to detach from the main unit. The absorbent material is designed to soak up essential oils and slowly release the scent through normal use of the unit.

STEP 7: Turn off the Thermo Dome by pressing the power button

Using the Humidify Function

STEP 1: To fill the humidification tank with clean water, pull it out from the front of the Thermo Dome main unit. Gently lift the humidification tank cap and fill with water. Once full, replace the cap and slide the humidification tank back into place so that it is flush with the air circulator.

STEP 2: To turn on the humidify function, press the humidify button on the main unit or using the remote control. Both humidify control panel indicator light will illuminate. To turn the humidify function off, press the humidify button a second time. Only the first humidify control panel indicator light will illuminate.

NOTE: The Thermo Dome may continue to operate for up to 30 seconds after being switched off. This is to allow the fan blades time to cool the heating element post-use. The humidification tank must be filled prior to the humidification function being used to avoid damaging the Thermo Dome.

Storage

Check that the Thermo Dome is switched off and cool before storing in a cool, dry place.

Specifications

Product code: EH3673GRARFOB

Voltage: 220-240 V ~ 50/60 Hz

Output: 900 W/1800 W

ERP Table

Item	Symbol	Value	Unit	Item	Unit
Heat Output				Type of heat input for electric storage local space heaters only.	
Nominal heat output	P_{nom}	1.8	kW	Manual heat charge control, with integrated thermostat.	N/A
Nominal heat output (indicative)	P_{min}	0.9	kW	Manual heat charge control with room and/or outdoor temperature feedback.	N/A
Maximum continuous heat output	$P_{max,c}$	1.8	kW	Electronic heat charge control with room and/or outdoor temperature feedback.	N/A
Auxiliary electricity consumption				Fan assisted heat output.	N/A
At nominal heat output	el_{max}	N/A	kW	Type of heat output/room temperature control.	
At minimum heat output	el_{min}	N/A	kW	Single stage heat output an no room temperature control.	No
In standby mode	el_{sb}	0.0006	kW	Two or more manual stages, no room temperature control.	No
				With mechanical thermostat room temperature control.	Yes
				With electronic room temperature.	No
				Electronic room temperature control plus day timer.	No
				Electronic room temperature control plus week timer.	No
				Other control options	
				Room temperature control, with presence detection.	No
				Room temperature control, with open window detection.	No
				With distance control option.	No
				With adaptive start control.	No
				With working time limitation.	No
				With black bulb sensor.	No

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.


The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked \perp .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

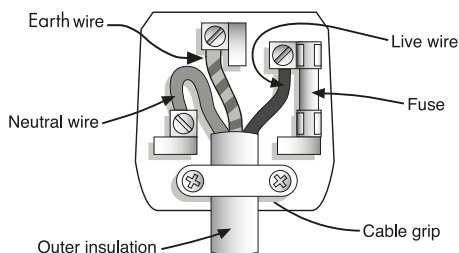

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Edmund-Rumpler Straße 5, 51149 Köln. Germany.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.salter.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

To be eligible for the extended guarantee,
go to **www.salter.com** and register your
product within 30 days of purchase.

Find us on 

www.facebook.com/SalterUK

SALTER®
SINCE 1760
PROFESSIONAL

Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**

Made in China.

©Salter trademark. All rights reserved.

