

SALTER®

SINCE 1760

1.8 Litre Salad Spinner

Instruction Manual

Please retain instructions for future reference.

Before First Use

Hand-wash thoroughly.

Using the 1.8 Litre Salad Spinner

STEP 1: Remove the lid by opening the locking clips and lifting it away from the bowl.

STEP 2: Add freshly washed salad ingredients into the drier basket within the bowl. For best results, it is recommended to only fill the bowl by $\frac{1}{4}$.

STEP 3: Replace the lid and secure it into position by closing the locking clips.

STEP 4: Place the salad spinner onto a flat, stable surface. Holding the salad spinner securely, quickly rotate the spinner handle so that the drier basket begins to spin. Carefully pour out any excess water through the opening in the lid.

STEP 5: Repeat until all of the salad ingredients are dry.

STEP 6: To add salad dressing, pour the dressing through the opening in the lid. Gently rotate the spinner handle to mix the dressing into the salad.

Cleaning the 1.8 Litre Salad Spinner

This salad spinner is not dishwasher safe.

Remove the drier basket before cleaning.

Hand-wash all components in warm, soapy water using a mild detergent and soft cloth. Rinse and dry thoroughly.

Do not use harsh or abrasive cleaners or scourers.

WARNING: Suitable for salad ingredients only, i.e. lettuce, tomato, cucumber. Not suitable for large, heavy food items.



Distributed by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

Made in China.

©Salter trademark. All rights reserved.

CD150922/MD000000/V1